Installation Instructions


ROLLER CATCH

FOR USE ON CABINET, WARDROBE AND SMALL INTERIOR DOORS. PROVIDES AUTOMATIC, POSITIVE LATCHING.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/16" drill bit for pilot holes, 13/16" spade bit for mortising, chisel, hammer, Phillips screwdriver and pencil.

1. Drill 13/16" dia. hole 1-3/4" deep (A) in center of edge of door approximately 39" from bottom of door.
2. Insert catch in hole — mark and outline outside shape of plate. Remove catch — drill and mortise plate area 1/16" deep and secure.
3. Position and mark strike on door jamb or inside of cabinet to align with roller catch (curved surface facing out).
4. Mortise area 5/8" × 1-1/4" by 1/4" deep to accommodate inverted catch section of strike (B). Mortise shape of strike plate to 1/16" deep. Drill pilot holes with 1/16" drill bit and secure.

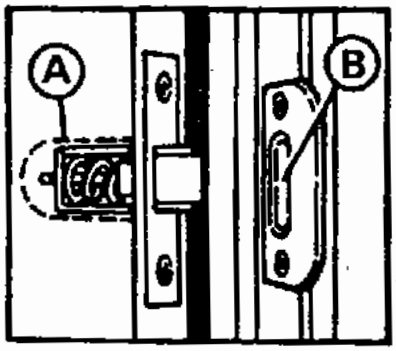

MAINTENANCE INSTRUCTIONS

H.B Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



WINDOW LOCKS



DOOR STOPS



COAT & HAT HOOKS



DOOR BOLTS



© Allegion 2015
Printed in U.S.A.
C333B3 Rev. 05/15-b