335 - ROLLER CATCH

IVES

IVES® hardware has provided style and durability for American homes since 1876. Our commitment to quality makes IVES a name you can trust.


ROLLER CATCH

FOR USE ON CABINET, WARDROBE AND SMALL INTERIOR DOORS. PROVIDES AUTOMATIC, POSITIVE LATCHING WITH ADJUSTABLE SPRING COMPRESSION.


INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/16" drill bit for pilot holes, 13/16" spade bit for mortising, chisel, hammer, Phillips screwdriver and pencil.

1. Drill 13/16" dia. hole 1-3/4" deep (A) in center of edge of door approximately 39" from bottom of door.
2. Insert catch in hole – mark and outline outside shape of plate. Remove catch – drill and mortise plate area 1/16" deep and secure.
3. Position and mark strike on door jamb or inside of cabinet to align with roller catch (curved surface facing out).
4. Mortise area 5/8" x 1-1/4" by 1/4" deep to accommodate inverted catch section of strike (B). Mortise shape of strike plate to 1/16" deep. Drill pilot holes with 1/16" drill bit and secure.

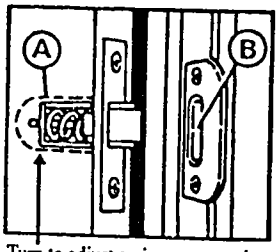

Turn to adjust spring compression.


CABINET PULLS


CABINET KNOBS


FLUSH PULLS


BALL CATCH



C335F3 ROLLER CATCH

MADE IN U.S.A.

© H.B. IVES, NEW HAVEN, CT 06508