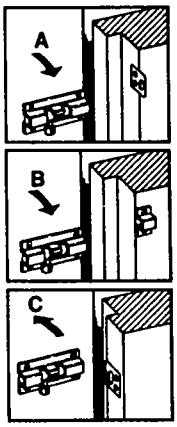
IVES

The ARTISAN Collection™

Congratulations! You have selected a beautiful, finely crafted, solid brass product that will enhance the beauty of your home for years to come. Since 1876, H.B. Ives quality hardware has helped build the most distinguished homes in America.

SECURITY BOLT

FOR USE ON INTERIOR AND EXTERIOR DOORS FOR ADDED SECURITY.



INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 5/16" and 1/16" drill bits, chisel, hammer and Phillips screwdriver.

1. Position bolt flush with edge of door approximately 48" from bottom of door, and mark. For angle strike installation (C), position bolt approx. 1/16" between bolt and door jamb.
2. Mark, drill (with 1/16" drill bit) and secure bolt.

For rim strike application (A) — Align with bolt, mark shape of strike and mortise to 1/16" in depth and secure.

For surface strike application (B) — Align with bolt, mark, drill and secure.


For angle strike application (C) — Align with bolt, mark shape of strike and mortise to 1/16" deep in stop strip. Mark 3 hole centers. Drill bolt hole 5/16" dia. × 7/16" deep and secure.

MAINTENANCE INSTRUCTIONS


H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES


WINDOW LOCKS


DOOR STOPS


COAT & HAT HOOKS


DOOR BOLTS

0 44074 00034 4

~~SECURITY-BOLT~~ C87 B3 ~~BRT~~

MADE IN U.S.A.