
D261M / 261MF (UL) / D271

FALCON


Q513-080

D261M/MF Thumbturn Deadbolt with Blank Cover / D271 Thumbturn Deadbolt with Vacancy Indicator
Cerrojo de Pasador con Cubierta Llana / Cerrojo de Pasador con Cilindro de Indicador
Pêne Dormant avec Couverture Plaine / Pêne Dormant avec Cylindre d'Indicateur

Installation Instructions
Instrucciones de instalación
Notice d'installation

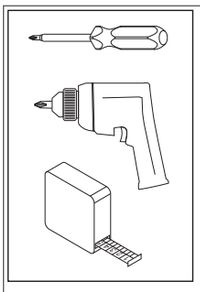

*For UL Application Only (D261MF)
*Para UL aplicación solamente (D261MF)
*Pour UL application seulement (D261MF)

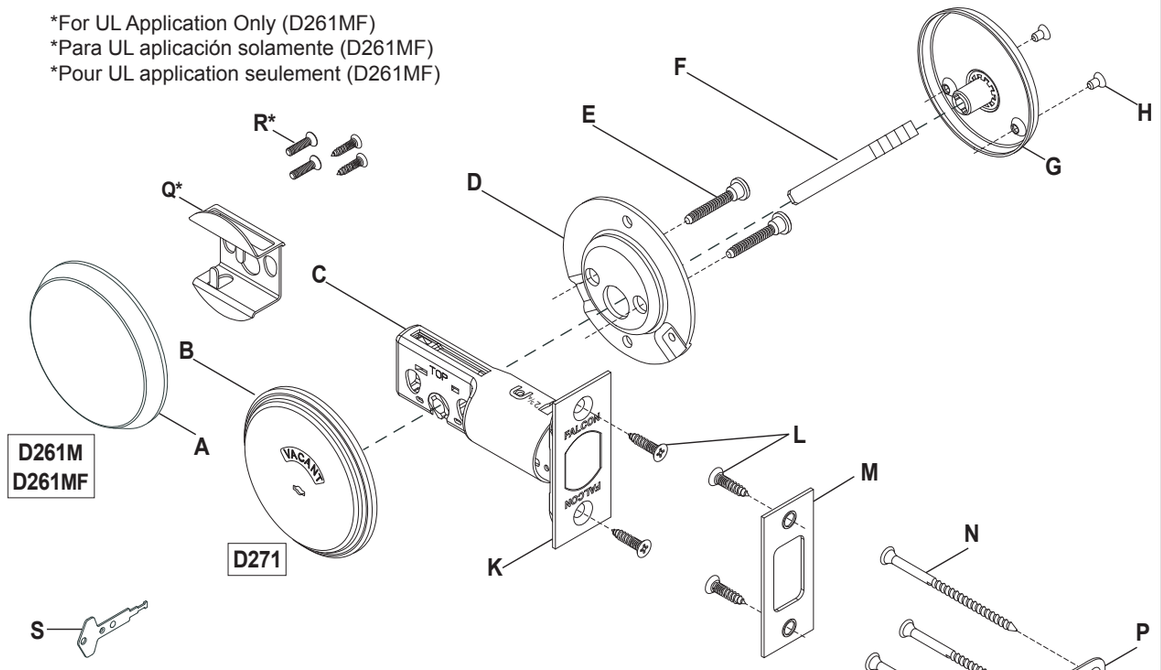


D271 Emergency Key (sold separately)
D271 Llave para la emergencia (vendido por separado)
D271 Clef pour l'urgence (vendu séparément)


Customer Service	Servicio al cliente	Service à la clientèle
1-877-671-7011	www.allegion.com	

Required for Best Anti-Kick Security
Se require para las mas seguridad de contra-golpea
Requis pour le plus sécurité de contre-coup de pied

1

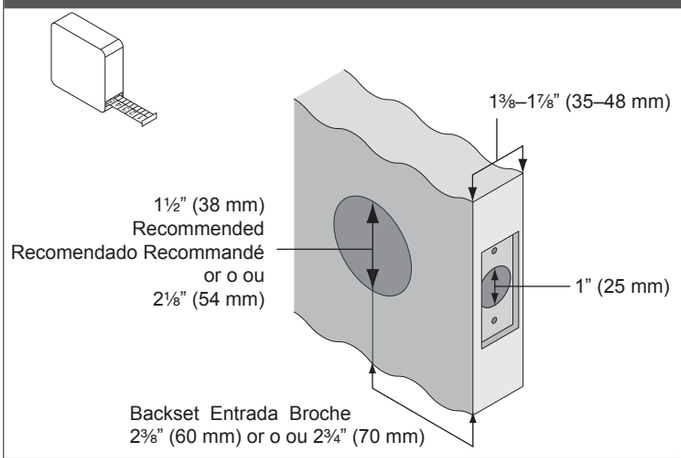

2

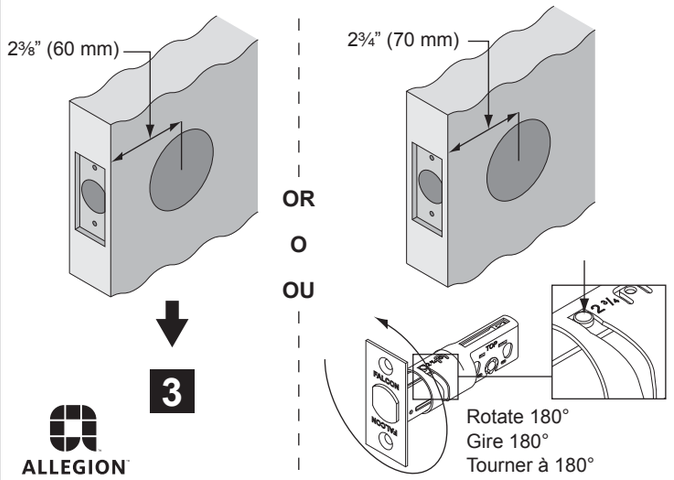


→ 3

3 Choose Faceplate (K) to Match Door

Escoja la placa delantera (K) para emparejar la puerta

Choisir la têtière (K) pour égaler la porte

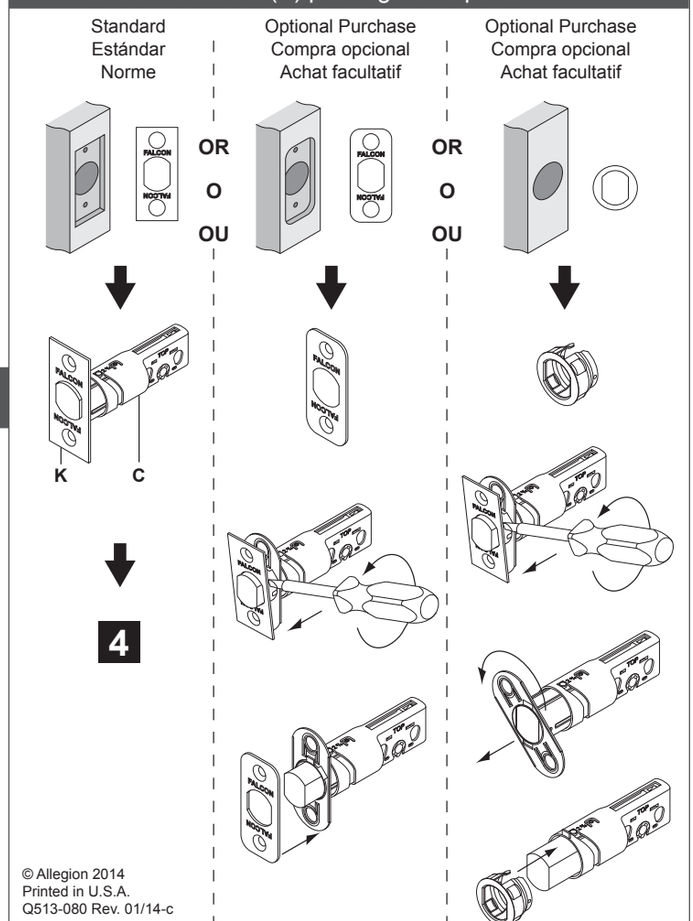

→ 4


© Allegion 2014
Printed in U.S.A.
Q513-080 Rev. 01/14-c

ALLEGION


4 D261MF: 2⅛” Hole Only: Insert UL Fire Cup (Q) Before Deadbolt

Agujero de 54 mm: inserte la taza de UL (Q) antes del pasador


Trou de 54 mm: insérer le tasse d’UL (Q) avant le pêne dormant

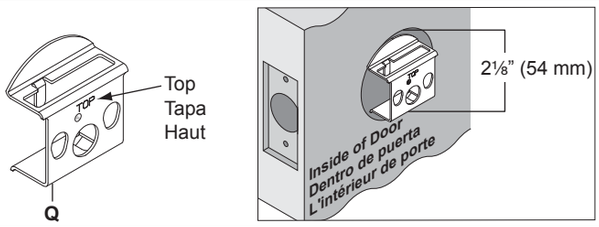


5

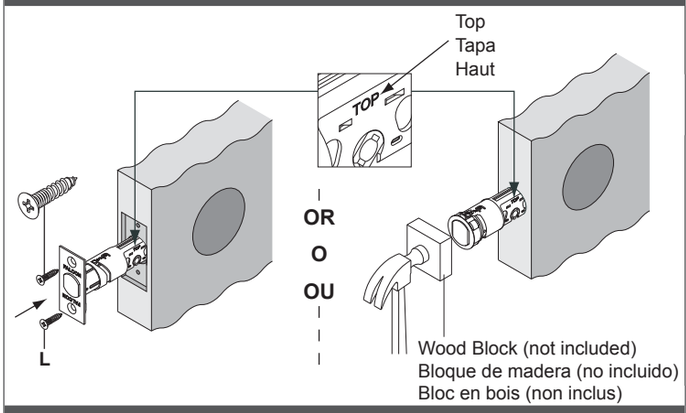

6

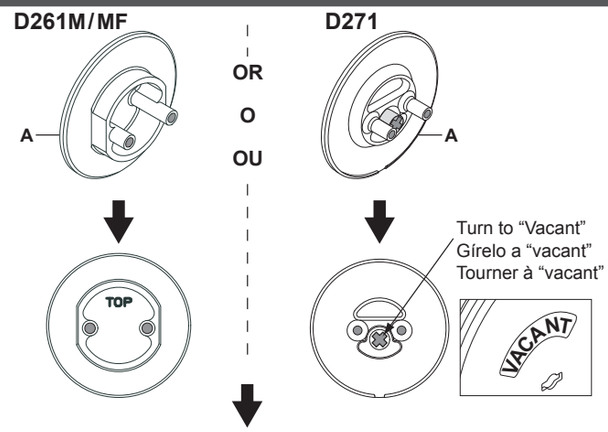

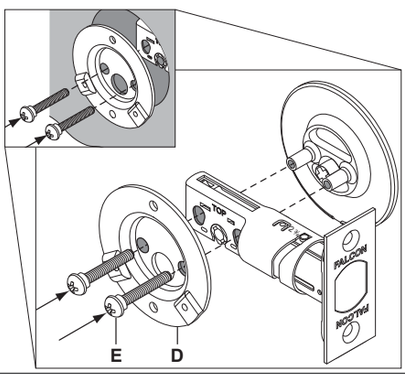

D271: Indicator Must Be Centered in Door Hole

D271: Indicador se debe centrar en agujero de puerta

D271: Indicateur doit être centré dans le trou d’porte

7 D261MF: 1½” (38 mm) Hole Only


Note: Screws (R) are required for UL/CUL Application

D261MF: Agujero de 38 mm solamente

Nota: Los tornillos (R) son requerido para la aplicación de UL/CUL

D261MF: Trou de 38 mm seulement


Note: Les vis (R) sont requis pour le application d’UL/CUL

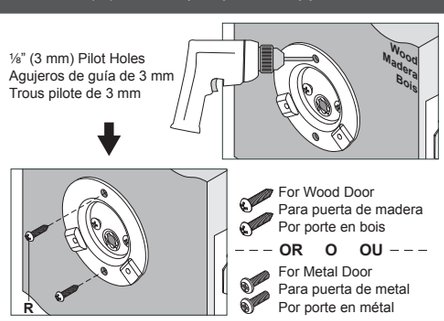


8 Determine Driver Bar (F) Length

Determine el tamaño de la barra impulsora (F)

Determiner la longeur de la barre de transmission (F)

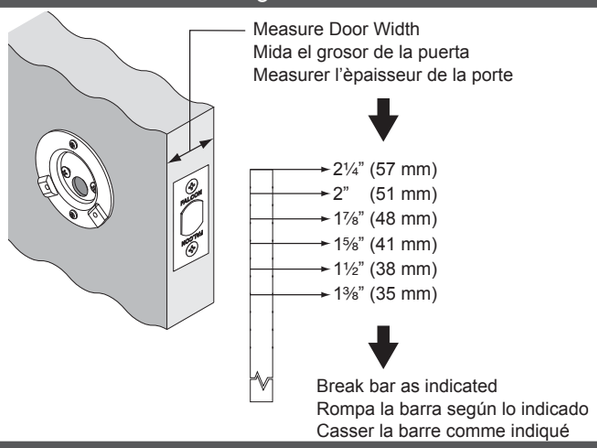

9

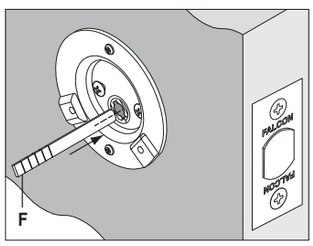


D271: Ensure that “Vacant” is centered in its window before inserting driver bar

D271: Asegure que “Vacant” está centrada en su ventana antes de inserter la barra

D271: Assurer que “Vacant” est centré dans sa fenêtre avant d’inserer le barre


10

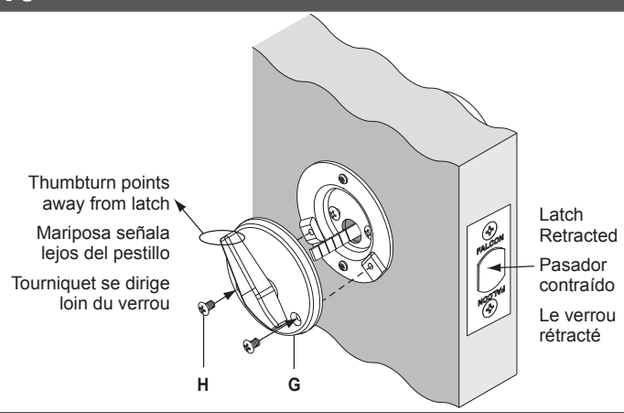


11 For Strike Side of Door


Para el lado de placa hembra de la puerta

Pour la côté de gâche de la porte

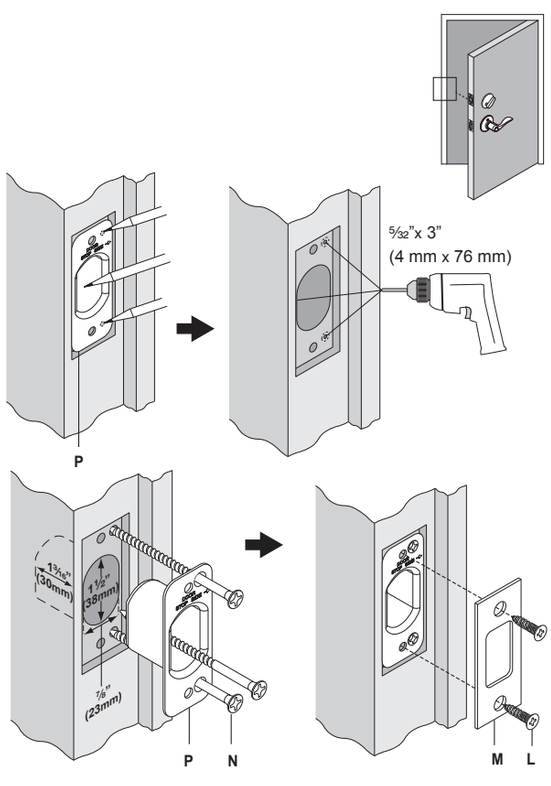

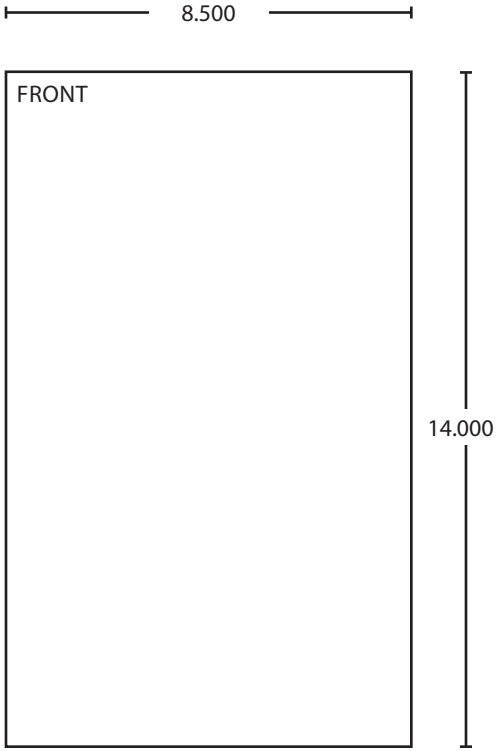

BEGINNING SHEET

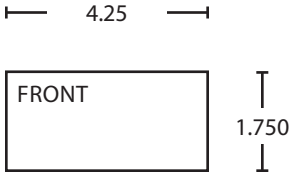

FOLDED SHEET

Additional Notes:
1. None

Revision History					
A	B	C	D	E	F
6017	6182				

Material
White Paper

Notes
1. printed two sides
2. printed black
3. tolerance ± .13
4. printed in country may vary
5. drawings not to scale

Revision Description:
C > Revised artwork

Edited By	Approved By	EC Number	Release Date
D. Spence	M. Sasso	042447	01-01-14

Title
Sheet, Instruction D261M-271

Creation Date	Number	Revision
11-06-13	Q513-080	C

Created By
D. Spence

Software: InDesign CS6

Activity
3899 Hancock Expwy
Security, CO 80911

© Allegion 2014