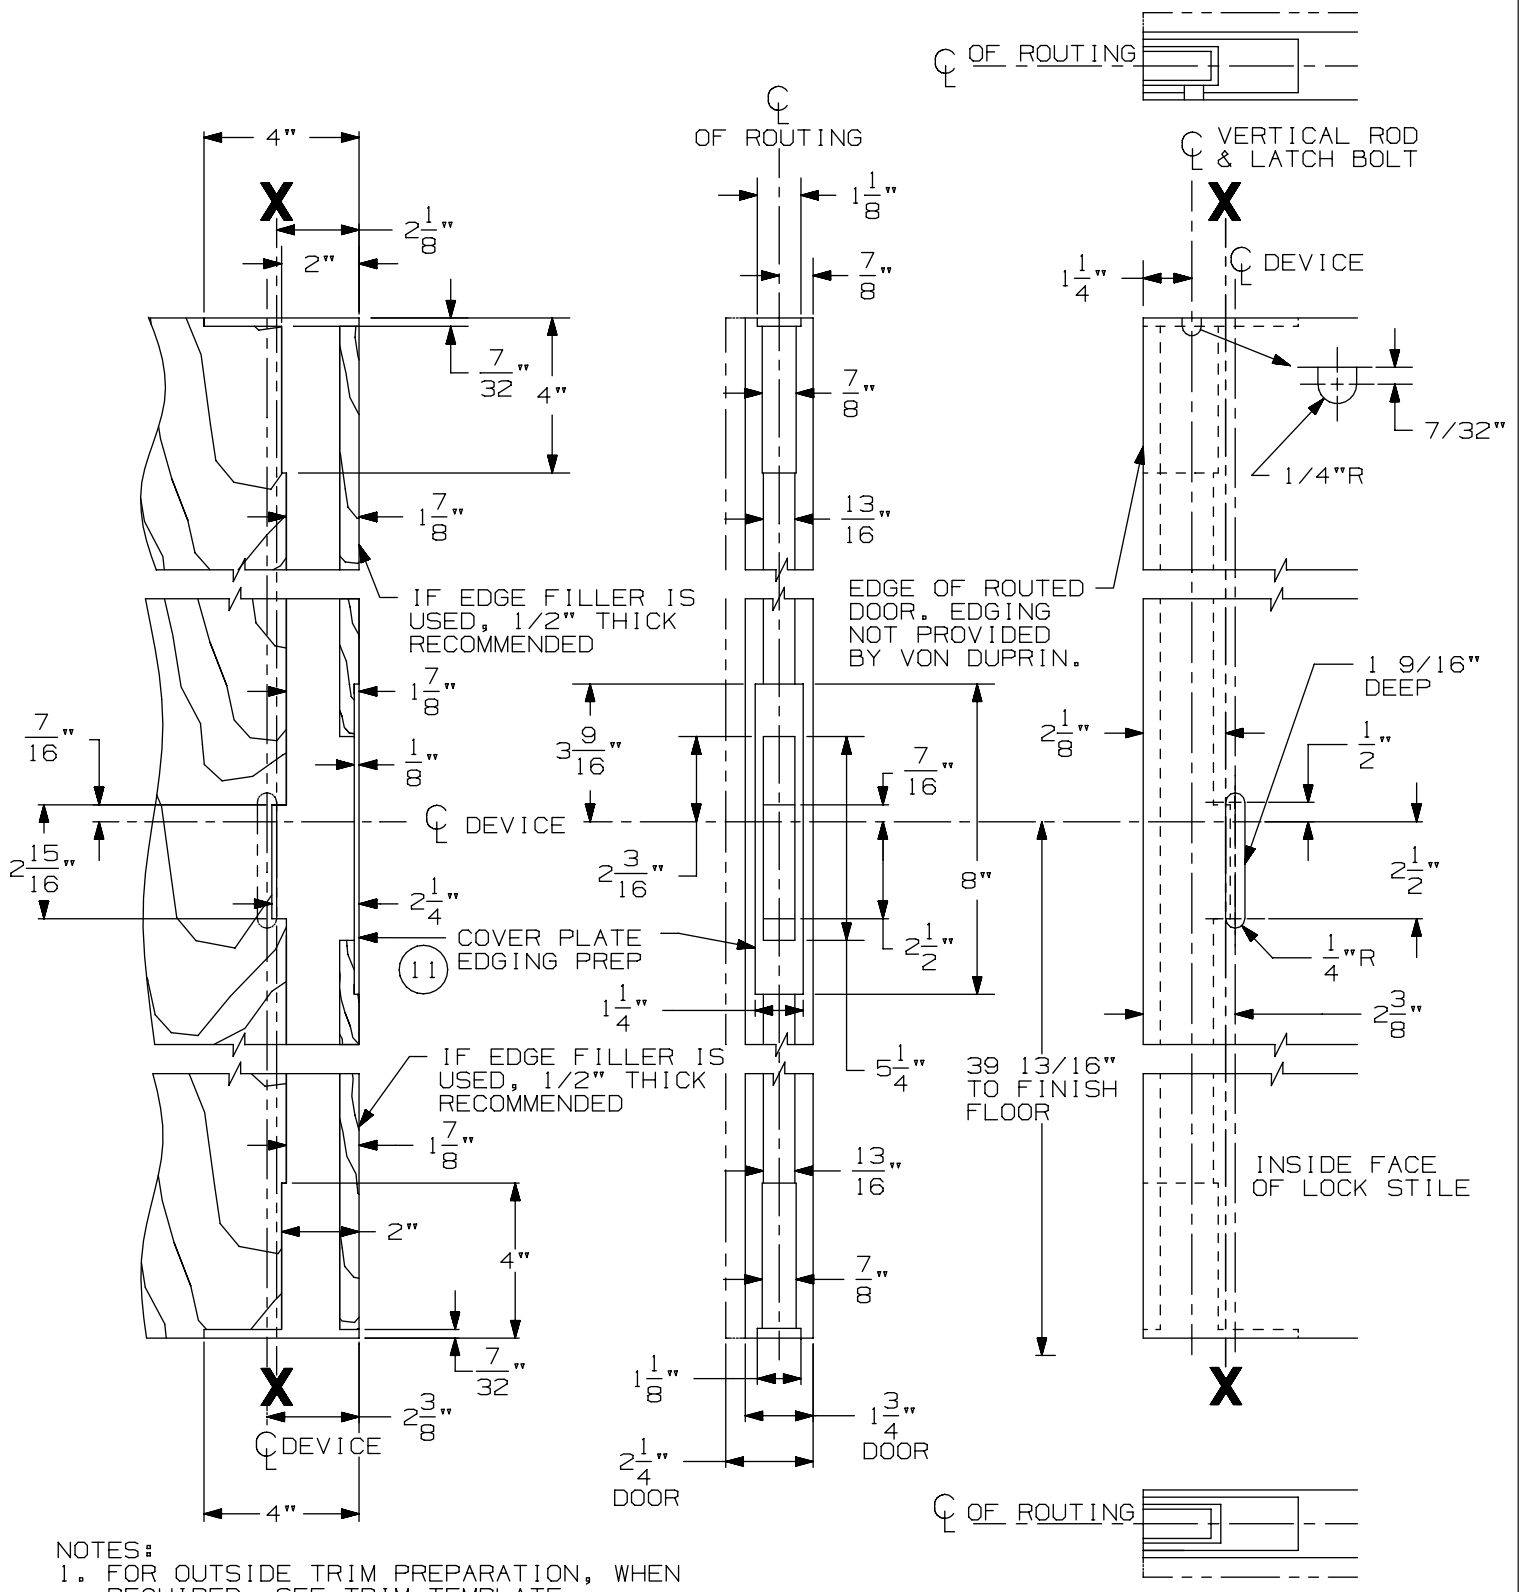


NOTES:
1. FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED, SEE TRIM TEMPLATE
2. MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.
3. SEE TEMPLATE #30038 IN HOLLOW METAL TEMPLATE BOOK FOR 338 STRIKE.
(11) 4. DOOR EDGING SHOULD BE INSTALLED AFTER DEVICE INSTALLATION.

LHR APPLICATION SHOWN,
RHR APPLICATION OPPOSITE

5547WDC & 5547WDC-F Series
Vertical Rod Devices (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER: W10080_a

DATE: 05-29-13