
210NL Trim (Wood Door)

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

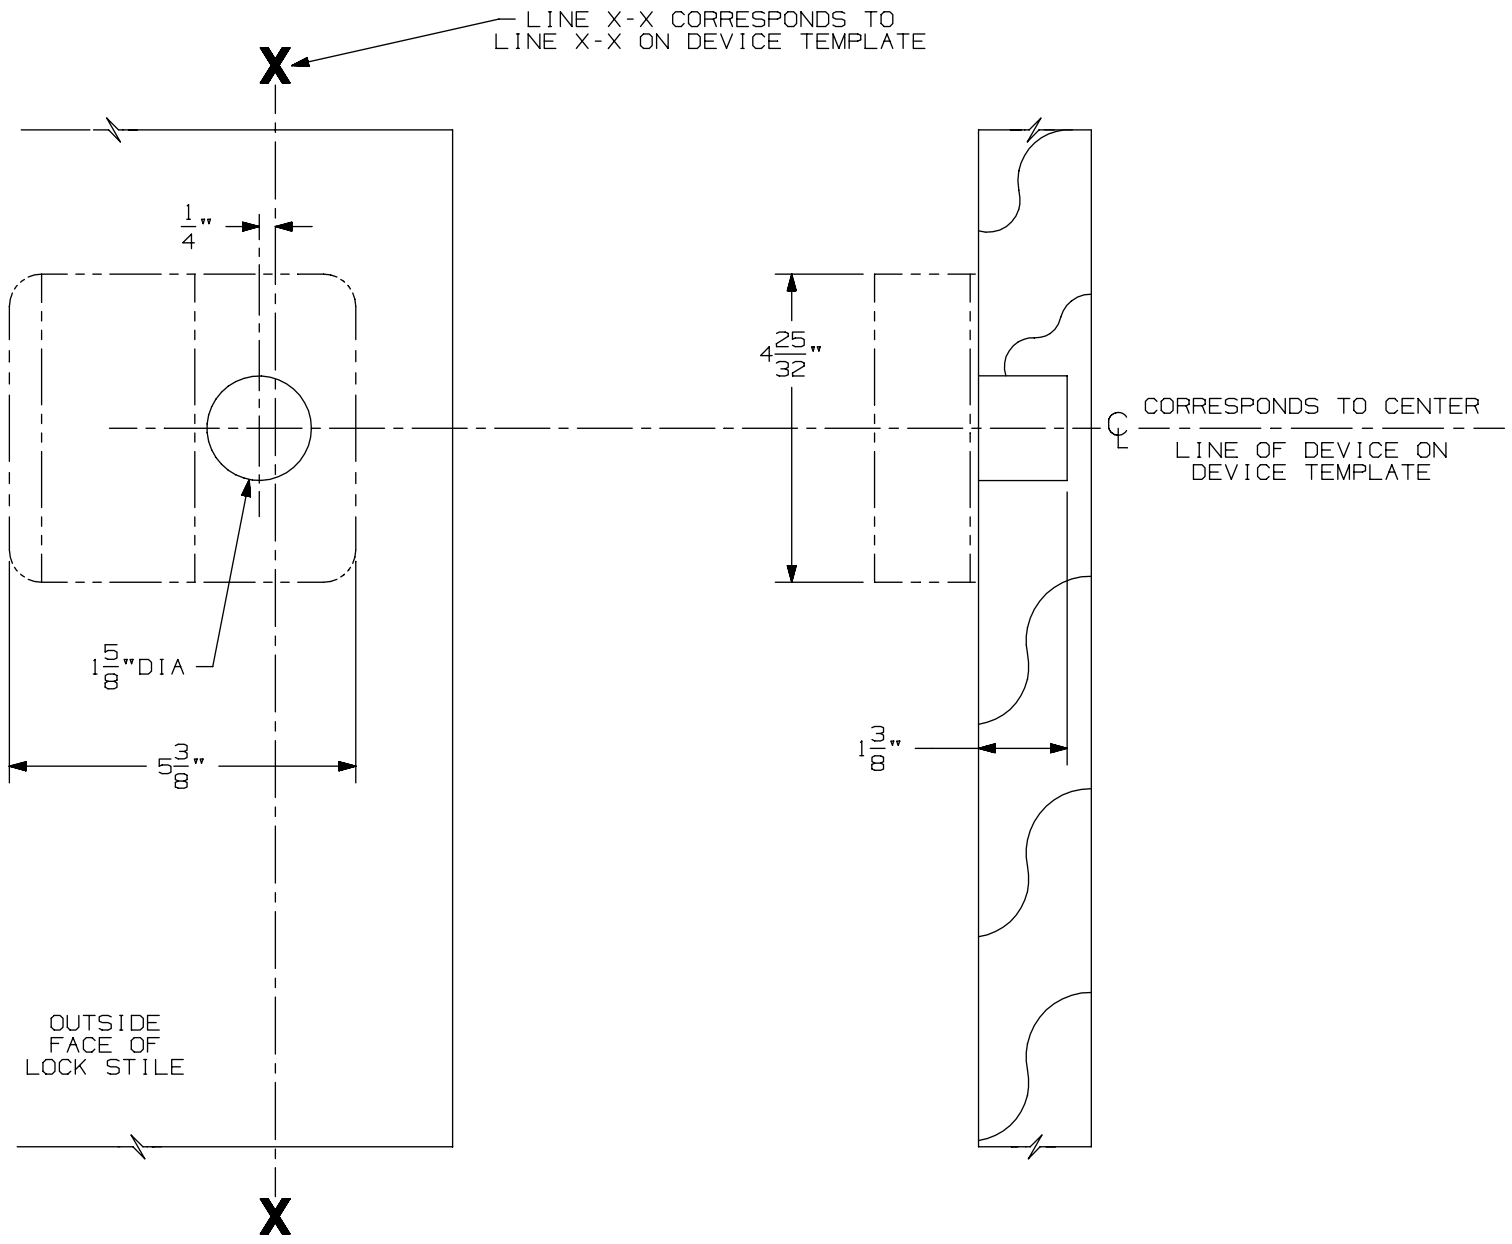

LHR SHOWN
RHR OPPOSITE

NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

FOR CUTOUTS ON INSIDE FACE OF DOOR SEE DEVICE TEMPLATE.

VON DUPRIN®

TEMPLATE NUMBER: W20016_a

DATE: 05-29-13