
696NL & 697NL Trim
(Wood Door)

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

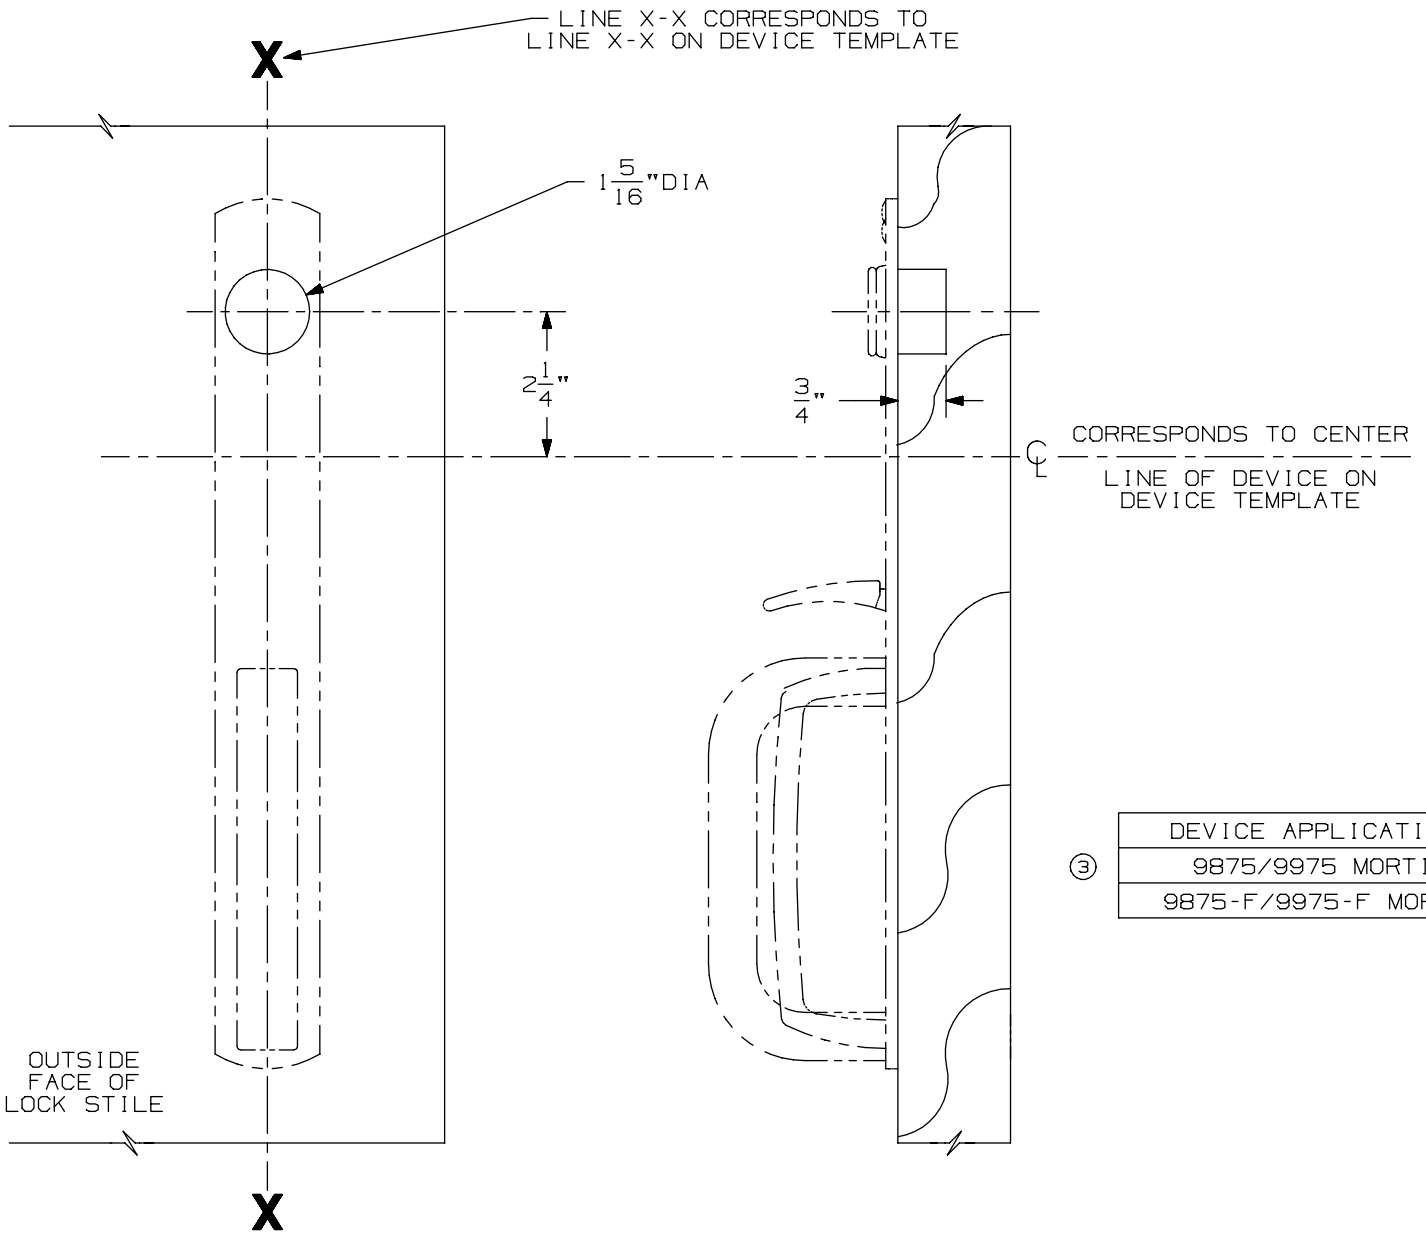

LHR SHOWN
RHR OPPOSITE

DEVICE APPLICATION SCHEDULE
③ 9875/9975 MORTISE DEVICE
9875-F/9975-F MORTISE DEVICE

NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

FOR CUTOUTS ON INSIDE FACE OF DOOR SEE DEVICE TEMPLATE.

VON DUPRIN®

TEMPLATE NUMBER: W20104_a

DATE: 05-29-13