
880TP & TP-BE Trim (Wood Door)

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

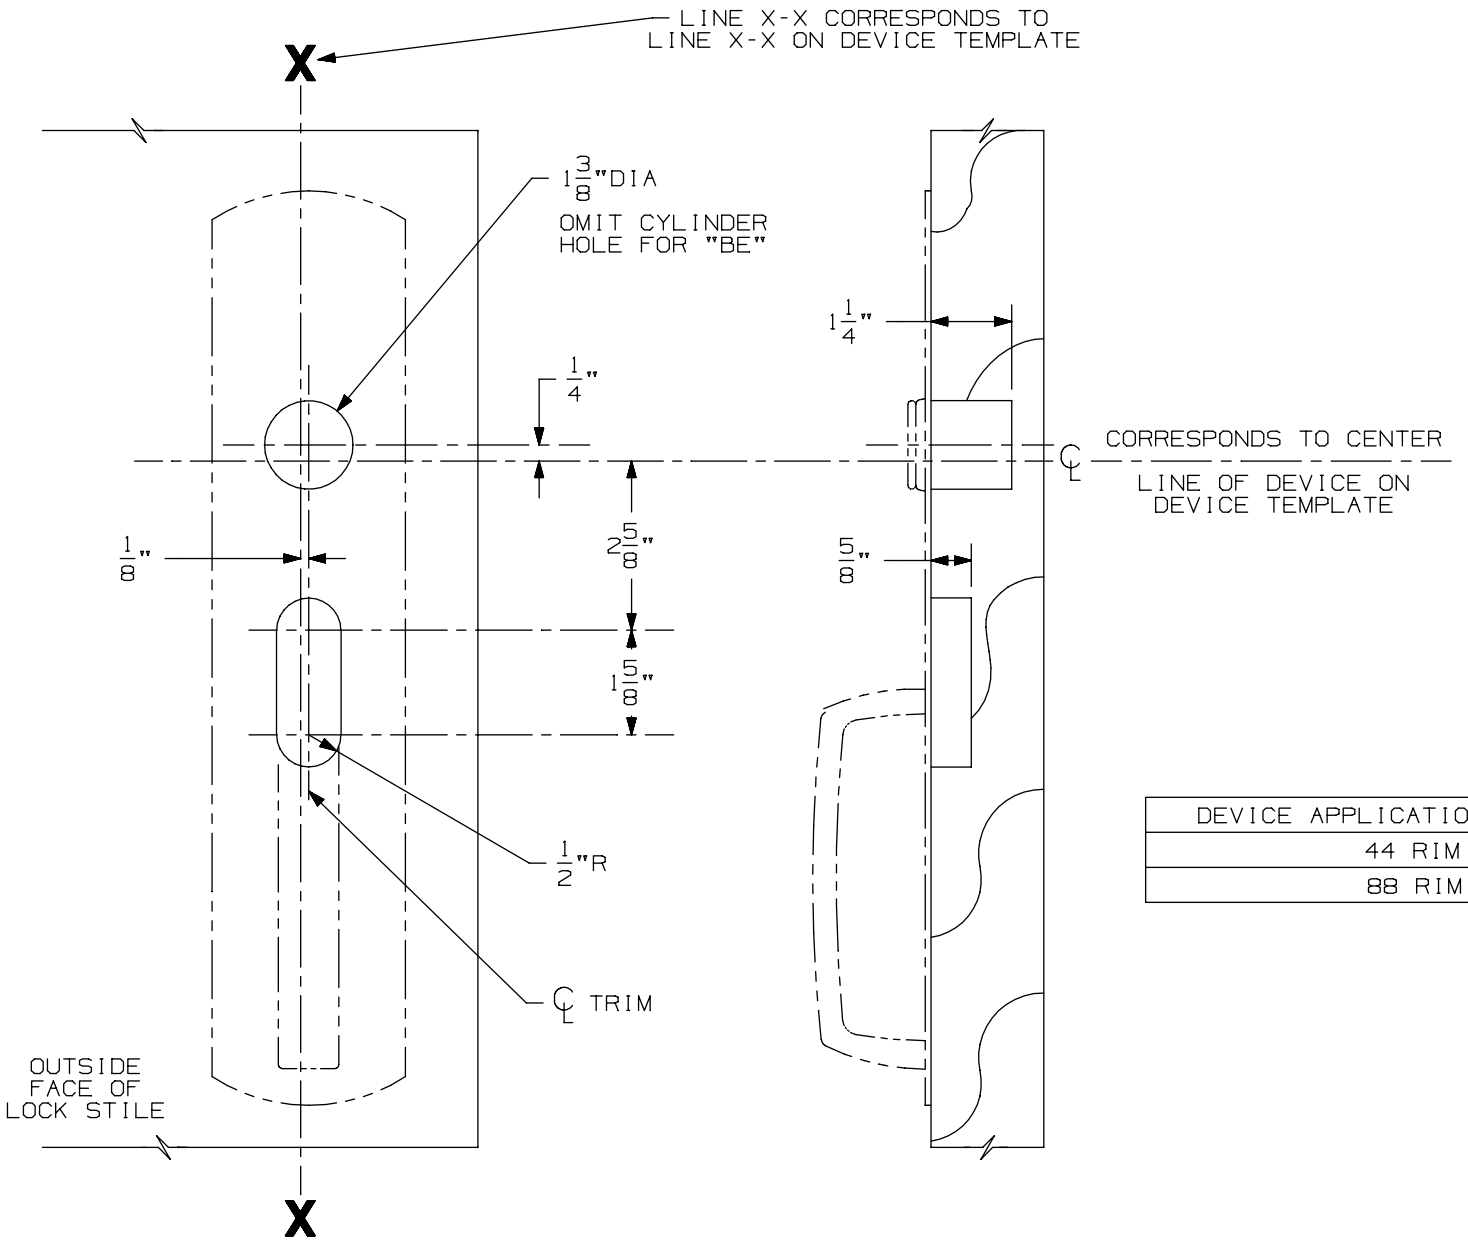

DEVICE APPLICATION SCHEDULE
44 RIM
88 RIM

LHR SHOWN
RHR OPPOSITE

NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

FOR CUTOUTS ON INSIDE FACE OF DOOR SEE DEVICE TEMPLATE.

VON DUPRIN®

TEMPLATE NUMBER: W20253_a

DATE: 05-29-13