
# 880NL Trim (Wood Door)

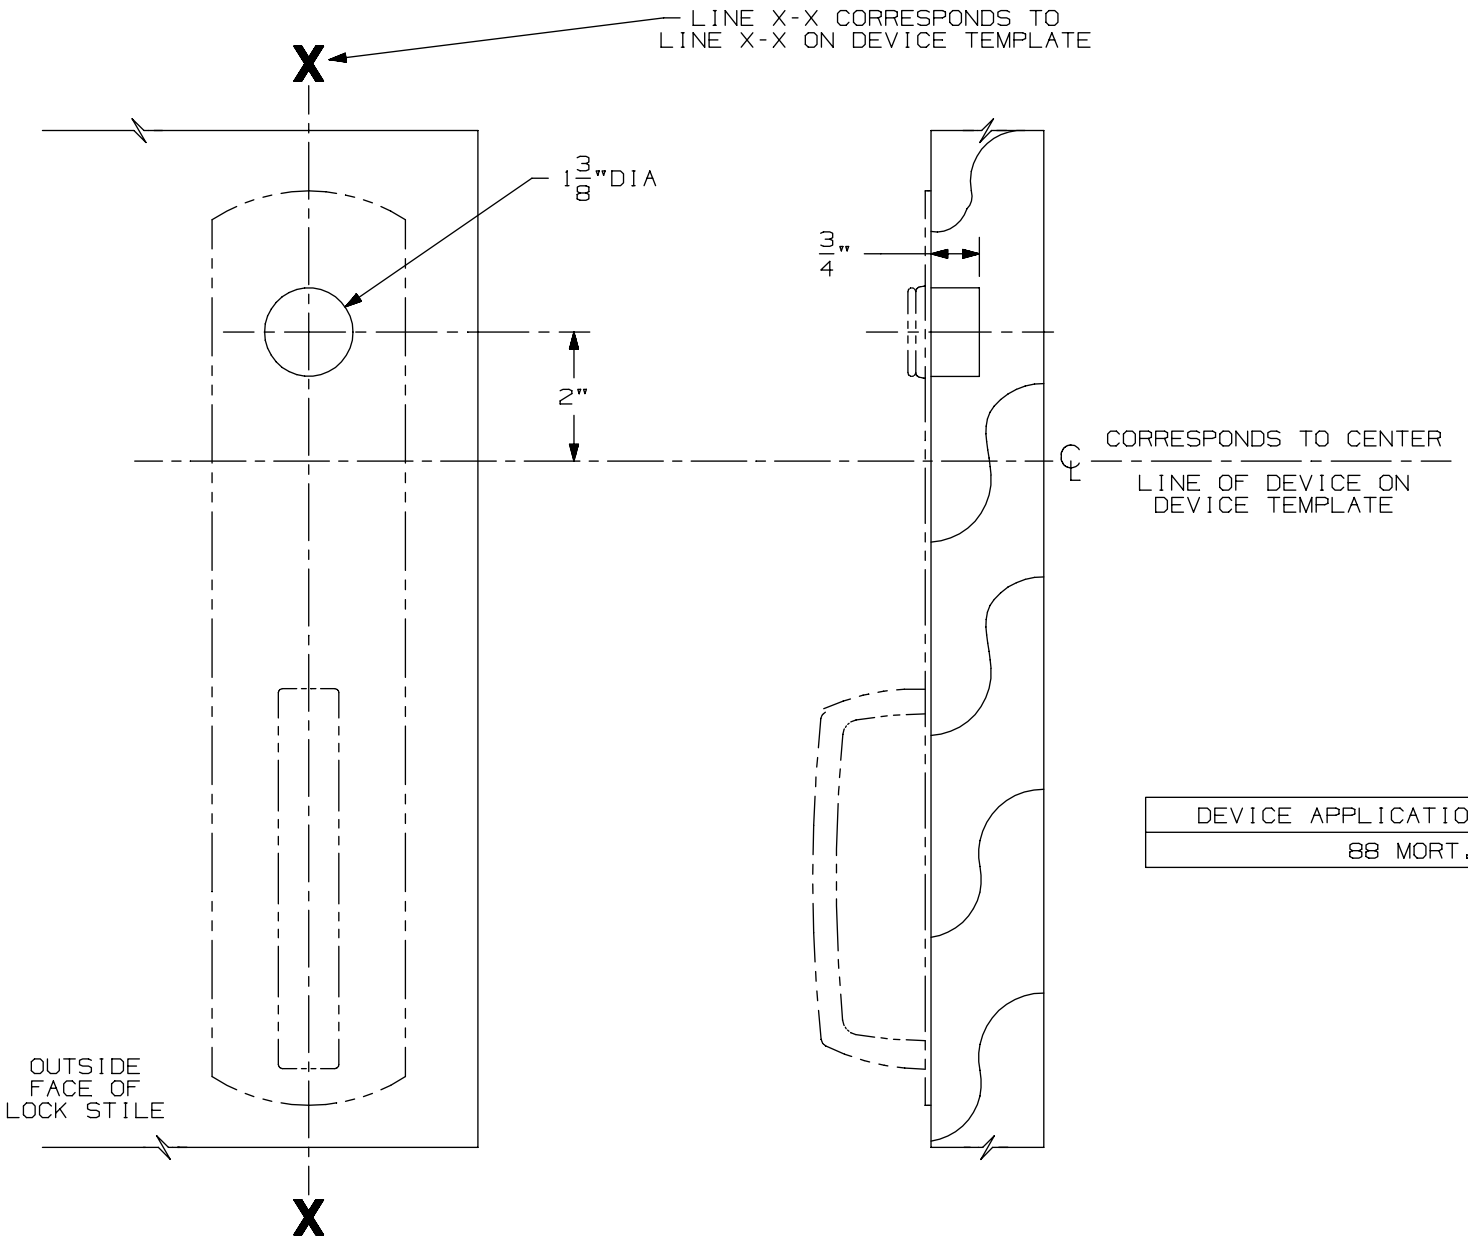


LHR SHOWN
RHR OPPOSITE

| DEVICE APPLICATION SCHEDULE |
| --- |
| 88 MORT. |

NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

FOR CUTOUTS ON INSIDE FACE OF DOOR SEE DEVICE TEMPLATE.

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER: W20259_a

DATE: 05-29-13

VON DUPRIN®