SCHLAGE®


FE575/FE595 Door Preparation Instructions
For Door With Existing Holes

Tools Needed




1 Measure Door Width

If the door is thinner than 1⅜" or thicker than 1¾", then the lock will not fit properly on the door.

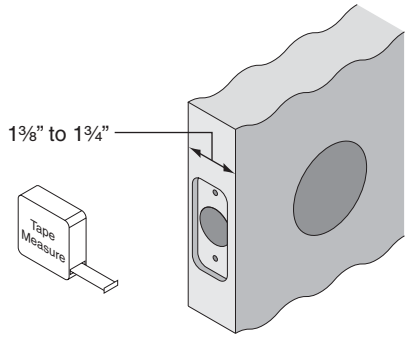


2 Measure for Backset

If existing backset is not 2⅜" or 2¾", then the lock will not fit properly on the door.

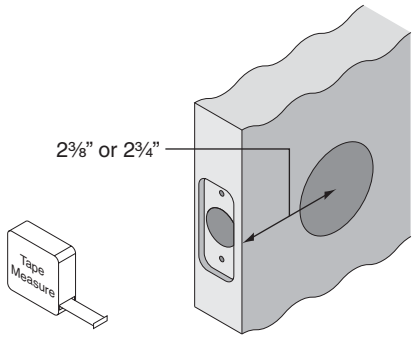


3 Measure Hole Sizes

If hole sizes are larger than those shown, then the lock will not fit properly on the door.
If hole sizes are smaller than those shown, see steps 4 and 5.

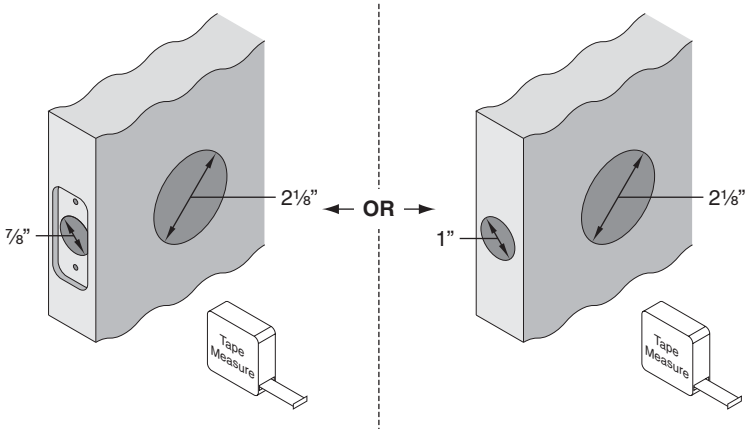


4 If Needed, Enlarge Hole in Door

If hole in door is smaller than 2⅛", then use 2⅛" hole saw to enlarge hole.

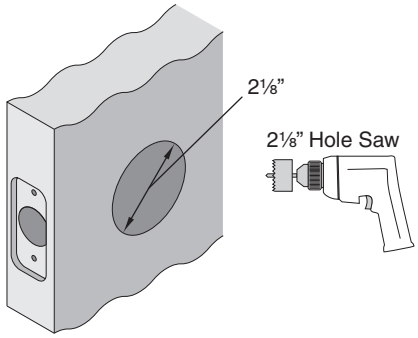


5 If Needed, Enlarge Hole in Door Edge

If hole in door edge is smaller than ⅞", then use ⅞" or 1" drill bit to enlarge hole.

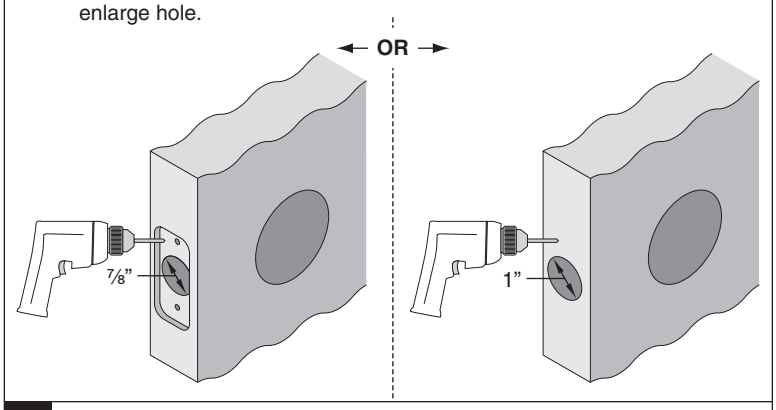

6 Check Strike (Door Jamb) Preparation

a. Place new strike against door jamb.
b. If strike does not fit properly, use pencil to trace around strike and mark hole positions.
c. If needed, use chisel and drill to correct door jamb preparation.

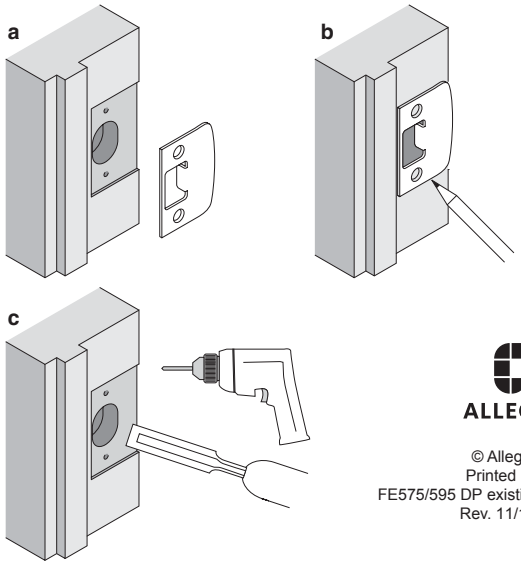

ALLEGION™

© Allegion 2014
Printed in U.S.A.
FE575/595 DP existing holes
Rev. 11/14-online