

STRIKE PREPARATION
HOLLOW METAL FRAME

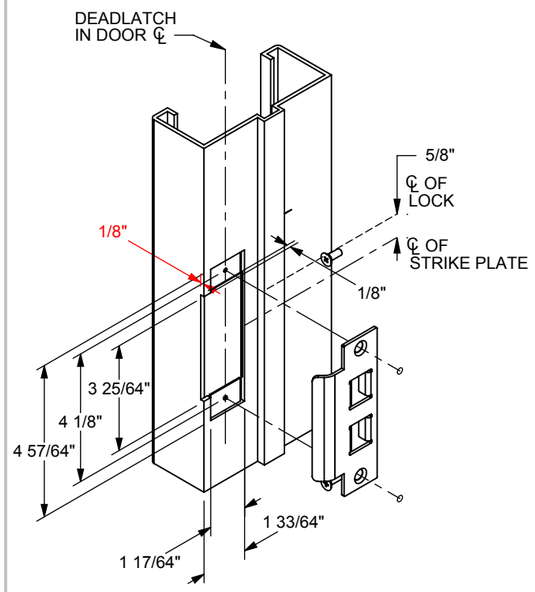


INSTALLATION OF STRIKE

MOUNT STRIKE ONTO JAMB AND FASTEN WITH #10 FLAT HEAD SCREWS AS SHOWN.


1 DOOR PREPARATION

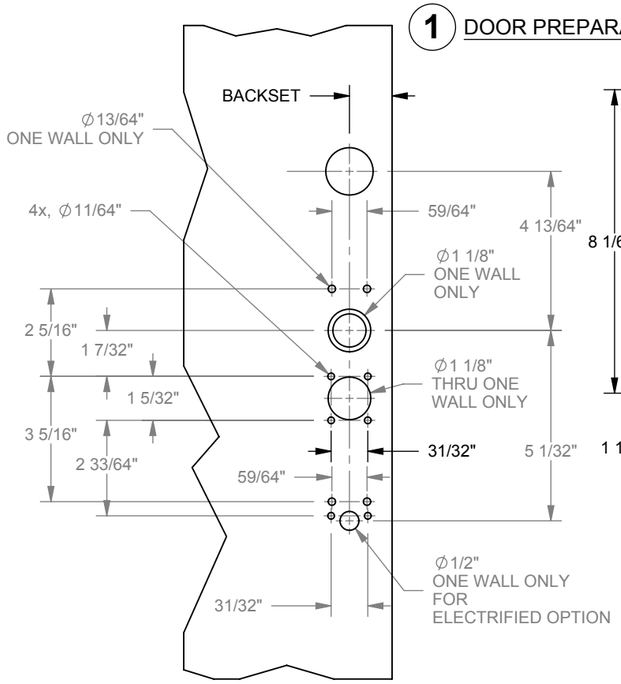


(EXTERIOR TRIM)

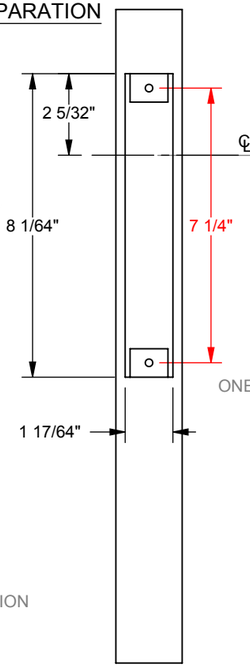

HOLLOW METAL DOOR PREPARATION

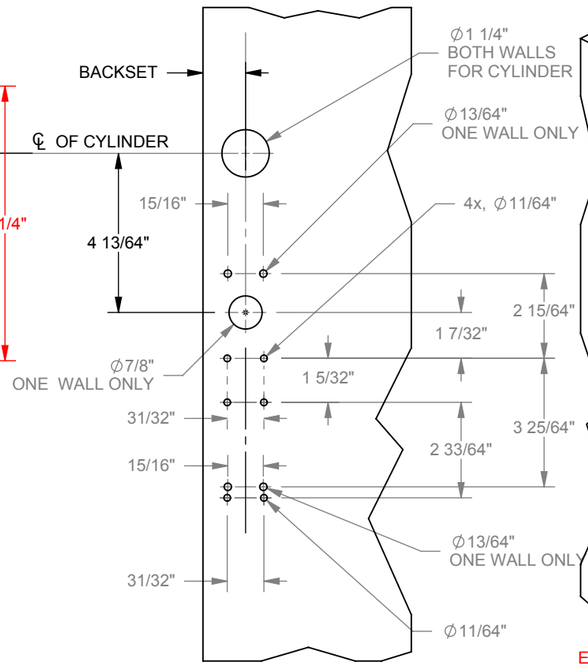

(INTERIOR TRIM)

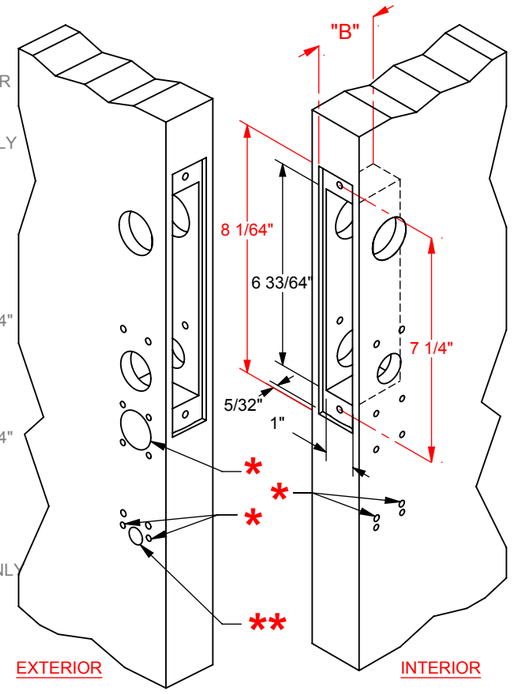

WOOD DOOR PREPARATION

TOOLS NEEDED:
- 5/64 ALLEN WRENCH
- 3/32 ALLEN WRENCH
- 1/8 ALLEN WRENCH
- #9 DRILL BIT (.196 Ø)
- #16 DRILL BIT (.177 Ø)
- 7/8 DRILL BIT (.875 Ø)
- 1-1/8 DRILL BIT (1.125 Ø)


- APPLY STICK ON TEMPLATE OVER CYLINDER BACKSET CENTER LINE.
NOTE: EACH TEMPLATE IS LABELED FOR OUTSIDE OR INSIDE TRIM.
- CENTER PUNCH ALL HOLES.
- DRILL HOLES AT CENTER PUNCH LOCATIONS. REMOVE TEMPLATE.
- INSTALL 2290 PER INSTALLATION INSTRUCTIONS.


* .50 DEEP
** 1.00 DEEP

BACKSET	"B" DIM.
1-1/8"	1.80
1-1/2"	2.17

2 BEVEL TABS ADJUSTMENT


- ROTATE BEVEL TABS TO DESIRED HANDING. USING THE BEVEL ADJUSTMENT ALLOWS THE FLAT. FACEPLATE TO WORK IN BEVEL STILES

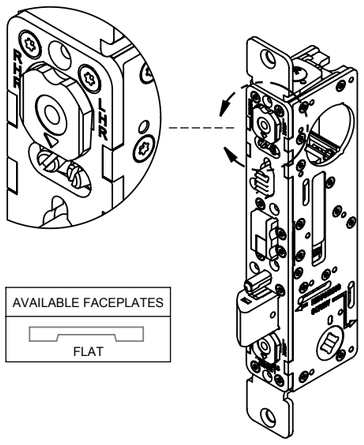

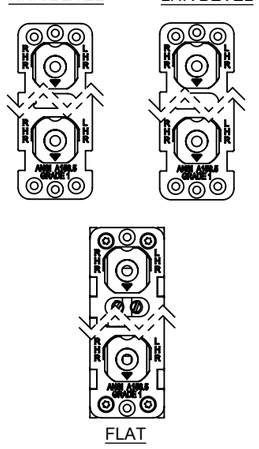

3 TO CHANGE THE HANDING ON LATCH BOLT:

- DEPRESS THE LATCHBOLT UNTIL BOLT SCREW CAN BE SEEN THROUGH CASE HOLE. (1-1/2" BACKSET ONLY).
- REMOVE BOLT SCREW AND ORIENT LATCH BOLT TO THE OPPOSITE HAND.
- DEPRESS THE LATCH BOLT UNTIL THE COUNTERSINK HOLE ON THE LATCH BOLT CAN BE SEEN THROUGH THE CASE HOLE AS SHOWN IN FIG.1.
- REINSERT BOLT SCREW AND TIGHTEN TO 22 - 27 IN-LB.

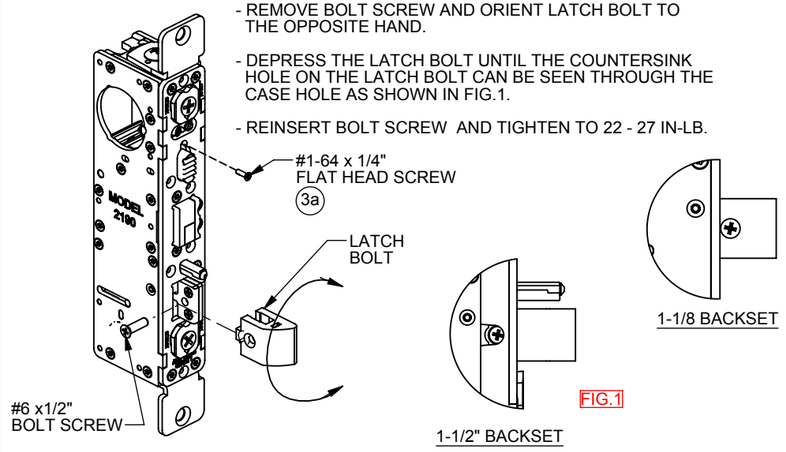

- YOU WILL ALSO HAVE TO RE-ORIENT THE INTER-CONNECT CAM:

a) LOOSEN THE #6-32 FLAT HD SCREW AT THE BOTTOM OF THE LOCK.


b) ROTATE THE INTER-CONNECT CAM TO THE OPPOSITE SIDE AND RETIGHTEN THE FLAT HEAD SCREW TO COMPLETE THE OPERATION

3a TO BLOCK HOLDBACK FEATURE

- INSERT #1-64 x 1/4" FLAT HEAD SCREW INTO CASE AS SHOWN BEFORE INSTALLING IN DOOR.

3b FOR APPLICATION THAT REQUIRE RETRACTION OF THE DEADBOLT AND DEARLATCH FROM BOTH SIDES OF DOOR.

-REMOVE THE INTER-CONNECT CAM, AND INSTALL THE OPTIONAL DOUBLE INTER-CONNECT CAM.

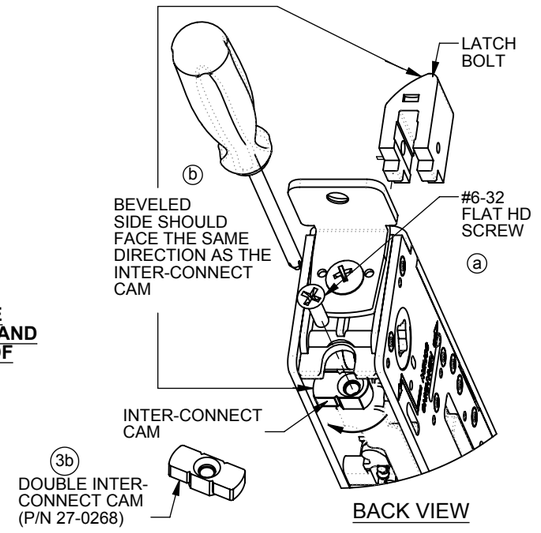


Adams Rite
ASSA ABLOY
Adams Rite Manufacturing Co.
260 Santa Fe Street,
Pomona, CA 91767
Phone: 909-632-2300
Fax: 909-632-2369
www.adamsrite.com

2290 INSTALLATION INSTRUCTIONS
W/ HEAVY DUTY ENTRANCE LEVER SET


80-0180-420 Rev. C ECN: 11735

INSTALLATION INSTRUCTIONS

BACKSET	"A" DIM.	"B" DIM.
1-1/8"	1.12	1.76
1-1/2"	1.50	2.13

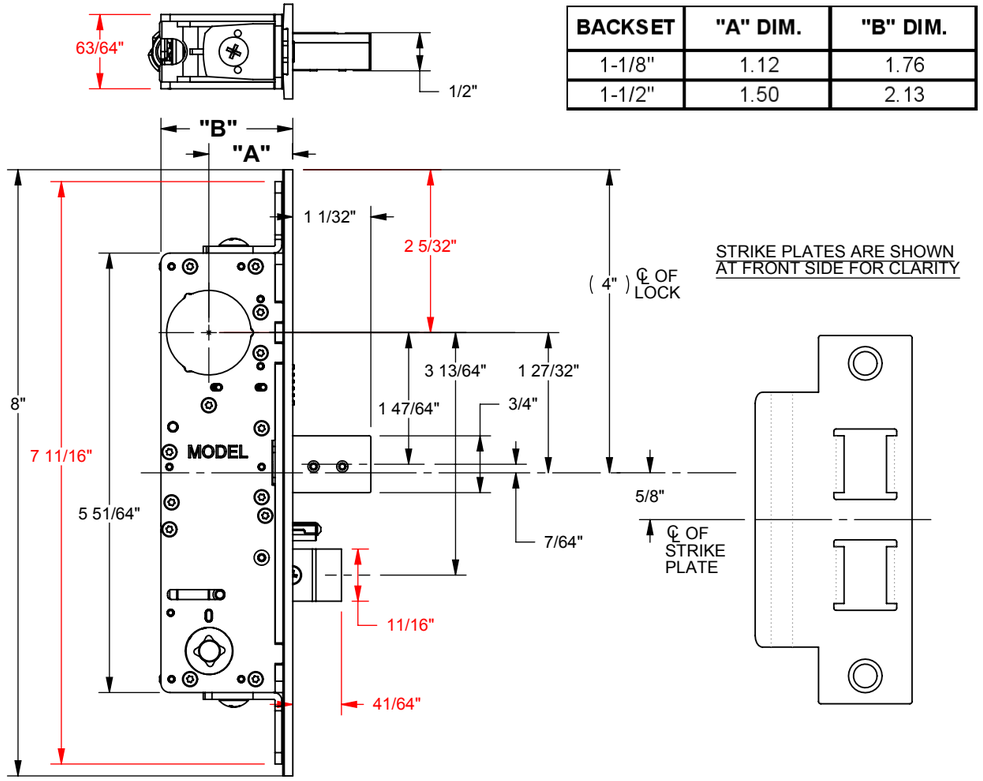

STRIKE PLATES ARE SHOWN AT FRONT SIDE FOR CLARITY

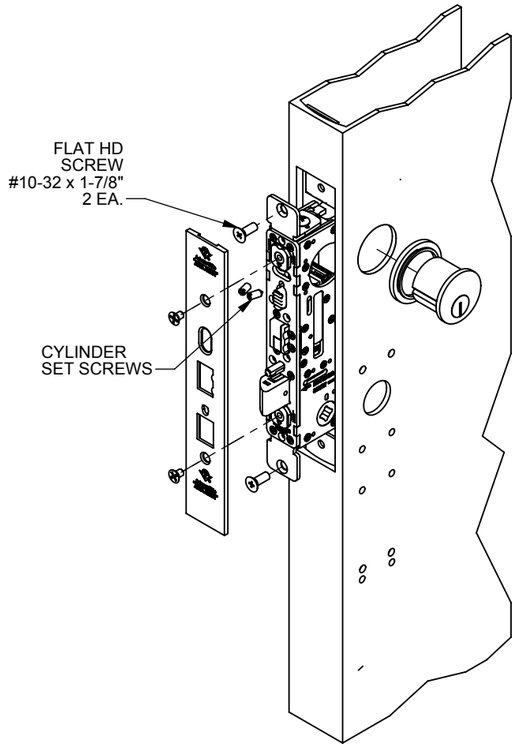

INSTALLING LOCK TO THE BACK OF THE DOOR


4
- INSERT LOCK ASSEMBLY INTO DOOR THRU CUTOUT.
- INSTALL AND FASTEN TWO (2) FLAT HEAD SCREWS #10-32 x 1-7/8" (OR #12, WOOD SCREW, P/N# 29-0271) TO SECURE THE LOCK ASSEMBLY ON DOOR.

5
- INSTALL CYLINDER AND SECURE WITH SET SCREWS.
- INSTALL FACE PLATE.

TR* = A - B

* TOLERANCE: ±.060


"TR" is trim ring length
"A" is cylinder height (less shoulder but including cam)
"B" is one-half of door thickness

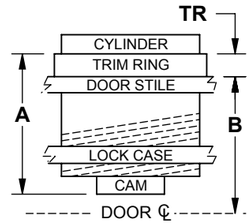

6 HANDING CONFIGURATION FOR 2290 TRIM

- THE OUTPUT DRIVE FOR THE EXTERIOR TRIM IS SHIPPED FROM THE FACTORY IN A CLOCKWISE ROTATION AND THE INTERIOR TRIM IS SHIPPED WITH A COUNTER-CLOCKWISE ROTATION. TO CHANGE THE OUTPUT DRIVE ROTATION, FOLLOW THESE STEPS:
  1. REMOVE THE SHOULDER SCREW WITH A 5/64" ALLEN WRENCH.
  2. REINSTALL SHOULDER SCREW ON THE OPPOSITE SIDE.


REFER TO THE CHART BELOW FOR REHANDING THE TRIM AS NEEDED.

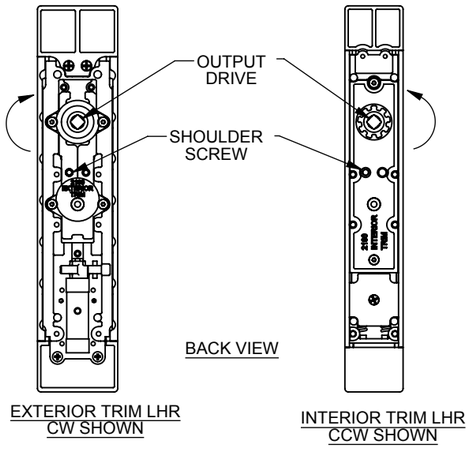


TRIM	HANDING -RHR	HANDING - LHR
	SPINDLE ROTATION	
EXTERIOR	COUNTER-CLOCKWISE	CLOCKWISE
INTERIOR	CLOCKWISE	COUNTER-CLOCKWISE

7 ASSEMBLE EXTERIOR TRIM

-SLIDE THE FINISH COVER ONTO BODY. THE COVER HAS CUTOUTS THAT FIT OVER THE GROOVES ON THE BODY.
- INSTALL BOTTOM CAP WITH (2) FLAT HEAD SCREWS (#4-40 x1/4") SUPPLIED.
- * FOR EXTERIOR TRIM WITH ELECTRIFIED OPTION. INSERT THE SHIELD ASSY BETWEEN THE COVER AND THE EXTERIOR BODY BEFORE INSTALLING THE BOTTOM CAP.
- INSTALL TOP CAP WITH (2) FLAT HEAD SCREWS (#4-40 x1/4") SUPPLIED.

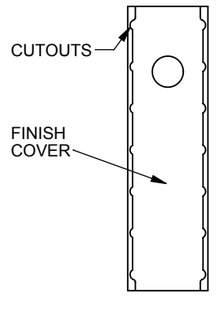

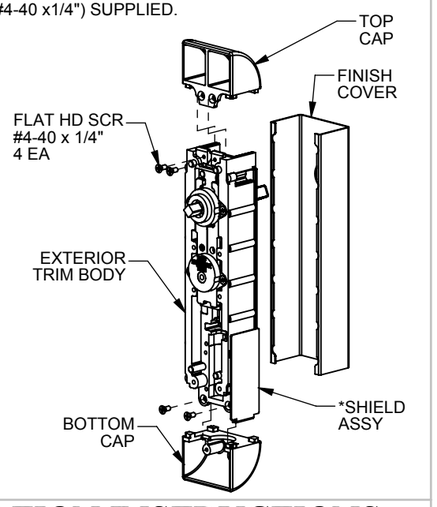

8 INSTALLING INTERIOR & EXTERIOR TRIM TO STILE

- INSERT DRIVE SPINDLE INTO EACH TRIM BODY PRIOR TO MOUNTING.
- MOUNT THE EXTERIOR TRIM AND INTERIOR TRIM BODY TO THE STILE USING (6) #6-32 x 3" FLAT HEAD SCREWS.
- SLIDE THE COVER ONTO INTERIOR TRIM BODY FROM THE TOP.
- INSERT SHAFT THRU THE HOLE ON THE COVER AND THE OUTPUT ON TRIM BODY. THE GROOVE ON THE SHAFT FACES OPPOSITE THE LATCH BOLT. TIGHTEN THE SET SCREW WITH A 3/32" ALLEN WRENCH TO SECURE THE SHAFT AS SHOWN IN FIG. 2.
- INSTALL TOP CAP USING (2) #4-40 x1/4" FLAT HEAD SCREWS .
- PUSH THE COVER UP FLUSH WITH THE TOP CAP, INSTALL BOTTOM CAP USING (2) #6-32 x 3/8" FILLISTER HEAD SCREWS.


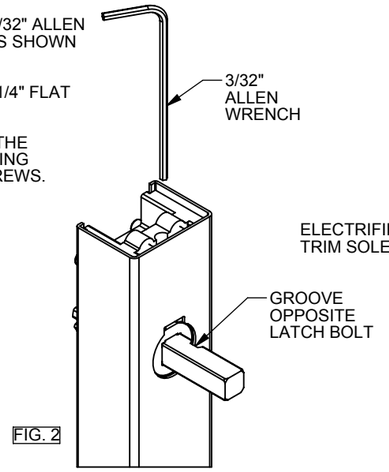


FIG. 2

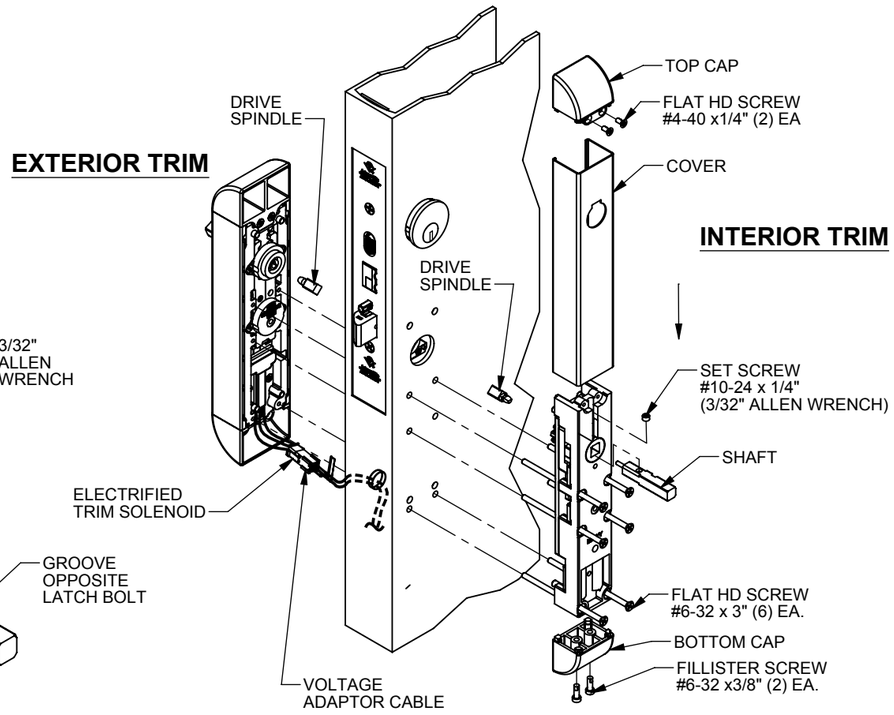


9 INSTALLING HANDLE (INTERIOR / EXTERIOR)

- INSERT WASHER THEN INSERT HUB OVER SHAFT. ON HANDLES 2290-01, 2290-02, 2290-03, THE HUB IS FACTORY INSTALLED. REMOVE LOCK SCREW WITH 1/8" ALLEN WRENCH AND PROCEED TO NEXT STEP.
- INSTALL HANDLE OVER THE HUB WITH THE HOLE ALIGNED WITH THE HOLE ON THE HUB.

NOTE: THE SHAFT DETENT SHOULD BE ALIGNED WITH THE LOCKING SCREW.

- MOVE THE HANDLE IN UNTIL IT IS AGAINST THE TRIM COVER.
- FASTEN THE LOCK SCREW 26-0933 TO SECURE THE HANDLE WITH 1/8"ALLEN WRENCH.

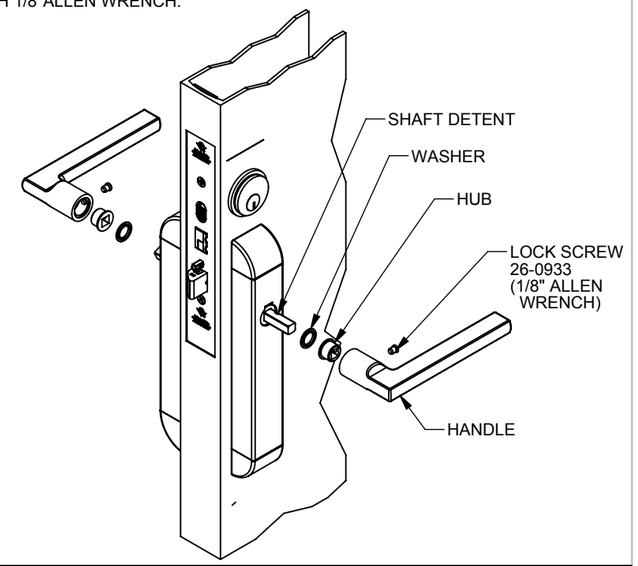

LATCH HOLD BACK FEATURE


- IN THE LOCK POSITION, INSERT KEY, TURN KEY 180° TO RETRACT THE DEADBOLT.
- TURN KEY 315° TO RETRACT THE LATCHBOLT.
- HOLD IN THIS POSITION AND PUSH DOWN THE HOLD BACK BUTTON TO RETAIN LATCHBOLT.
- RETURN KEY TO NEUTRAL POSITION AND REMOVE KEY.


TO RELEASE HOLD BACK


- INSERT KEY, TURN KEY OR THUMB TURN ABOUT 135° AND HOLD.
- PUSH UP THE HOLD BACK BUTTON TO RELEASE THE LATCH BOLT.
- RETURN KEY TO THE NEUTRAL POSITION AND REMOVE KEY.

TEST OPERATION

- EXTEND DEADBOLT WITH KEY OR THUMBTURN.
- PUSH DOWN ON INTERIOR LEVER. THE DEADBOLT AND LATCH SHOULD FULLY RETRACT.
- IF LATCH ONLY RETRACTS - REFER TO STEP 4 FOR INTER-CONNECTION CONFIGURATION.
- IF NEITHER RETRACT - REFER TO STEP 11 FOR DRIVE SPINDLE INSTALLATION.
- PUSH DOWN ON EXTERIOR LEVER - THE LATCH ONLY SHOULD RETRACT.

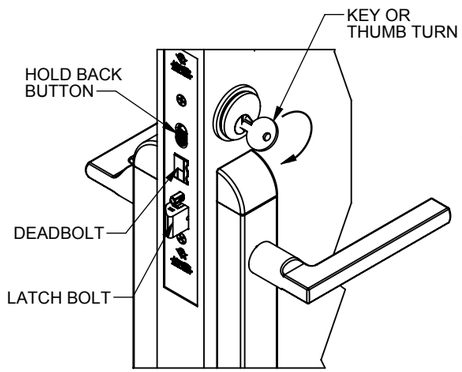

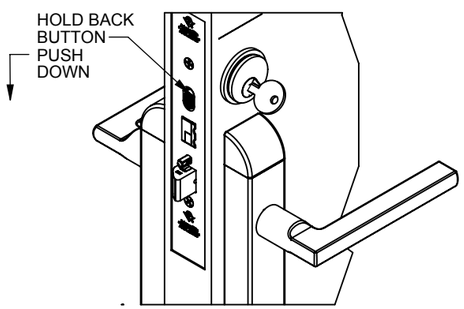


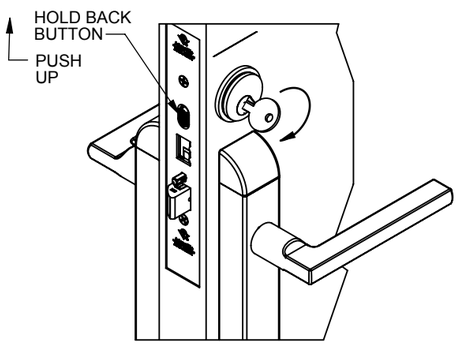

ELECTRIFIED TRIM SOLENOID SPECIFICATION

SOLENOID AVAILABLE VOLTAGES
12V DC CONTINUOUS DUTY,
24V DC CONTINUOUS DUTY.

2190 WIRING DIAGRAM
INTERMITTENT / CONTINUOUS DUTY 12 / 24V DC

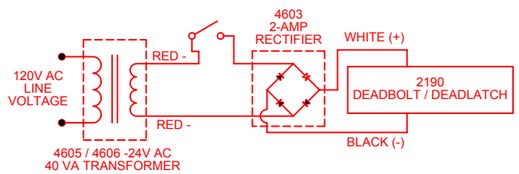

- WIRED THE VOLTAGE ADAPTOR CABLE TO THE PROPER POWER SUPPLY THROUGH THE HOLE ON THE STILE.
- CONNECTED THE CABLE TO THE EXTERIOR TRIM SOLENOID BEFORE INSTALLING THE TRIM ONTO THE STILE.

VOLTAGE ADAPTOR CABLE			
P/N#	WIRE COLOR	APPLICATION	SOLENOID CURRENT DRAW
VA7400-12	BLACK	12V DC	0.44 AMPS
VA7400-24	RED	24V DC	0.23 AMPS

PRODUCT MUST BE INSTALLED ACCORDING TO ALL APPLICABLE BUILDING AND LIFE SAFETY CODES

Adams Rite
ASSA ABLOY
Adams Rite Manufacturing Co.
260 Santa Fe Street,
Pomona, CA 91767
Phone: 909-632-2300
Fax: 909-632-2369
www.adamsrite.com

2290 INSTALLATION INSTRUCTIONS
W/ HEAVY DUTY ENTRANCE LEVER SET

80-0180-420 Rev. C ECN: 11735