

Header Bolt

HDB-4016

INSTALLATION

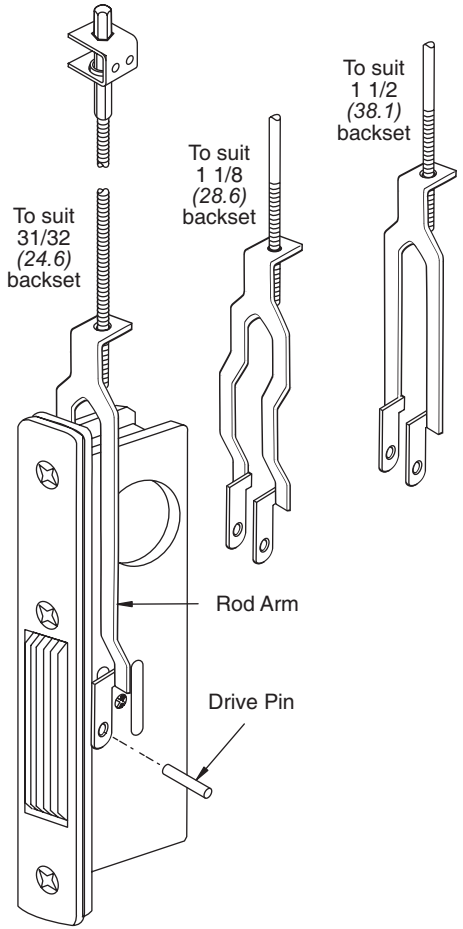



1. Tap or drill holes on top inside face of the stile as shown.
2. Drill 1/2” bolt hole in header/door jamb.
3. While the lock bolt is retracted, use the drive pin to fix the rod arm to the lock.
4. Cut off the length of rod bolt assy. to suit cylinder height.
5. Attach the rod to the rod arm.
6. Insert lock installed with header bolt into the stile.
7. Mount top guide and fasten securely.

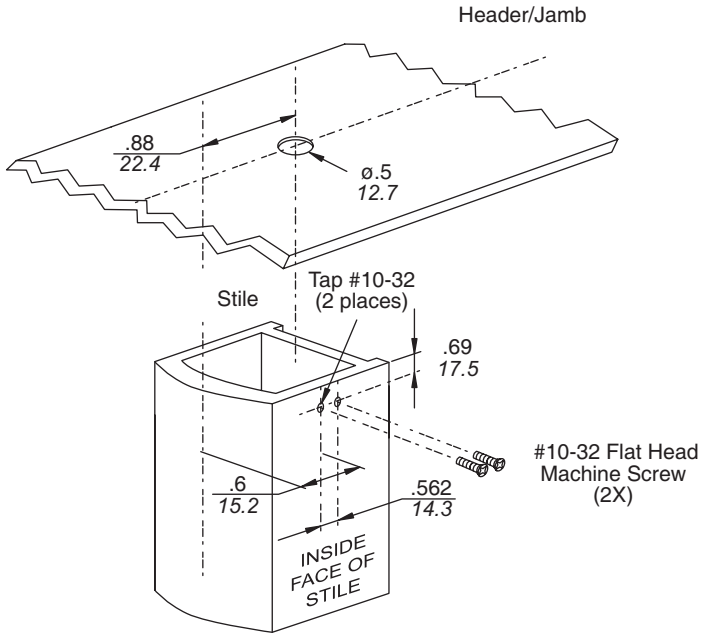

DIMENSIONS

Inches
Millimeters

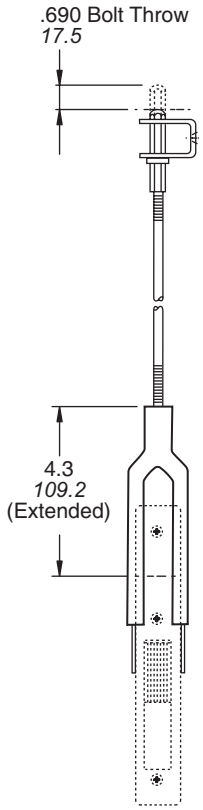

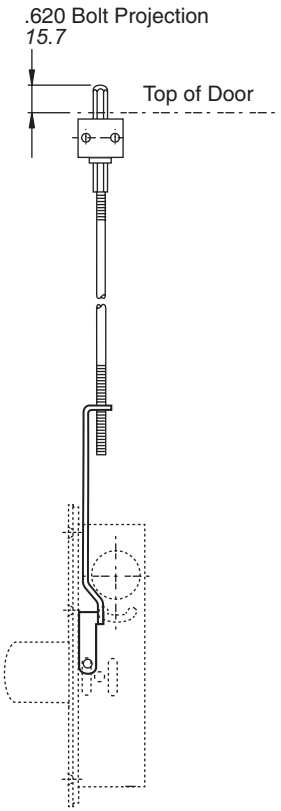


• Cut off the length of rod bolt assy. to suit low cylinder heights

400 Jeffreys Rd., Rocky Mount, NC 27804 • Tel.: (252) 446-3321 • Fax: (252) 446-4702 • www.kaba-ilco.com


Pasador Superior

HDB-4016

INSTALACIÓN

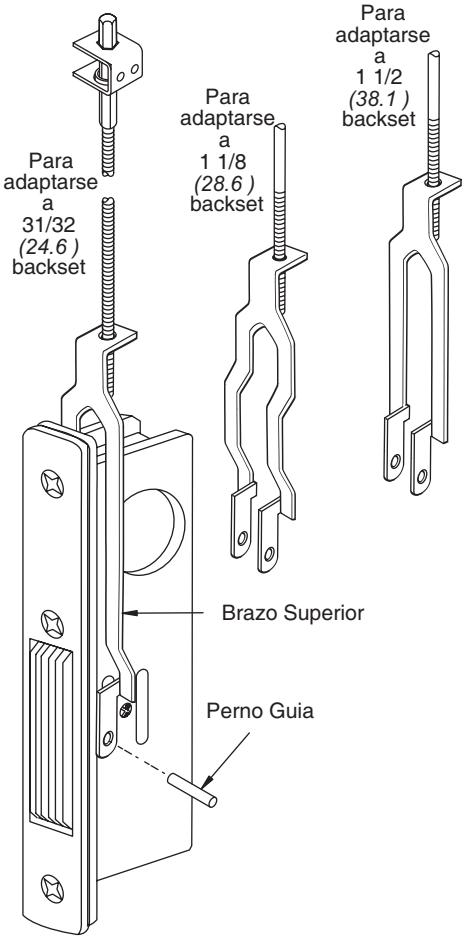


1. Perforar agujeros en la tapa cara interior del perfil tal como se muestra.
2. Haga una perforacion de 1/2” en el marco superior.
3. Mientras que el pestillo se retrae usar el perno guia para colocar el pasador superior.
4. Ajuste la longitud del pasador superior.
5 Ensamble el brazo y el pasador superior.
6. Instale la cerradua en el perfil.
7. Coloque la guia superior y sujete firmemente.

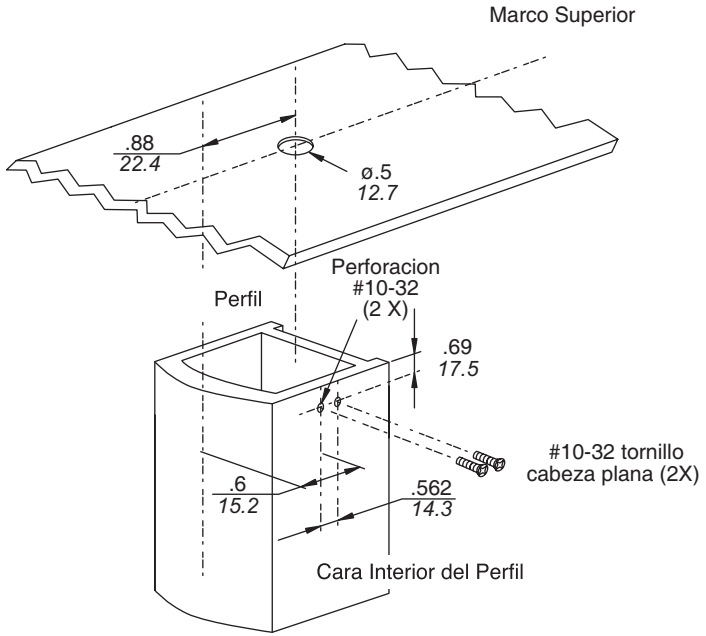

DIMENSIONES

Pulgadas
Milímetros

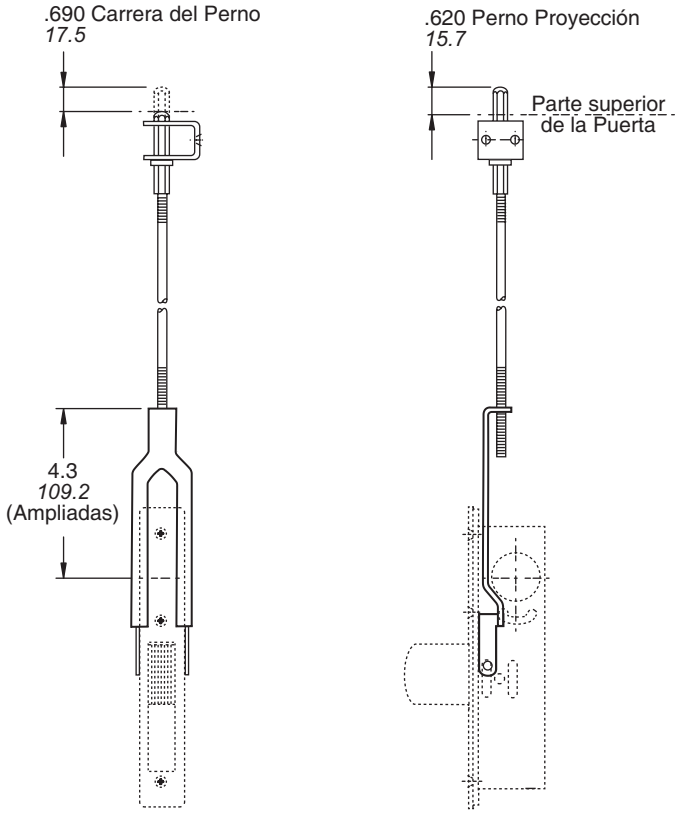

- Cortar la longitud de la varilla del pasador para ajustar la carrera

400 Jeffreys Rd., Rocky Mount, NC 27804 • Tel.: (252) 446-3321 • Fax: (252) 446-4702 • www.kaba-ilco.com