




1. WITH LOCK INSTALLED AND UNLOCKED, INSERT PIN THROUGH SLOT IN LOCK SIDE PLATE INTO THE BOLT OPENING PROVIDED.
2. WITH LOCK UNLOCKED AND INDICATOR PANEL READING "OPEN" PLACE INDICATOR OVER OPERATING PIN AND MOUNT INDICATOR WITH SCREWS PROVIDED.
3. DIMENSIONS IN PARENTHESES ARE IN MILLIMETERS.
4. MAKE SURE HEADER FACE IS CLEAN AND DRY. PEEL BACKING FROM ADHESIVE SIGN HALVES. STARTING AT CENTER TO MINIMIZE MISALIGNMENT. APPLY TO HEADER.

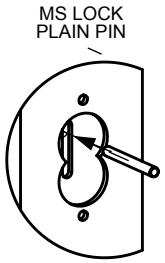


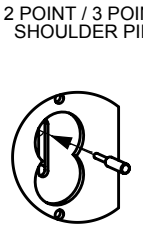


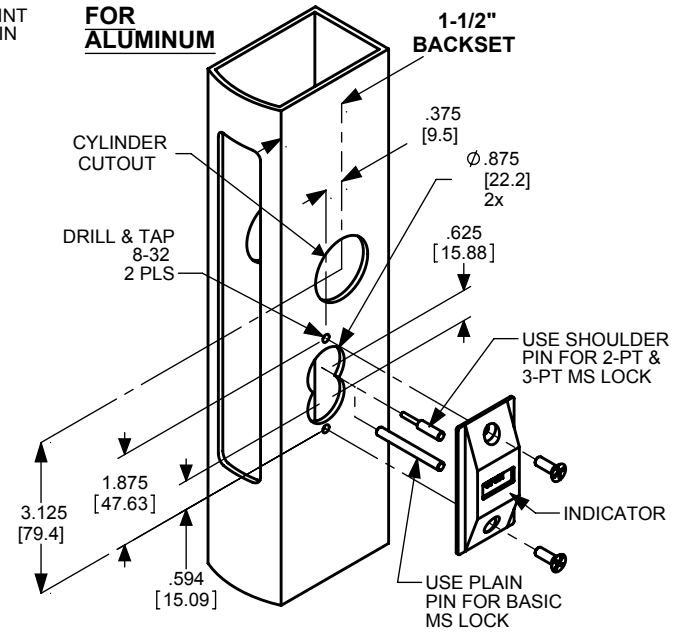

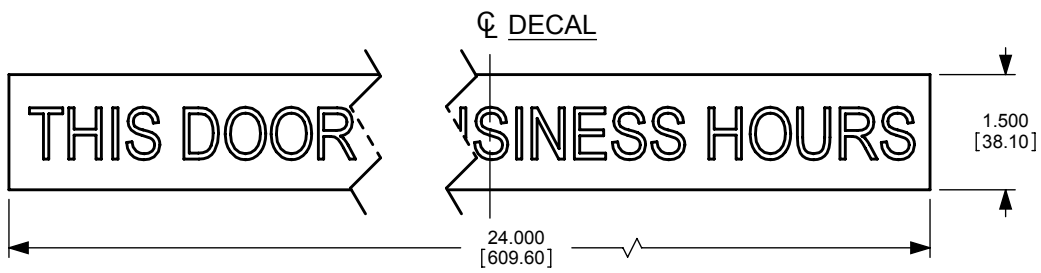

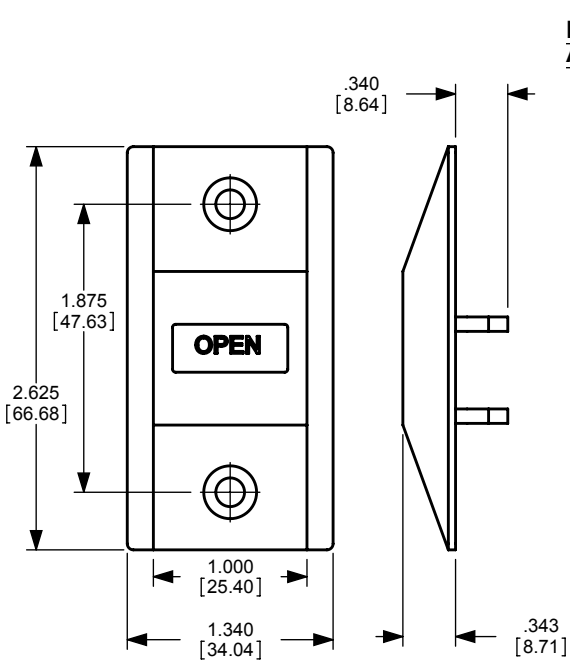

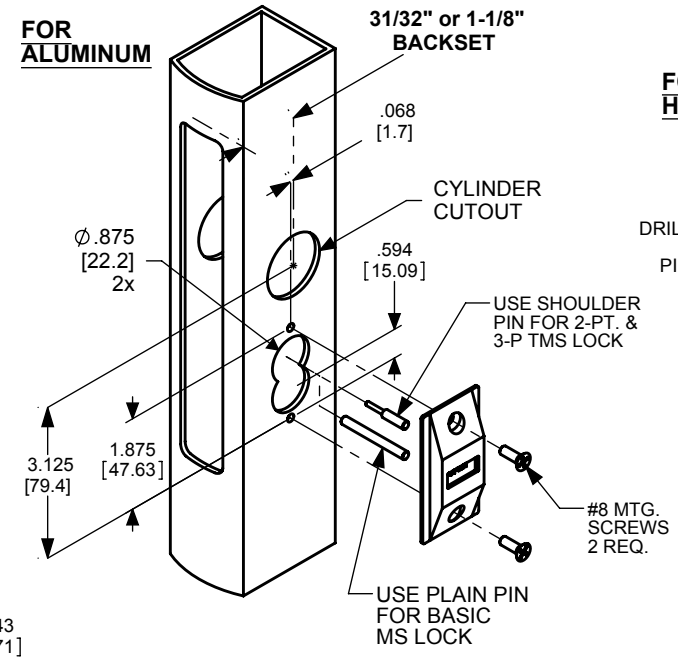

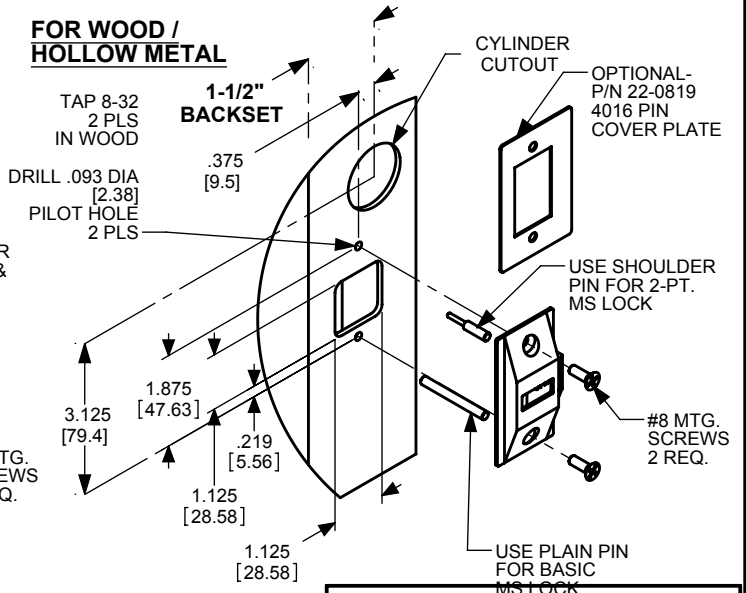

PRODUCT MUST BE INSTALLED ACCORDING TO ALL APPLICABLE BUILDING AND LIFE SAFETY CODES

Adams Rite
ASSA ABLOY
www.adamsrite.com
Phone: 800-626-7590
800-872-3267
Fax: 866-582-4641
800-232-7329

4089 EXIT INDICATOR

INSTALLATION INSTRUCTIONS

80-0180-14 Rev. F Ecn 11955A Date: 06-19-12 Appvd: MP