


DOOR PREPARATION

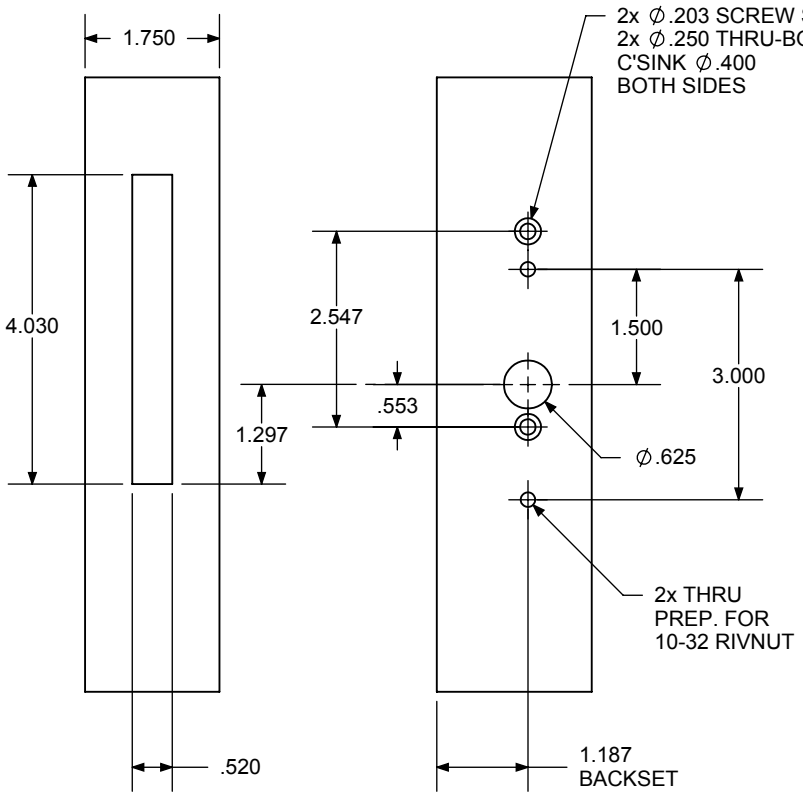

LOCK INSTALLATION

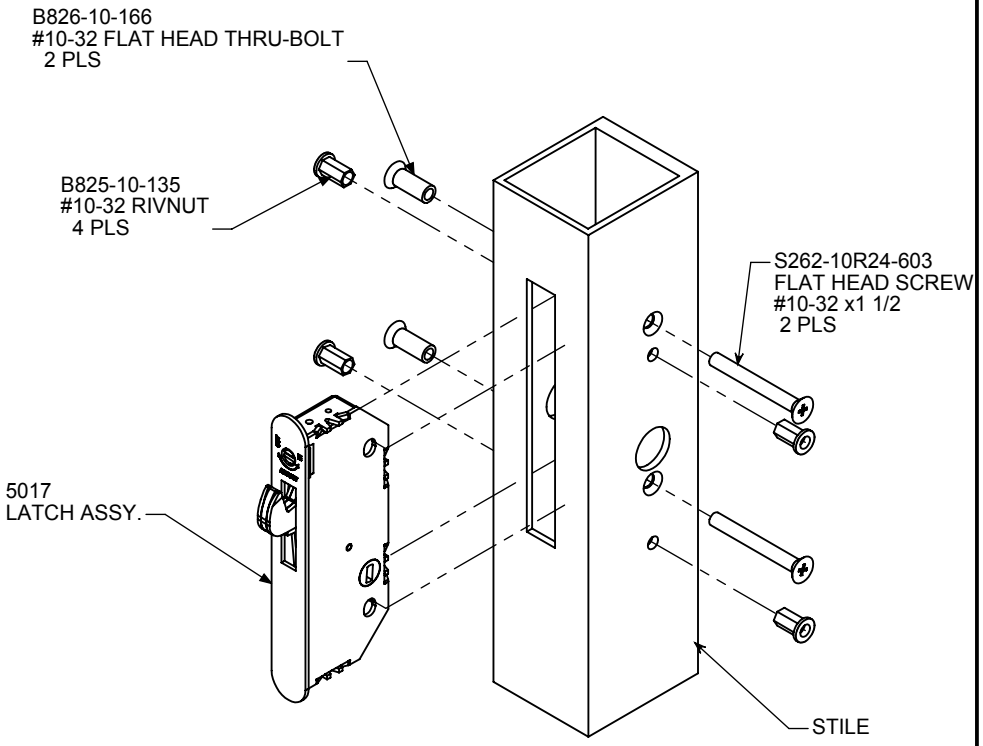

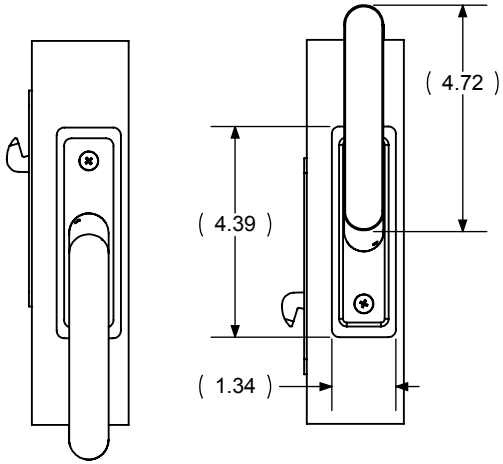

HANDLE POINTING DOWNWARD ORIENTATION

HANDLE POINTING UPWARD ORIENTATION

NOTES:

THE FOLLOWING PREPARATION POSITIONS THE HANDLES IN A DOWNWARD ORIENTATION.

IF DESIRED THE ENTIRE PREPARATION CAN BE INVERTED TO HAVE THE HANDLES POINTING UPWARD. STRIKE TEMPLATING MUST ALSO BE INVERTED.

STEP 1

* INSTALL RIVNUTS.
* INSTALL LOCK AND SECURE WITH THRU-BOLTS AND #10-32-1 1/2" FLAT HEAD SCREWS.

Adams Rite
ASSA ABLOY

www.adamsrite.com
Phone: 800-626-7590
800-872-3267
Fax: 866-582-4641
800-232-7329

4570 HANDLES x 5017 DEADLOCK


80-0180-461 Rev. **H** CR 135-13

PRODUCT MUST BE INSTALLED ACCORDING TO ALL APPLICABLE BUILDING AND LIFE SAFETY CODES


INSTALLATION INSTRUCTIONS

Date: 3/28/13

ACTUATOR ASS'Y INSTALLATION

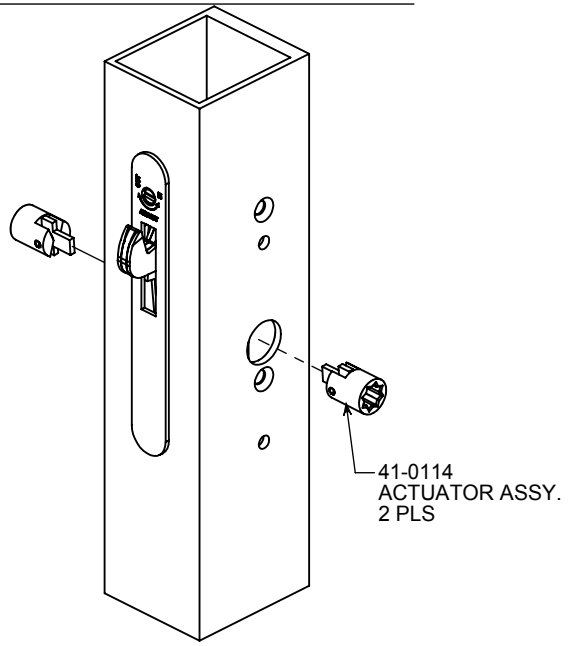


HANDLE INSTALLATION

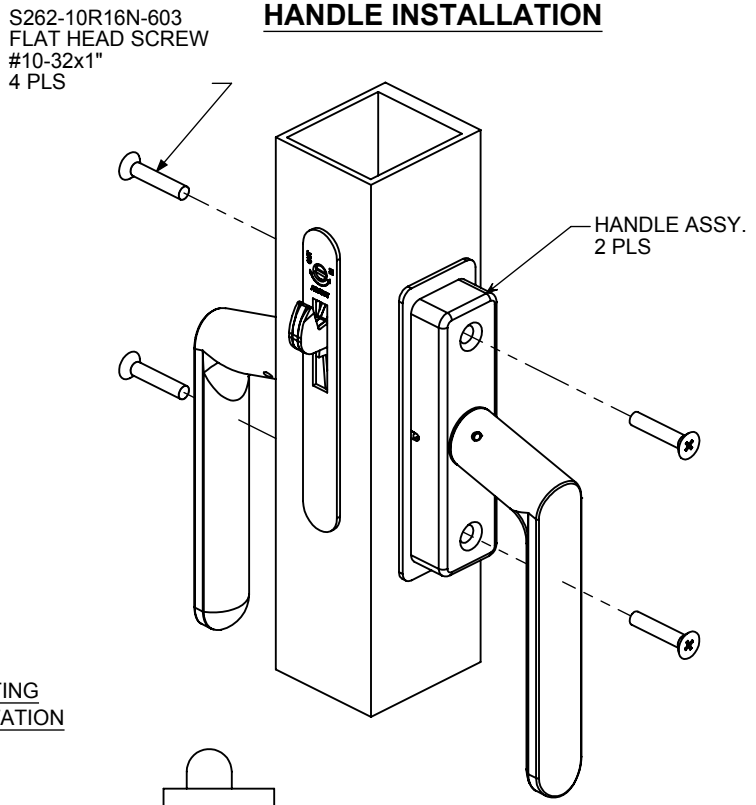

STEP 2

-INSTALL ACTUATOR ASSY. INTO THE HUB OF THE LOCK.
-ROTATE THE ACTUATOR ASSY. AS SHOWN IN FIGURE 4.

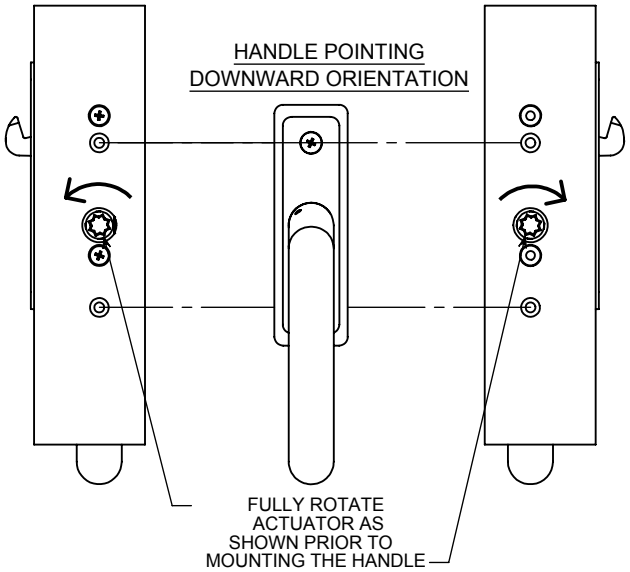

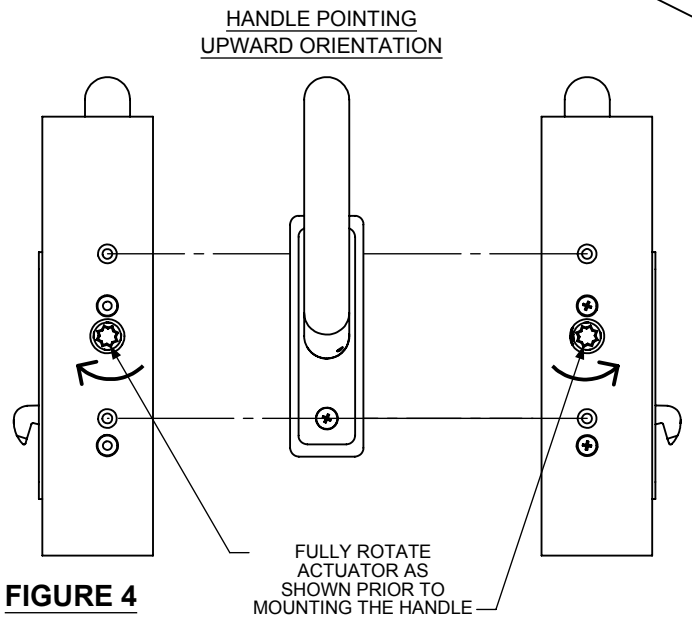


FIGURE 4

STEP 3

-INSTALL HANDLES AND SECURE USING (4) #10-32 x 1" FLAT HEAD SCREWS.