
CONVERSION INSTRUCTIONS

100 / 500 / 200 / 600


KEY-RETAINING / NON-KEY-RETAINING CONVERSION INSTRUCTIONS


1. Remove both screws from front of lock face
2. Lift off front of lock face
3. Remove key-retaining cam disk (or regular cam disk)
4. Replace with standard cam disk (or key-retaining cam disk)
5. Replace front of lock face
6. Secure with both screws

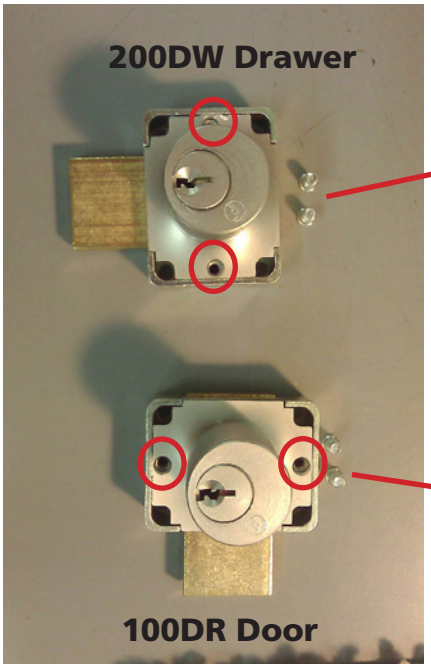




Remove key-retaining cam disks ⟷ **Replace with standard cam disks**

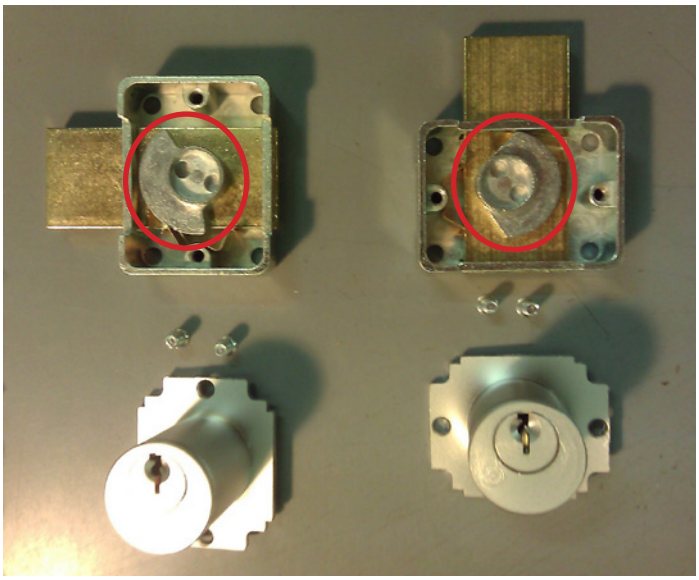

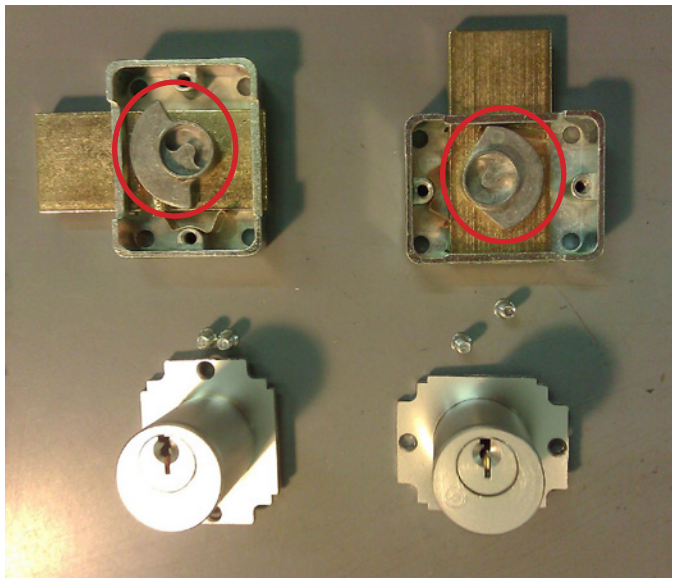

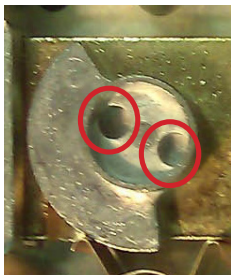

Key-retaining cam disks have two holes

Part-numbers:
15-2KR for 100/500 locks
26-2KR for 200/600 locks



Standard (non-key-retaining) cam disks have a curved slot

Part-numbers:
15-2 for 100/500 locks
26-2 for 200/600 locks

800-525-0954 | www.olympuslock.com
info@olympuslock.com

OLYMPUS LOCK INC

Copyright © 2020 Olympus Lock, Inc.