Cylinder installation for less cylinder locks

with standard function *(key removable in locked and unlocked position)*

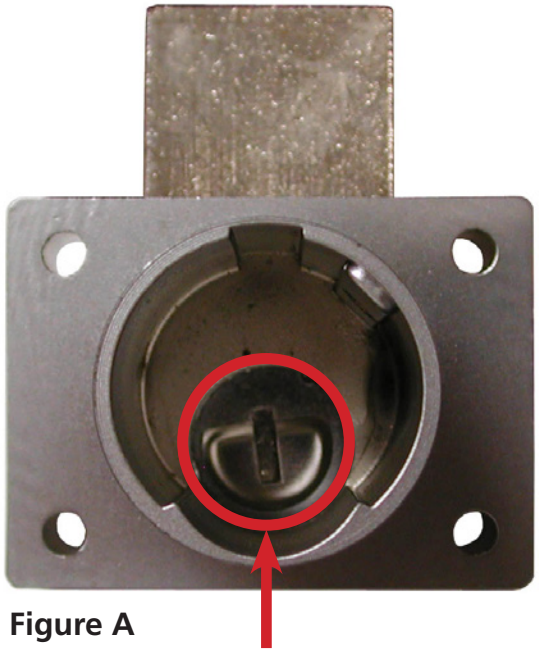


Figure A



Install tailpiece such that the overhang is facing in the same direction as the bolt (up in this example).

Figure D

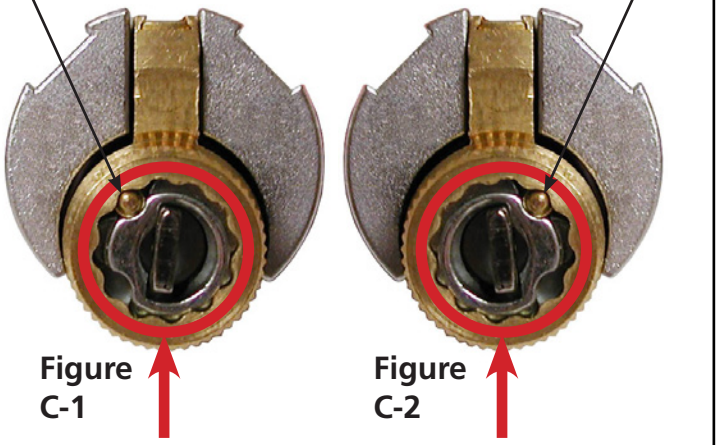


Figure C-1 **Figure C-2**

Part# 10-360	Part# 10-361	Part# 10-362, 10-363, 10-364
		
Figure B-1 Universal Driver	**Figure B-2** Tailpiece for 1-1/8" barrel length (800LCA)	**Figure B-3**[2] Tailpiece for 1-3/8" barrel length (800LCM)

[2] **NOTE: Figure B-3.** 800LCM (1-3/8" barrel length locks) ship standard with 3 tailpieces for use with the following cylinders:
10-362 - For use with Schlage original or Schlage compatible cylinders
10-363 - Stamped "M" - for use with Medeco cylinders
10-364 - Stamped "A" - for use with Assa cylinders

Cylinder installation for standard function[1]

Step 1: Cycle lock so that the deadbolt is either completely up or completely down. The slot inside the lock case should be in a vertical (up/down) orientation (**Figure A**).

Step 2: Install the universal driver (**Figure B-1**) into the back of the cylinder. If pin is located on the top left, install as shown in **Figure C-1**. If pin is located on top right, install as shown in **Figure C-2**.

Step 3: Install the tailpiece into the back of the cylinder in the vertical position such that the overhang is facing in the same direction as the bolt when the cylinder is put into the lock housing (**Figure D**).

Step 4: Pick up the lock body and slide it down over the cylinder. If the tailpiece does not immediately go into the vertical slot, pick up the complete assembly, put the key into the cylinder, and turn the key slightly back and forth until the tailpiece drops into the slot. Secure the cylinder housing to the body using the supplied set screw.

[1] *Standard (non-captive) function = key removable in the locked and unlocked position*