INSTALLATION INSTRUCTIONS
8893 Exit Device Inactive Trim

SARGENT
ASSA ABLOY

ASSA ABLOY, the global leader in door opening solutions

FOR ASSISTANCE CONTACT SARGENT AT 800-727-5477 or www.sargentlock.com

U.S. Patent No. 268003
Canadian Patent No. RD 1981

BEFORE STARTING


- Door should be fitted and hung
- Mullion should be installed if used
- Available stock lengths

Length E – 32" Door. No cut-off required. Can be cut to fit doors down to 24" wide*

Length F – 36" Door. No cut-off required. Can be cut to fit doors down to 30" wide*


Length G – 48" Door. No cut-off required. Can be cut to fit doors down to 36" wide*

*Flush doors only

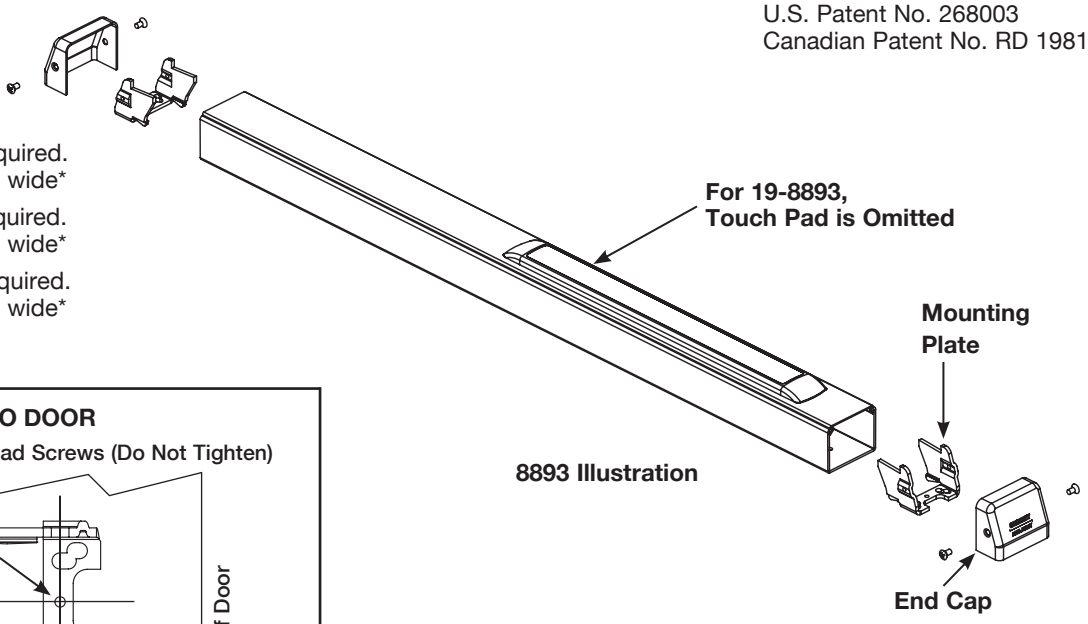


8893 Illustration


1 ATTACH MOUNTING PLATE TO DOOR

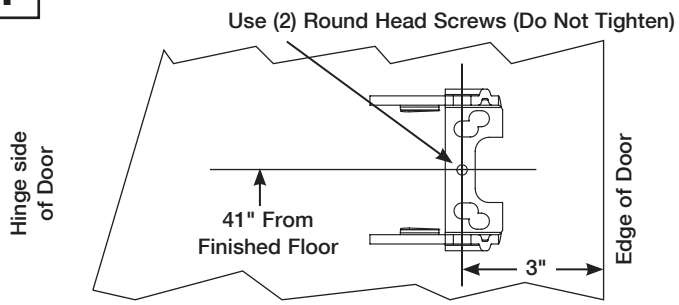


2 IF CUTTING IS REQUIRED, DETERMINE CUT-OFF LENGTH X BY SUBTRACTING 1-3/4" FROM LENGTH Y. MARK CUT-OFF POINT ON BACK END OF RAIL ASSEMBLY.

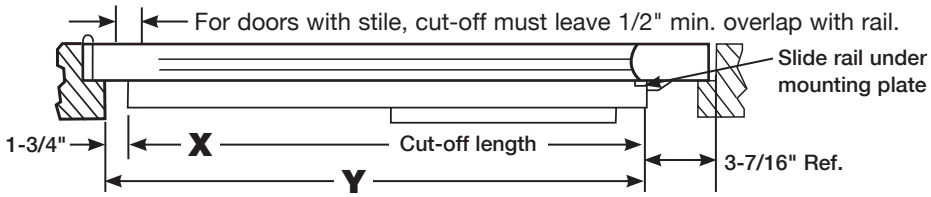


CUT-OFF AND DE BURR

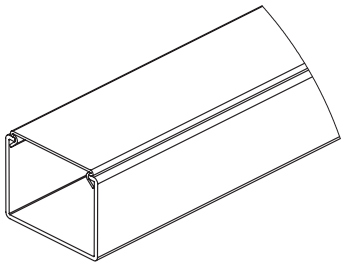


3 LEVEL RAIL AND ATTACH SECOND MOUNTING PLATE

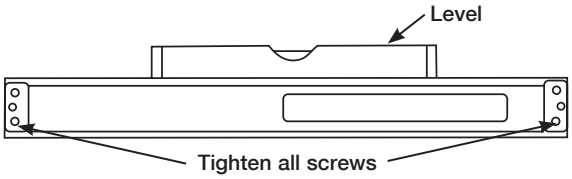

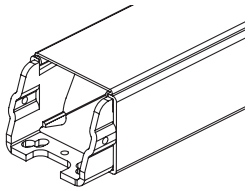

BOTH MOUNTING PLATES TIGHT AGAINST INSERT


THRU-BOLTING APPLICATION

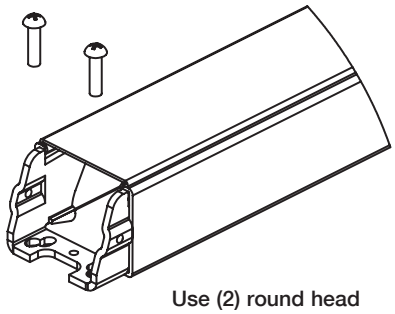



Use (2) round head screws and grommet nuts per mtg. plate

4 ATTACH END CAPS TO MOUNTING PLATES WITH COVER SCREWS

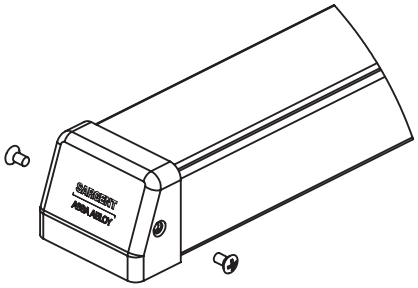

Copyright © 2009, 2012 Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.