SARGENT

ASSA ABLOY

INSTALLATION INSTRUCTIONS
8895 Exit Device Active Trim


FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • www.sargentlock.com

U.S. PATENT NO. 268003
CANADIAN PATENT NO. RD 1981


BEFORE STARTING

- Door should be fitted and hung
- mullion should be installed if used
- Available stock lengths

Length E – 32" door. No cut-off required. Can be cut to fit doors down to 24" wide.
Length F – 36" door. No cut-off required. Can be cut to fit doors down to 30" wide.
Length G – 48" door. No cut-off required. Can be cut to fit doors down to 36" wide.

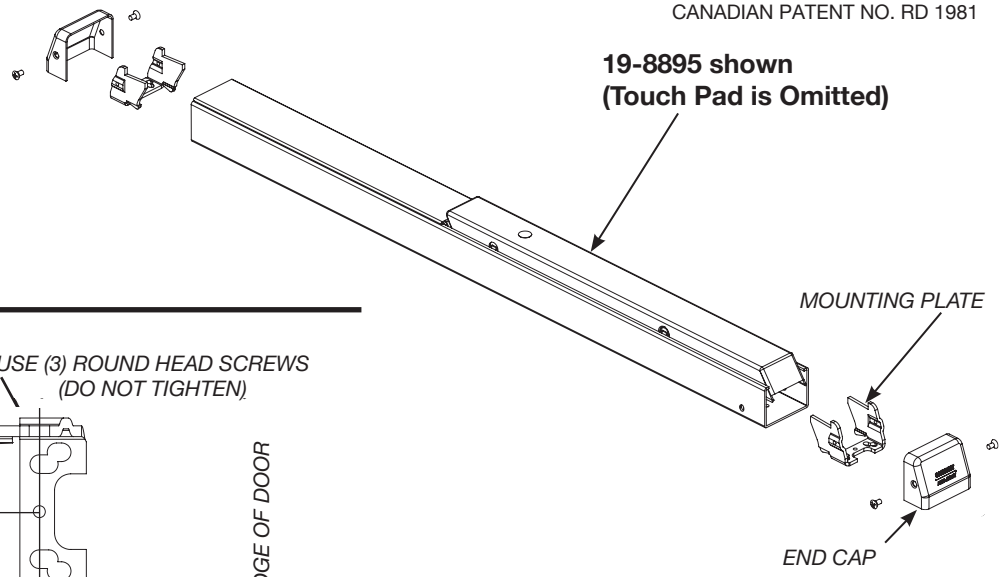


1 ATTACH MOUNTING PLATE TO DOOR

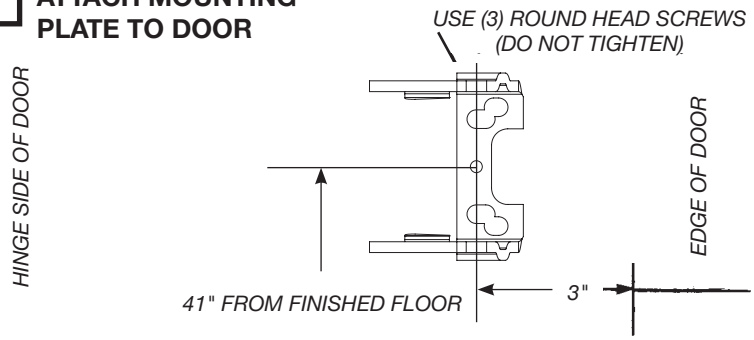


1-1/8" FOR 1-3/4" - 2-1/2" DOOR STILE
1-1/2" FOR 2-3/4" AND OVER DOOR STILE
FOR FLUSH DOORS THIS DIM. MAY BE CHANGED AS DESIRED.


2 IF CUTTING IS REQUIRED, DETERMINE CUT-OFF LENGTH "X" AS FOLLOWS:


FOR NARROW STILE DOORS (1-3/4" - 2-1/2" STILE) SUBTRACT 3" FROM DOOR SIZE.
FOR WIDE STILE (2-3/4" MIN. STILE) SUBTRACT 4" FROM DOOR SIZE.

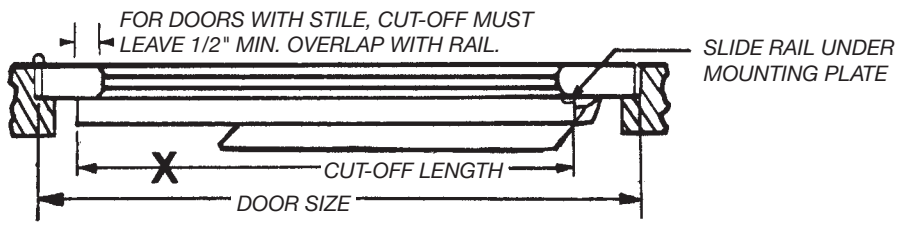

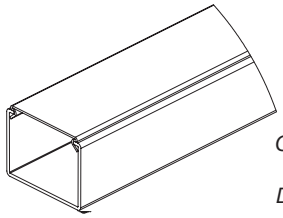


3 LEVEL RAIL AND ATTACH SECOND MOUNTING PLATE

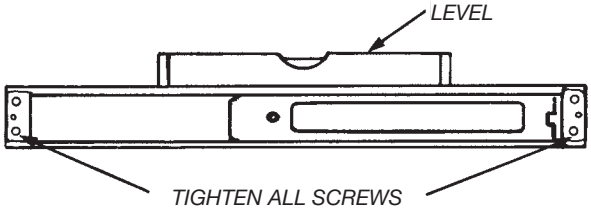

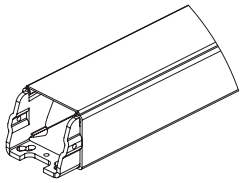


BOTH MOUNTING PLATES TIGHT AGAINST INSERT

THRU-BOLTING APPLICATION

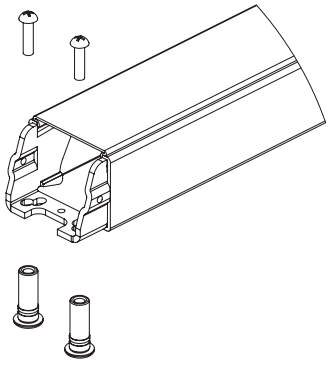

USE (2) ROUND HEAD SCREWS AND GROMMET NUTS PER MTG. PLATE

4 ATTACH END CAPS TO MOUNTING PLATES WITH COVER SCREWS

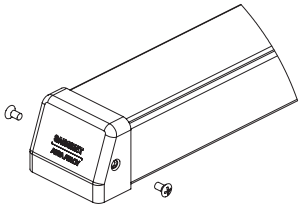

Copyright © 2012, Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.