
INSTALLATION INSTRUCTIONS
HC8800 & 12-HC8800 Rim Exit Mounting Shims

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • www.sargentlock.com

SARGENT®

ASSA ABLOY

IMPORTANT:
All HC8800 and 12-HC8800 Exit Devices must be installed with the shims between the chassis, mounting bracket and door. Use the chassis and mounting bracket screws provided. When thru-bolting ET trim use the (2) 1/4-20 x 2-7/8" screws provided.

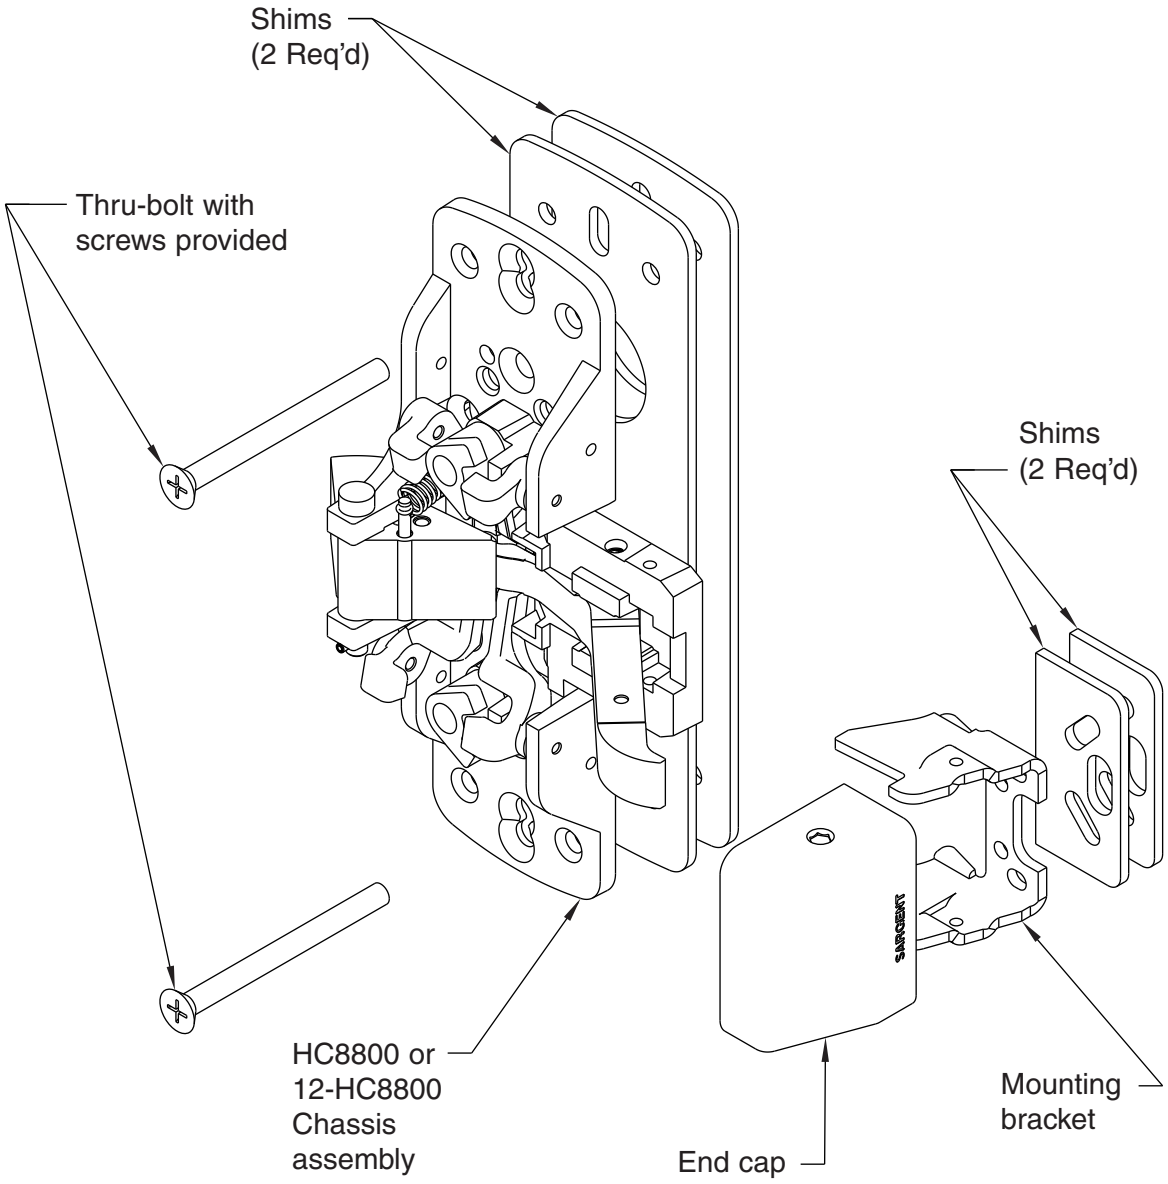

Copyright © 2009, Sargent Manufacturing Company,
an ASSA ABLOY Group company. All rights reserved.
Reproduction in whole or in part without the express written
permission of Sargent Manufacturing Company is prohibited.