
Installation Instructions

Corbin Russwin
ASSA ABLOY

Dummy Rail

PED5000 DB & PED5000 A DB Series Exit Devices

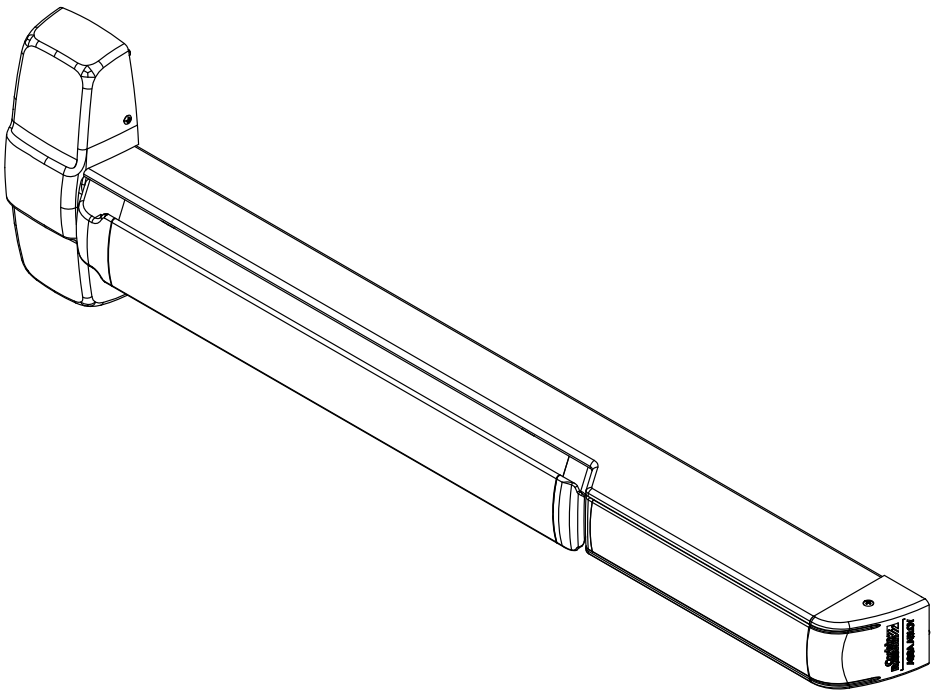

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM613 01/23





Experience a safer and more open world

Dummy Rail

PED5000 DB & PED5000 A DB Series Exit Devices

Installation Instructions

Screw Chart

DESCRIPTION	TOTAL QTY SUPPLIED	WHERE USED
 #10-24 X 3/4" FLAT HEAD MACHINE SCREW	4	(4) CHASSIS CORNER MOUNTING HOLES (METAL DOOR)
 #10 X 1-1/4" FLAT HEAD WOOD SCREW	4	(4) CHASSIS CORNER MOUNTING HOLES (WOOD DOOR)
 #10-24 X 3/4" ROUND HEAD MACHINE SCREW	2	(2) REAR MOUNTING PLATE (METAL DOOR)
 #10 X 1-1/4" ROUND HEAD WOOD SCREW	2	(2) REAR MOUNTING PLATE (WOOD DOOR)
 #8-32 X 5/16" W/ #6 OVAL HEAD MACHINE SCREW	4	(2) CHASSIS COVER FRAME SIDE (2) END CAP
 #8-32 X 5/8" W/ #6 OVAL HEAD MACHINE SCREW	2	(2) CHASSIS COVER RAIL SIDE
 1/4"-20 X 2-3/8" KNURLED FLAT HEAD MACHINE SCREW	2	(2) EXIT TRIM (IF USED)

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM613 01/23


Experience a safer and more open world

Dummy Rail

PED5000 DB & PED5000 A DB Series Exit Devices


Installation Instructions

1

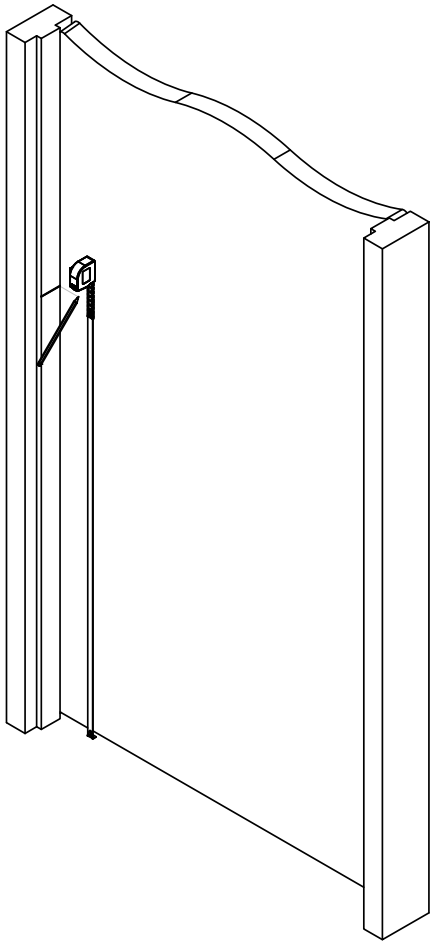

Measure 39-5/8” from the finished floor and mark door and frame

2

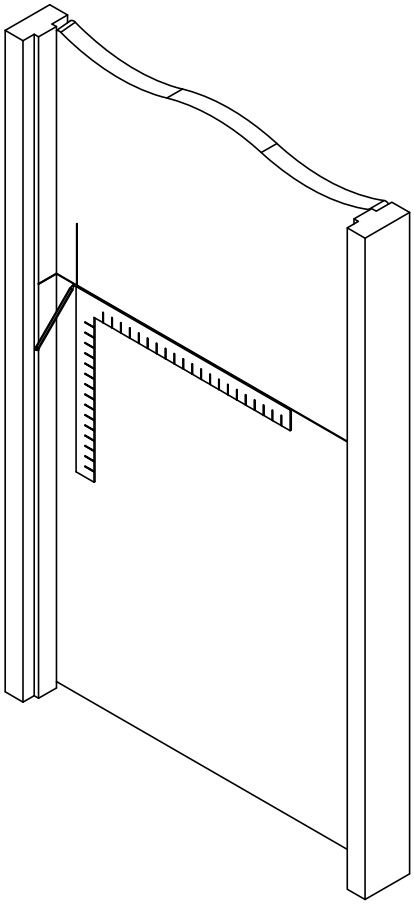

Using a square, create a horizontal and vertical centerline. Vertical centerline should be 2-3/4” off of the edge of the door or centered on the door stile.

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM613 01/23

Experience a safer and more open world


Dummy Rail

PED5000 DB & PED5000 A DB Series Exit Devices

Installation Instructions


Corbin Russwin
ASSA ABLOY

3

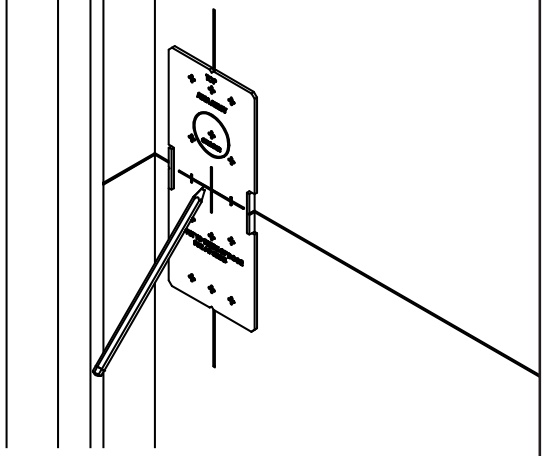


Align supplied plastic template with the centerlines. Mark chassis mounting holes.

4

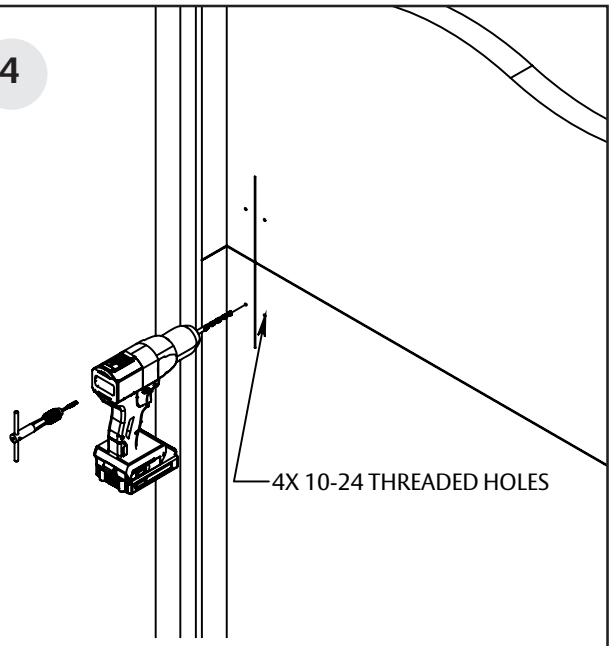


Prepare chassis mounting holes. Refer to supplied trim template as needed.

5

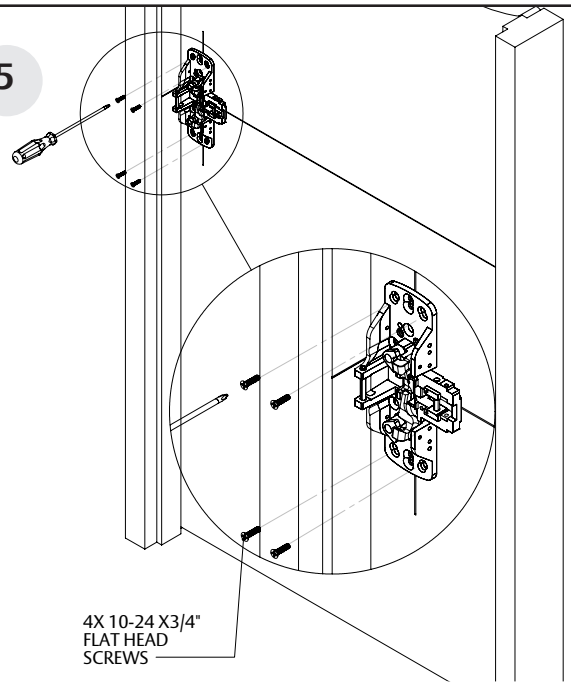

Install chassis using supplied mounting screws 10-24 x 3/4". **DO NOT FULLY TIGHTEN SCREWS.**

6

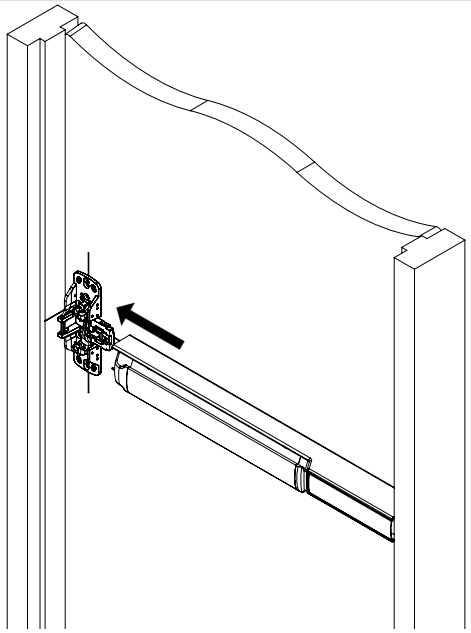

Slide rail assembly onto the chassis.

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com


Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.


Dummy Rail

PED5000 DB & PED5000 A DB Series Exit Devices

Installation Instructions


7

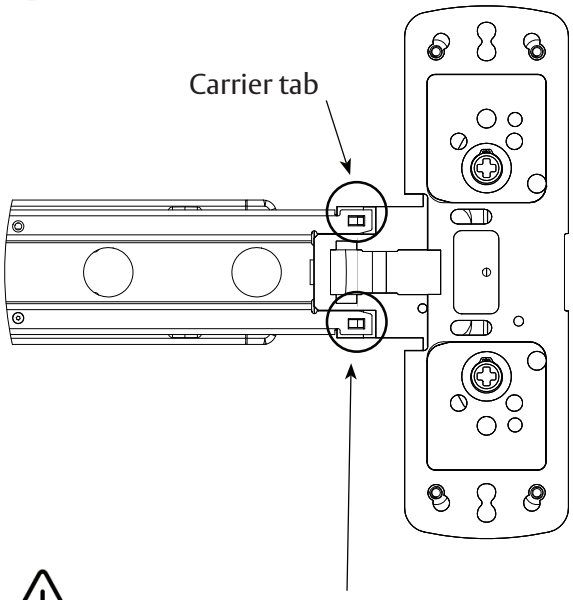


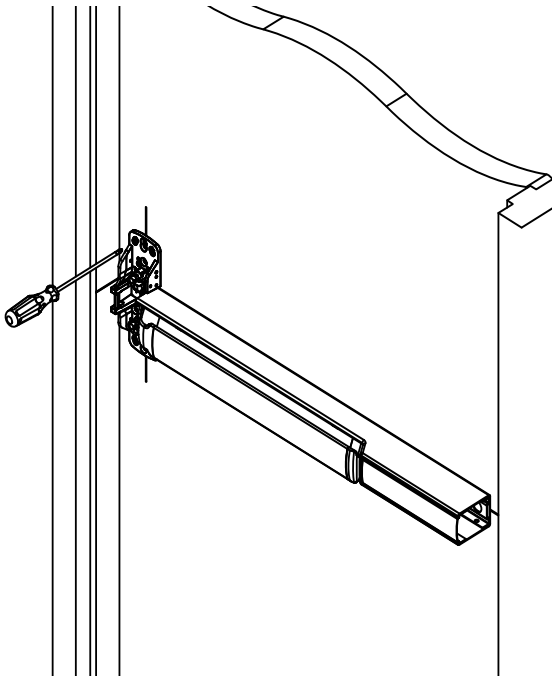

Ensure rail carrier tabs are aligned with the chassis, then fully tighten the chassis screws.

8

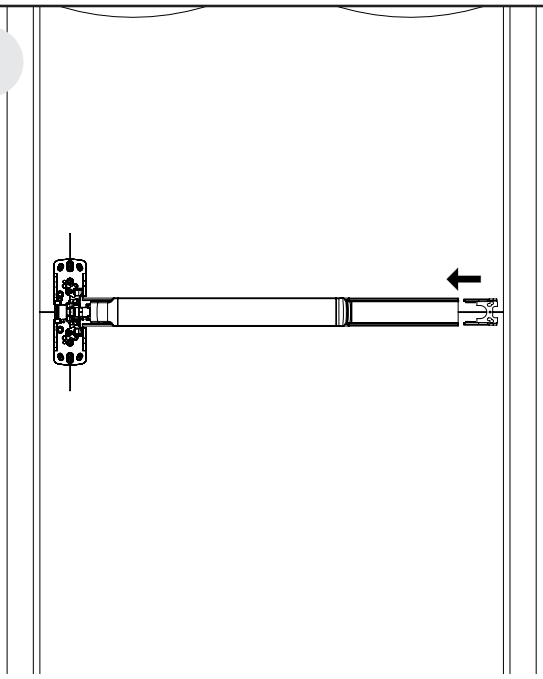

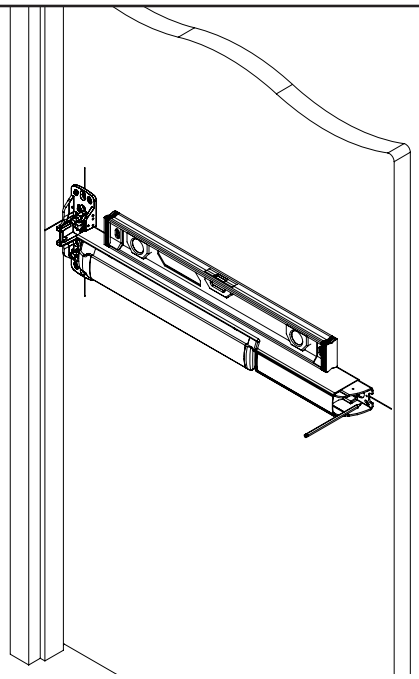

Insert the end cap bracket into the rail assembly. Level the rail and mark mounting holds using the bracket as a guide. Ensure rail overlaps door stile by 1/2".

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

Experience a safer and more open world


Dummy Rail

PED5000 DB & PED5000 A DB Series Exit Devices

Installation Instructions


Corbin Russwin
ASSA ABLOY

9

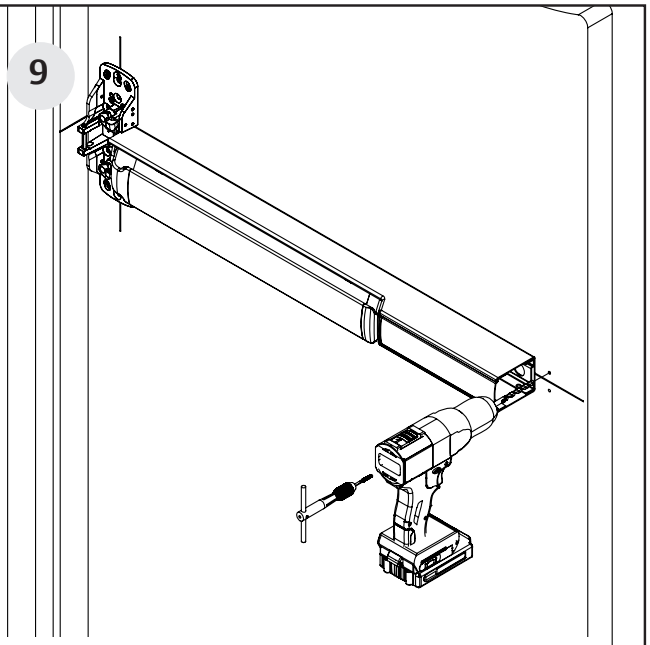


Drill and tap end cap bracket holes 10-24 (2 places).


10

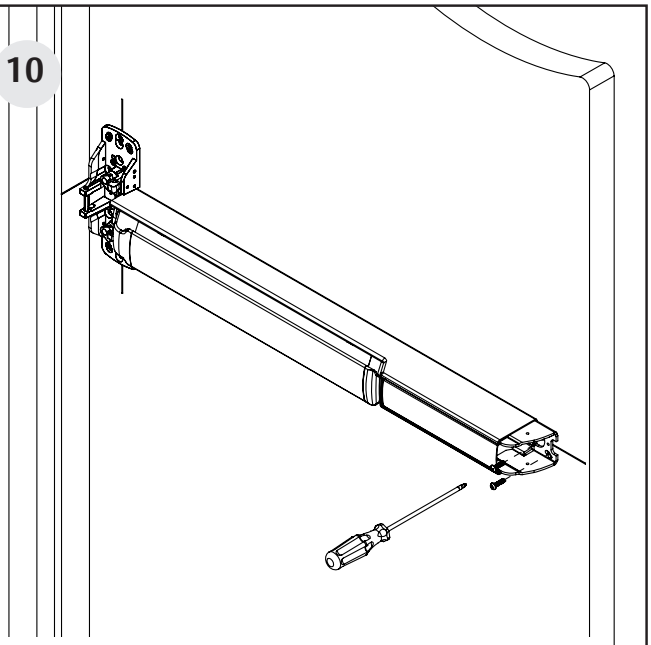

Install end cap bracket using round head Phillips 10-24 x 1" screws, supplied.

11

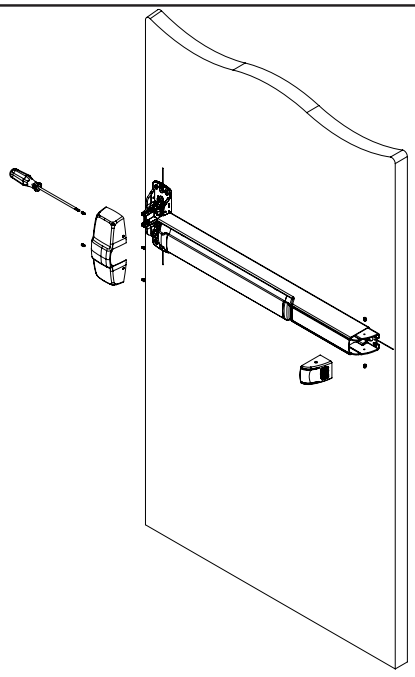

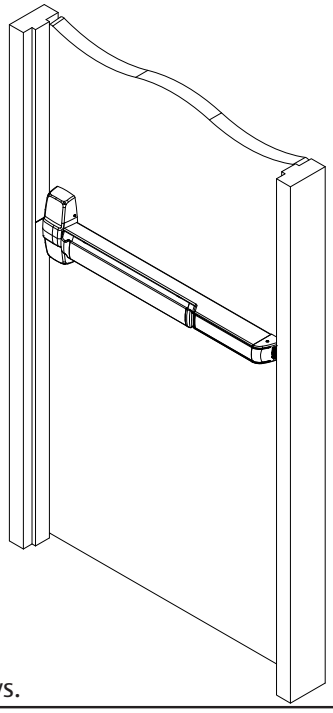

Install chassis cover and end cap using supplied 8-32 x 5/16" oval head screws.

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM613 01/23

Experience a safer and more open world

Dummy Rail

PED5000 DB & PED5000 A DB Series Exit Devices

Installation Instructions

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM613 01/23

Experience a safer
and more open world

Corbin Russwin

ASSA ABLOY

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM613 01/23

Experience a safer and more open world