
Installation Instructions

Corbin Russwin
ASSA ABLOY

PED5800 Series (A MD, MD, and AD)

Concealed Vertical Rod Exit Devices

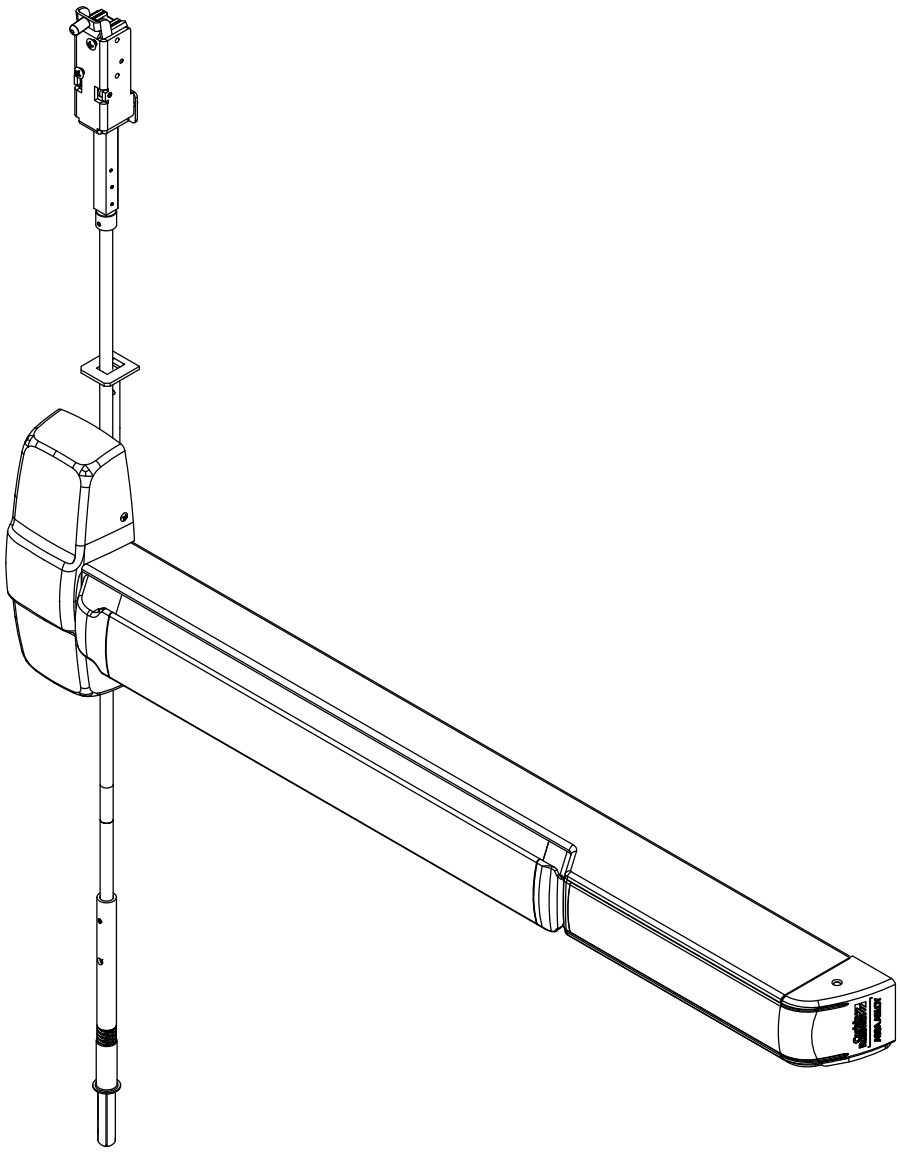

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.





1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

FM581 1/23

Experience a safer and more open world

Screw Chart

SCREW	TOTAL QTY SUPPLIED	WHERE USED
 AA #10-24 X 3/4" FLAT HEAD MACHINE SCREW	4	(4) CHASSIS CORNER MOUNTING HOLES
 EE #10-24 X 3/4" ROUND HEAD MACHINE SCREW	2	(2) REAR MOUNTING PLATE
 FF #10-24 X 3/8" FILLISTER HEAD MACHINE SCREW	1	(1) INNER CHASSIS TOP MOUNTING HOLE
 DD #10-24 X 3/8" OVAL HEAD MACHINE SCREW	4	(2) TOP CASE (2) BOTTOM PLATE (IF AD)
 GG 1/4"-20 X 1/2" FLAT HEAD MACHINE SCREW	2	(2) BOTTOM PLATE (MD OR FIRE RATED)
 HH #10-24 X 1/2" U'CUT FLAT HEAD MACHINE SCREW	5	(1) INNER CHASSIS BOTTOM MOUNTING HOLE (2) 640 OR 650 STRIKE, TOP (METAL FRAME) (2) 640 OR 650 STRIKE, BOTTOM (METAL FRAME)
 #10 X 1-1/4 FLAT HEAD WOOD SCREW	2	(2) 650 STRIKE, TOP (WOOD FRAME) (2) 650 STRIKE, BOTTOM (WOOD FRAME)
 1/4"-20 X 2" FLAT HEAD MACHINE SCREW W/ANCHOR	2	(2) 606 BOTTOM STRIKE (FIRE RATED)
 #8-32 X 5/16" W/ #6 OVAL HEAD MACHINE SCREW	4	(2) CHASSIS COVER FRAME SIDE (2) END CAP
 #8-32 X 5/8" W/ #6 OVAL HEAD MACHINE SCREW	2	(2) CHASSIS COVER RAIL SIDE
 1/4"-20 X 2-3/8" KNURLED FLAT HEAD MACHINE SCREW	2	(2) EXIT TRIM (IF USED)

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.


PED5800 Series (A MD, MD, AD)


Concealed Vertical Rod Exit Devices

Installation Instructions


Equipment Needed

Tools

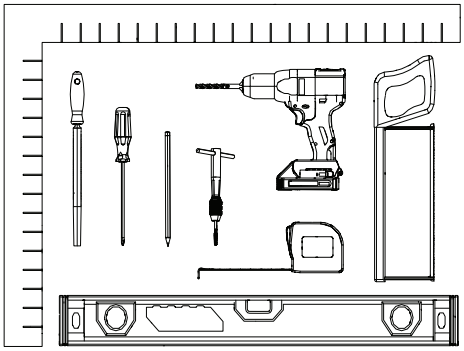




Support Block (Provided)



Rail Cutting Guide (Provided)

Strike Packs

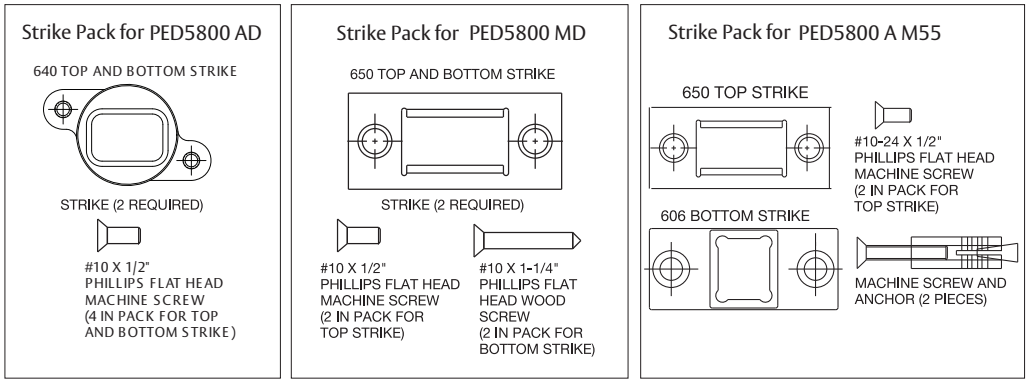

Before installation:

1. Fit and hang door.
2. Check the box's label for the size of the exit device.

The surface of the door where the exit device is to be applied must be flush. Clear away any raised projections to allow exit device to rest on the flat surface of the door. If shim kit is required, contact your distributor.

Note: Please refer to trim and other installation instructions provided in the box.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.


Experience a safer and more open world


PED5800 Series (A MD, MD, AD)


Concealed Vertical Rod Exit Devices


Installation Instructions

Template PE5800 AD, PE5800 AD M55, PED5800 MD, PED5800 MD M55, PED5800 A MD, PED5800 A MD M55

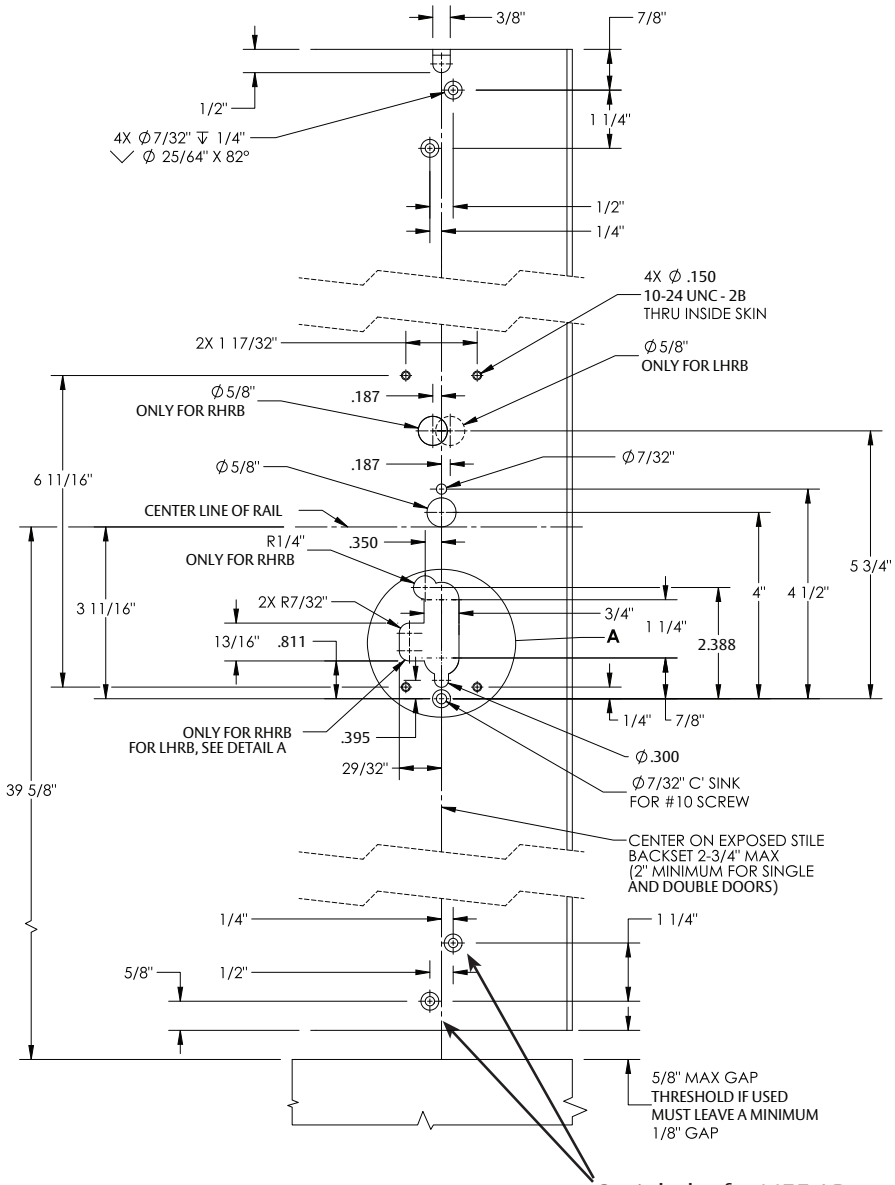

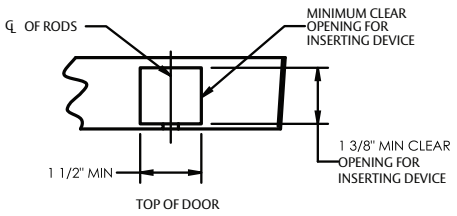

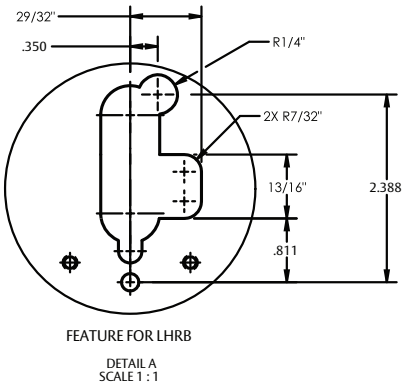

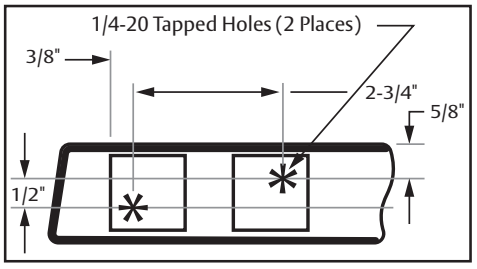

For MD-bottom plate prep. May be omitted for M55 MD versions.

Omit holes for M55 AD version and all MD versions.

NOTES:
1. DOOR PREPARATION SHOWN FOR INSIDE DOOR ONLY.
2. IF OUTSIDE PULL AND/OR OUTSIDE CONTROL IS USED, SEE APPROPRIATE DOOR TEMPLATE FOR OUTSIDE DOOR PREP.
3. *MIN BACKSET FOR SINGLE DOOR IS BASED ON 1/2" FRAME STOP. LARGER FRAME STOPS REQUIRE LARGER BACKSET.
4. SURFACE OF DOOR WHERE EXIT DEVICE IS TO BE APPLIED, MUST BE FLUSH.
5. WE RECOMENDED THAT ALL TAPPED HOLES BE DRILLED AND TAPPED IN FIELD.
6. TOLERANCE ALL FRACTIONAL DIMENSIONS ±1/64".
7. BOTTOM AND TOP STRIKES MUST BE USED. SEE STRIKE TEMPLATE NO. MEDT6.
8. SEE TEMPLATE NO. MEDT7 FOR AUX CONTROL IF REQ'D.
9. FOR DEVICES WITH NO BOTTOM ROD, HOLES FOR BOTTOM CASE ARE NOT REQUIRED.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.


Experience a safer and more open world


PED5800 Series (A MD, MD, AD)

Concealed Vertical Rod Exit Devices


Installation Instructions

Exploded View

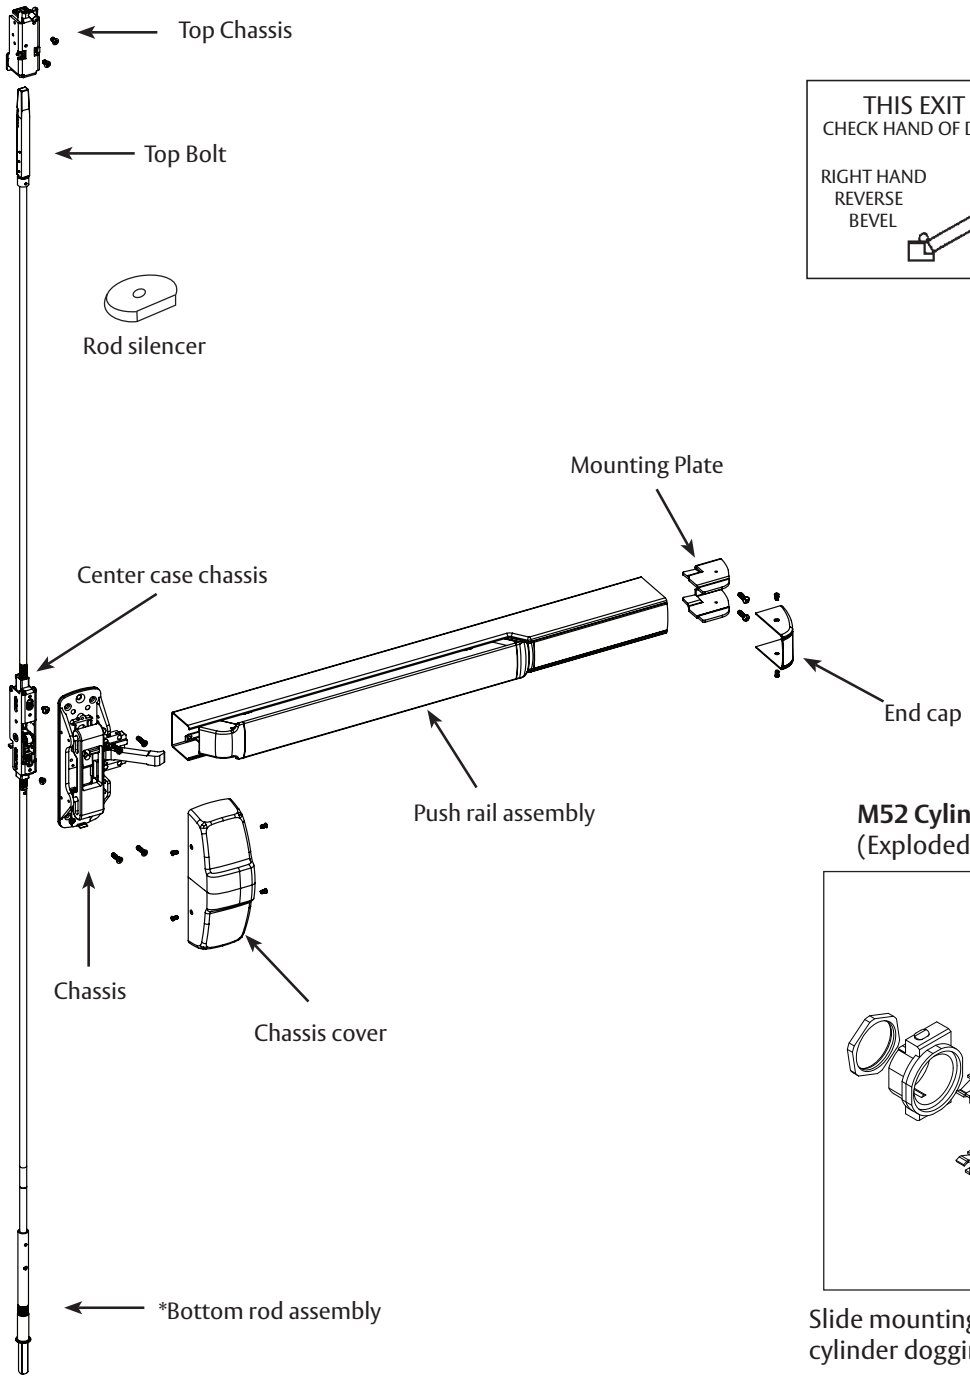

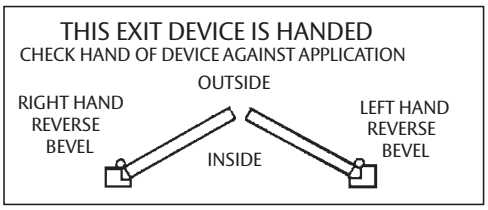

M52 Cylinder Lockdown
(Exploded View For Clarity)

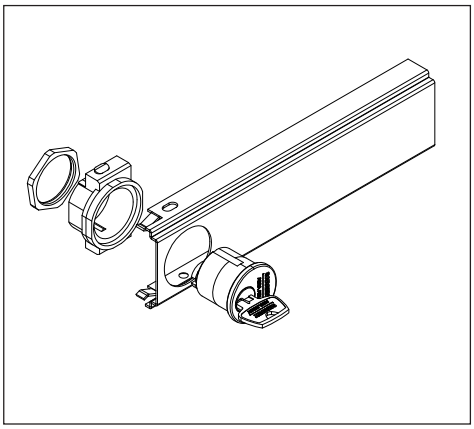

Slide mounting rail insert with M52 cylinder dogging into mounting rail.

*Note: The PED5800 AD M55, PED5800 MD M55 & the PED5800 A MD M55 do not have a bottom rod assembly.


FM581 1/23

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world

1

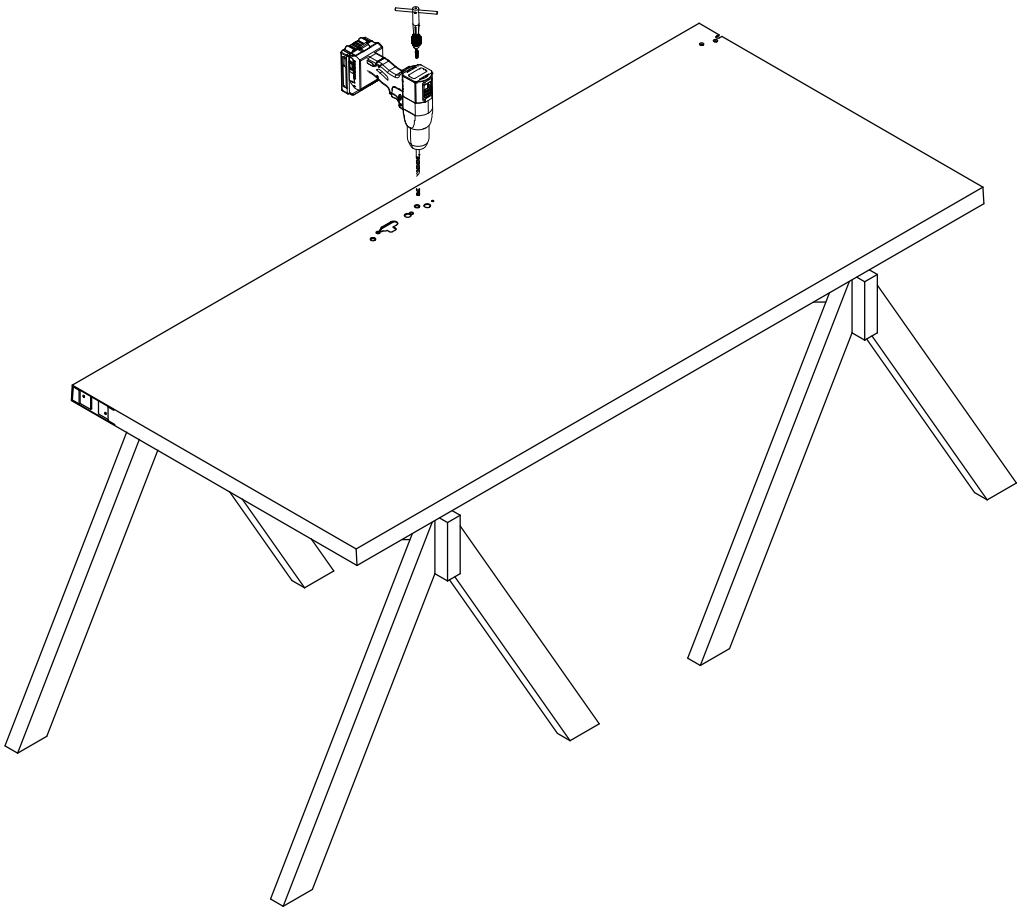


Remove door from frame, and prepare the door per template.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world

2

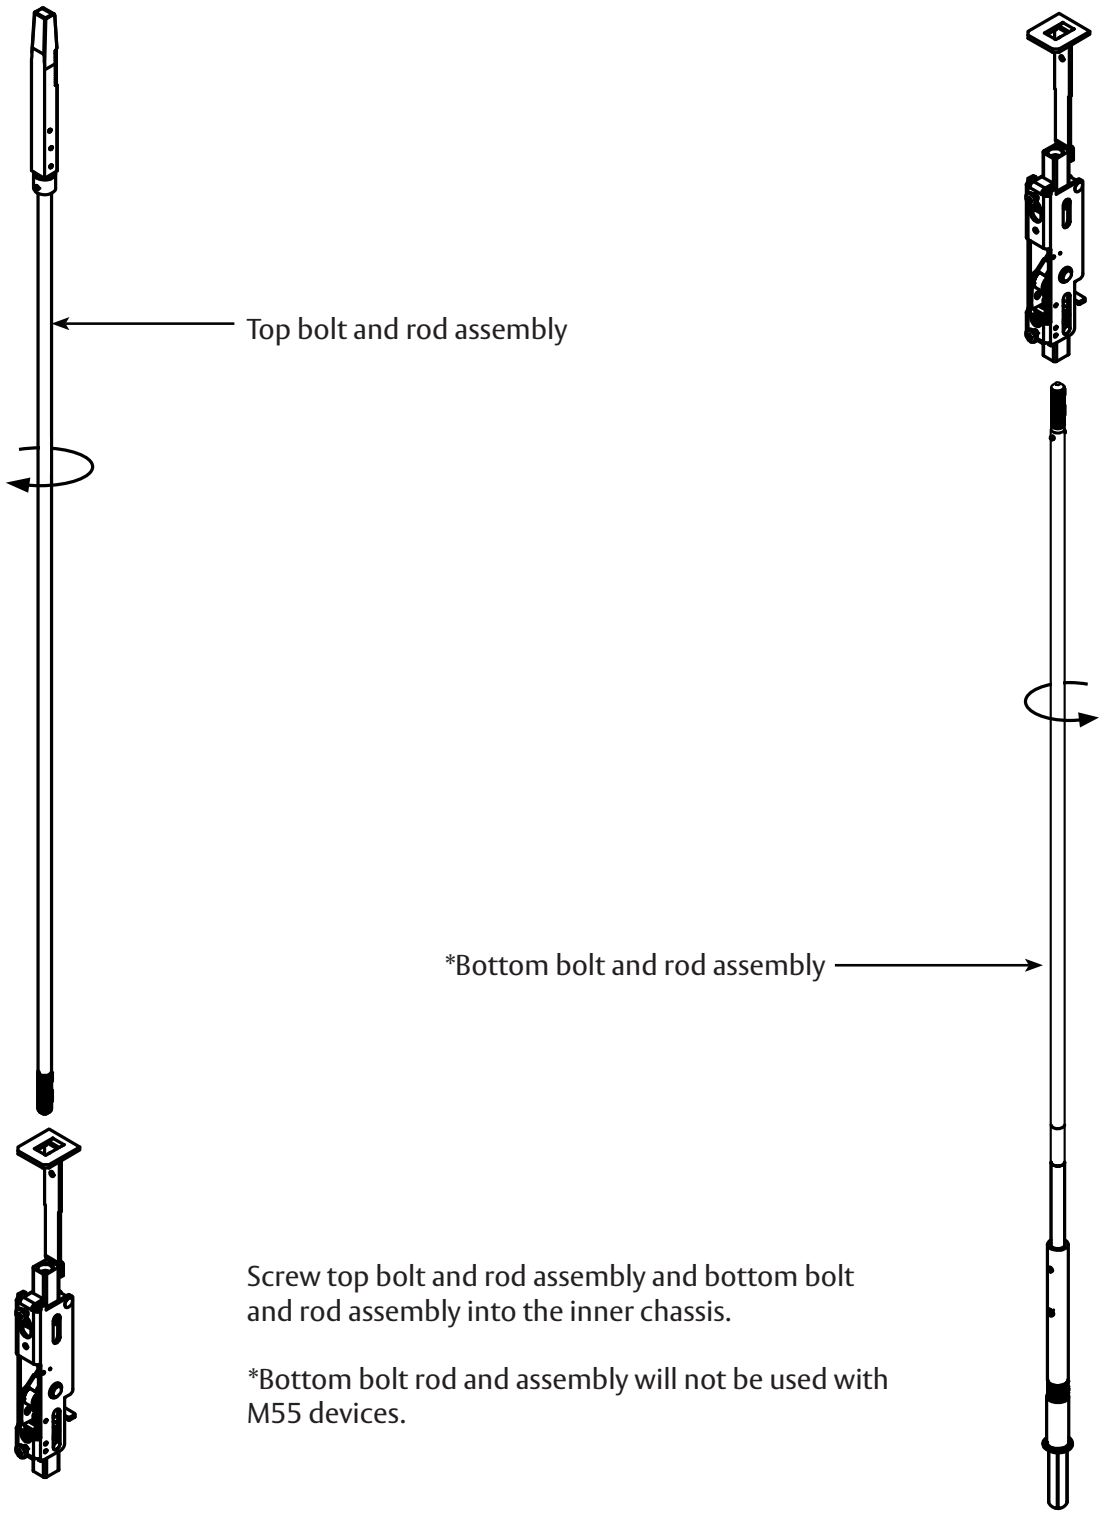


Screw top bolt and rod assembly and bottom bolt and rod assembly into the inner chassis.

*Bottom bolt rod and assembly will not be used with M55 devices.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

3

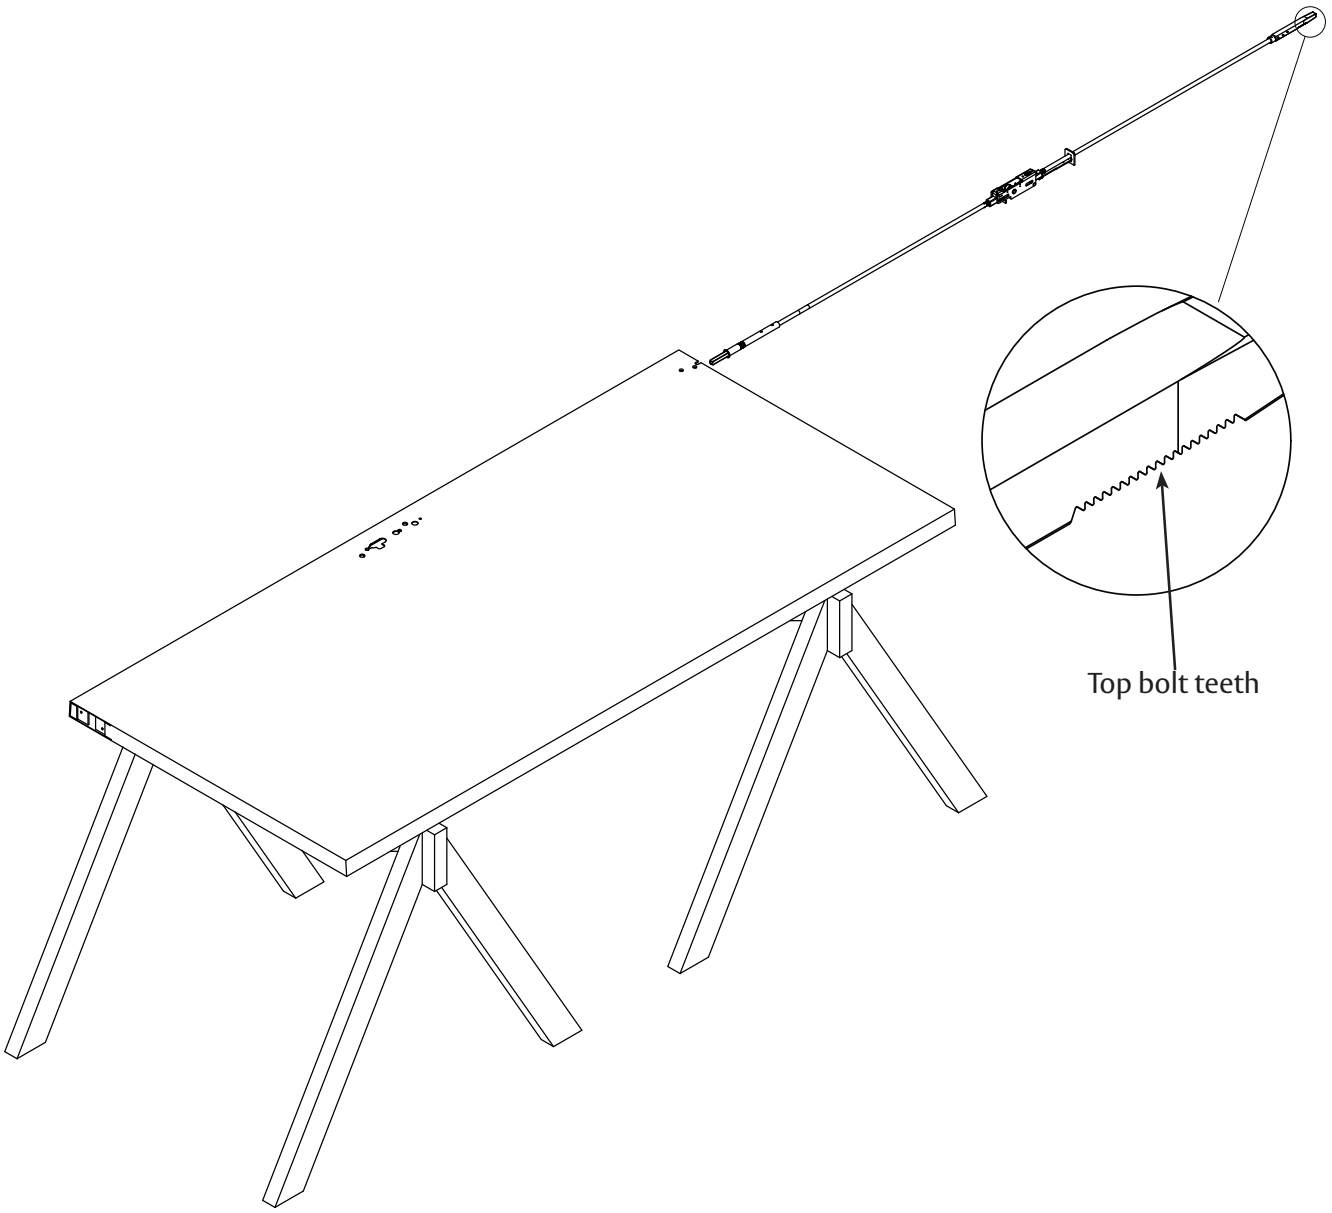


Feed rod and inner chassis assembly into the door. Ensure teeth face down and top bolt teeth are opposite the inside door prep.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.


Experience a safer and more open world

4

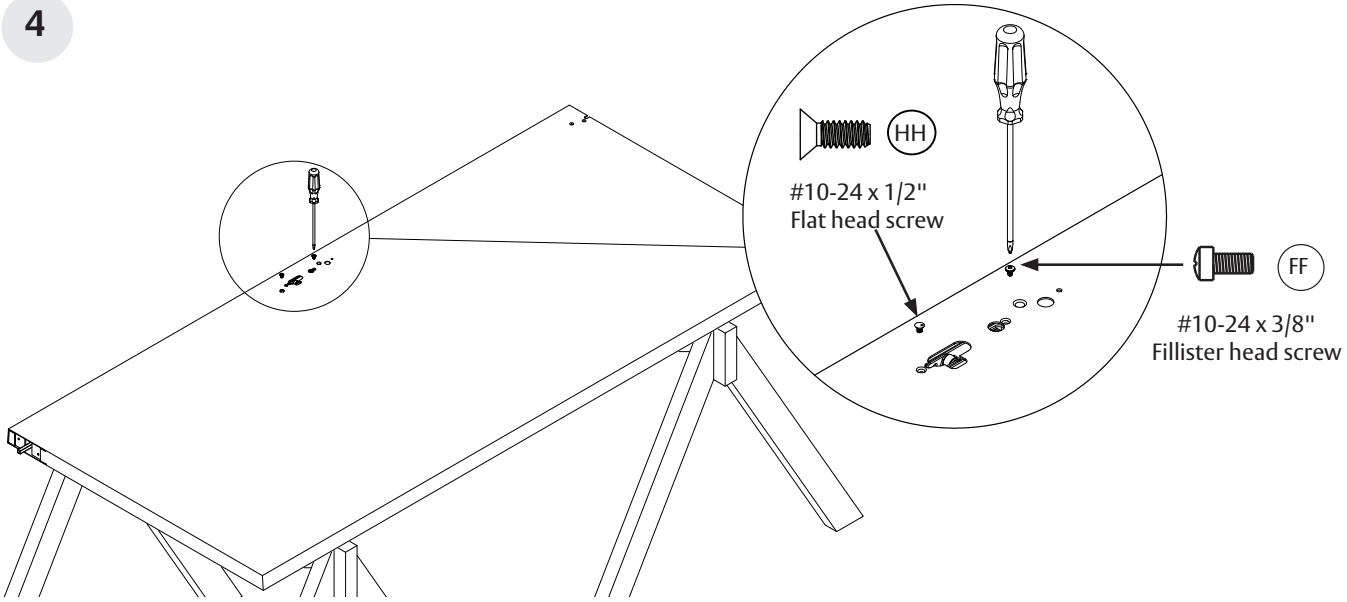

Attach inner case chassis to the door with (1) #10-24 x 1/2" flat head screw (HH) and secure with (1) #10-24 x 3/8 fillister head machine screw (FF). If PT Series trim is being used, it must be installed at this point. See trim instructions for details.

5

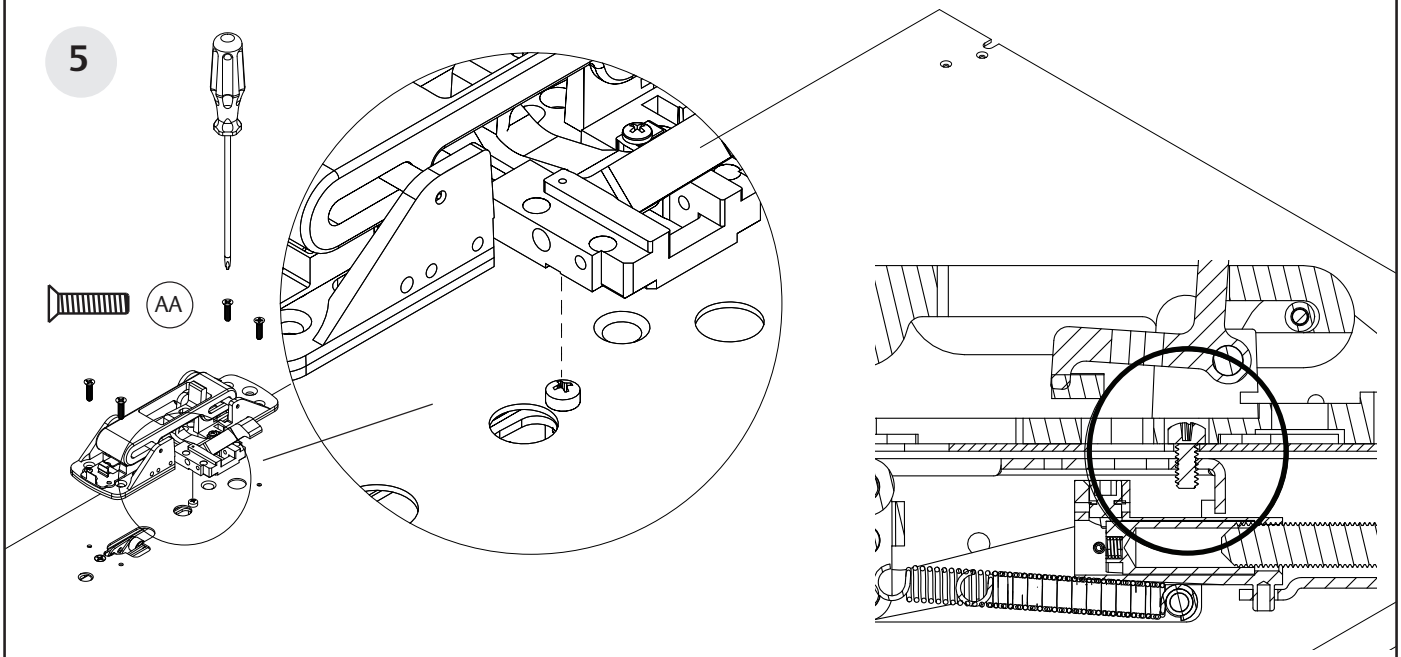

Locate chassis on the fillister head screw (FF). Attach to the door with (4) #10-24 x 3/4 flat head screws (AA). **Do not fully tighten screws.**

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

6



Adjusting the top bolt and rod assembly

- 1/8” gap or less between door top and frame: Rotate bolt to make it even with the top of the door.
- 1/8” gap or greater: Bolt must extend above the door, equal to the gap, minus 1/8”.


Adjusting the bottom bolt and rod assembly (Not needed for M55 exit devices)

- 1/8” gap or less between door bottom and high point: Rotate bolt to make it even with the top of the door.
- 1/8” gap or greater: Bolt must extend below the door, equal to the gap, minus 1/8”.

Note: Rod must be retracted while adjusting bolt projection. Depress chassis lift arm to retract top bolt and rod assembly.

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

7

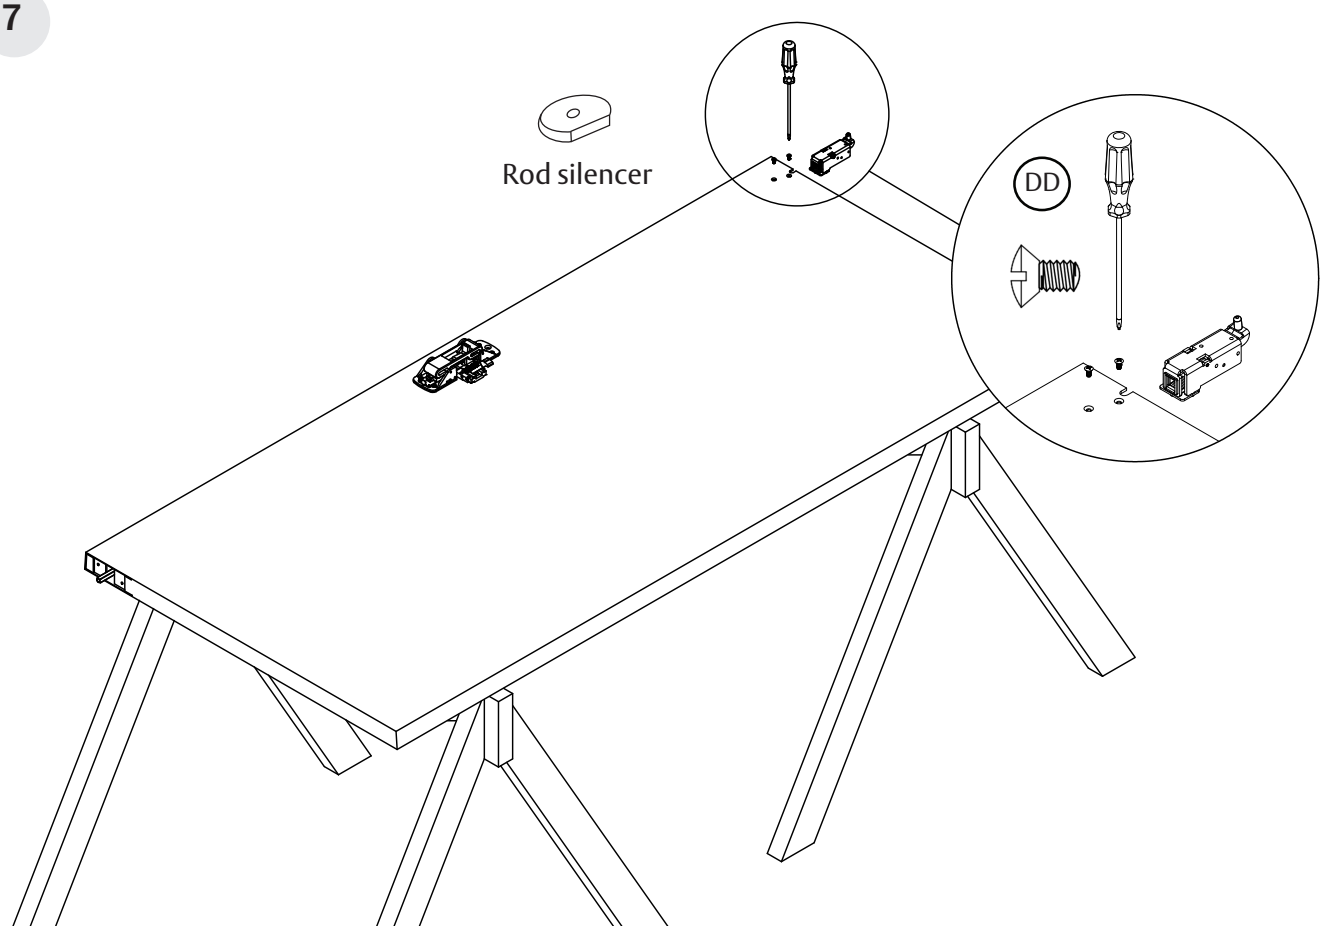

Slide rod silencer over the top bolt onto rod, followed by top case. Secure top case with (2) #10-24 x 3/8 oval head screws (DD).

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.


PED5800 Series (A MD, MD, AD)

Concealed Vertical Rod Exit Devices


Installation Instructions

8


DD  For AD application

GG  For MD and A MD application

For PED5800 AD Bottom Bolt
Install bottom plate over the bottom bolt and secure with two #10-24 x 3/8" oval head screws (DD).

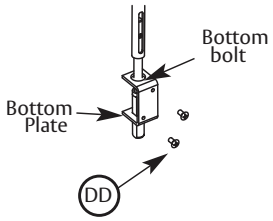

For PED5800 MD & PED5800 A MD Bottom Bolt
Install bottom plate over the bottom bolt and secure with two 1/4-20 x 1/2" flat head screws (GG).

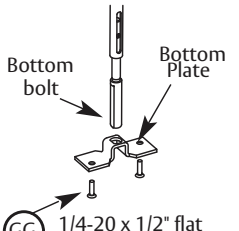

*Bottom plate and screws not included with M55 option.


Install bottom bracket over the bottom bolt and secure with two 1/4-20 x 1/2” flat head screws (GG).
For PED5800 AD use (2) #10-24 x 3/8 oval head screws (DD) on the face of the door.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world

9

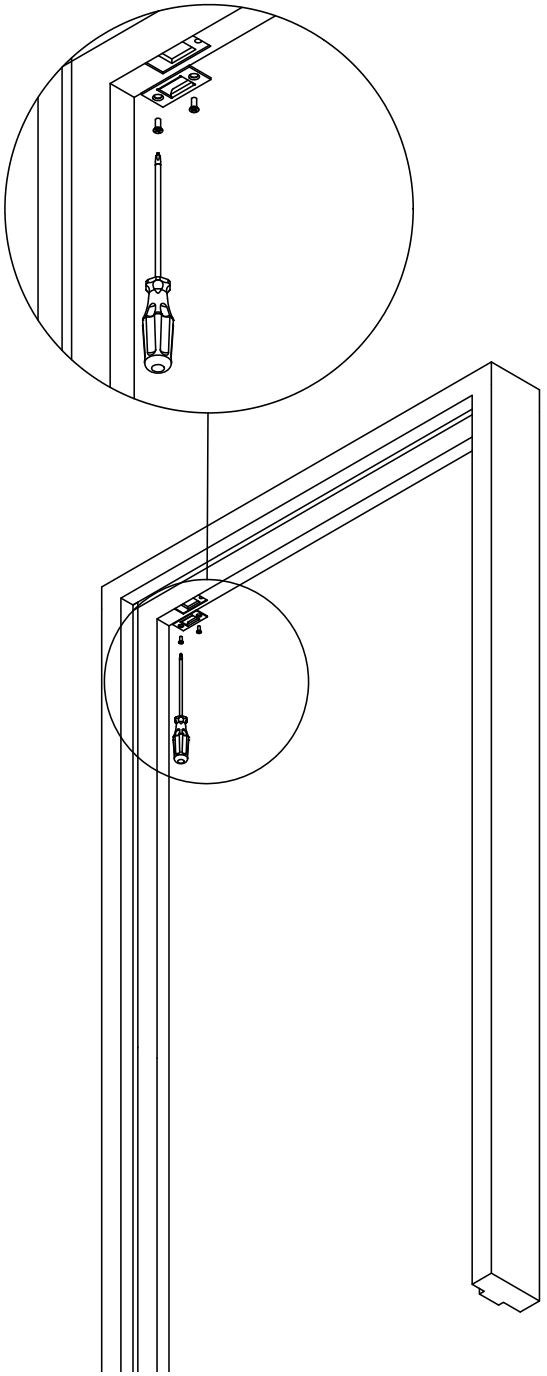


- For PED5800 MD and PED5800 A MD: Attach 650 strike to frame with (2) #10-24 x 1/2" flat head screws.
- For PED5800 AD: Attach 640 strike to frame with (2) #10-24 x 1/2" flat head screws.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.


Experience a safer and more open world

10

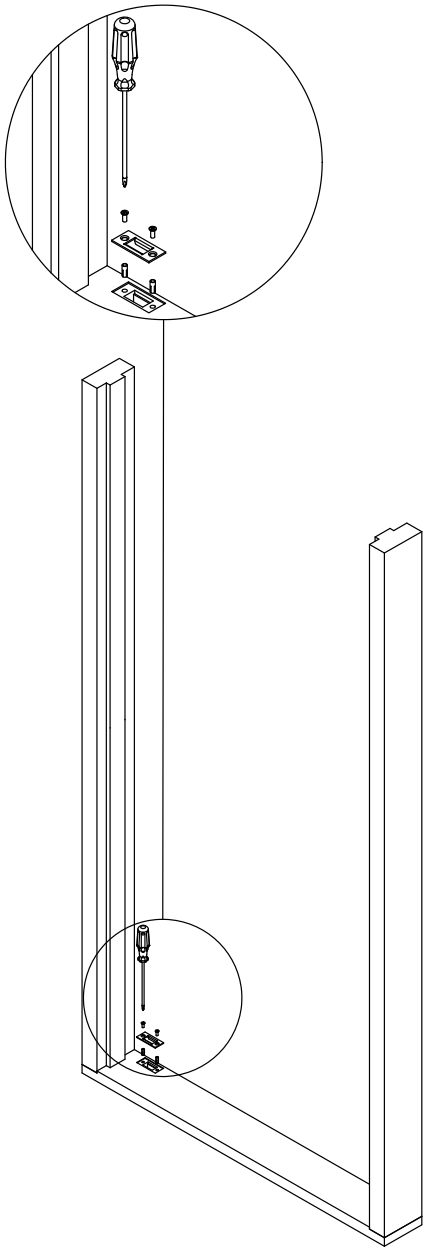

- For PED5800 MD: Attach 650 bottom strike to floor with anchors and supplied fasteners.
- For PED5800 A MD: Attach 606 bottom strike to floor with anchors and supplied fasteners.
- For PED5800 AD: Attach 640 strike to threshold with supplied fasteners.

11

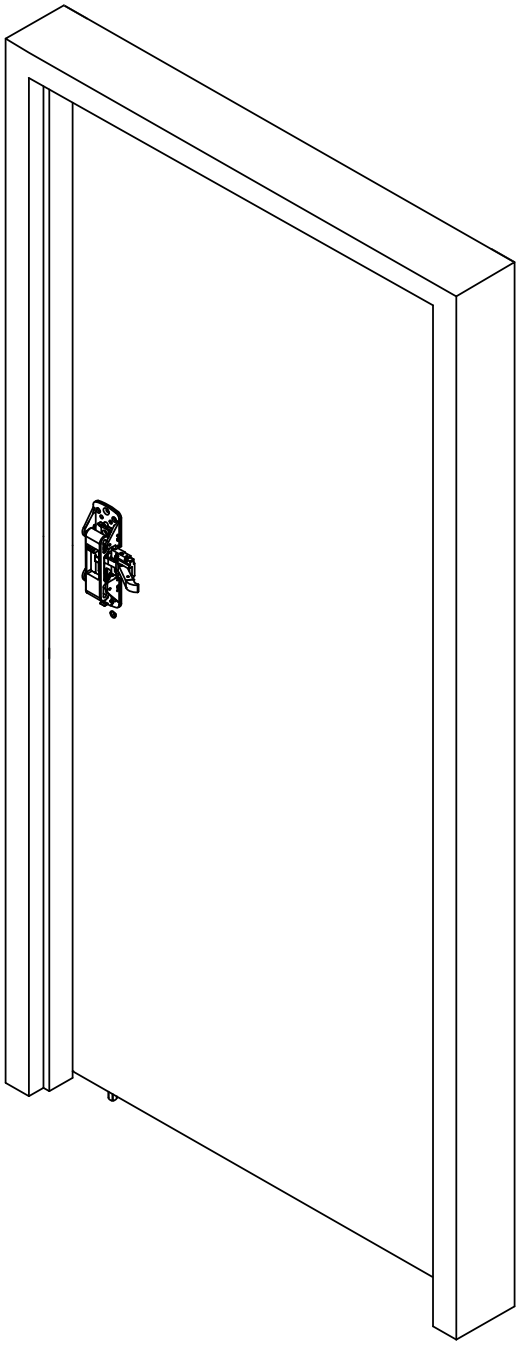

Reinstall door into the frame.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world

Rail cutting guide


If the rail doesn't need to be cut, continue to page 17, step 12.
If the rail must be cut, follow these steps on page 15 and 16.


Refer to the individual exit device installation instructions for rail cutting requirements / restrictions. Instructions will vary based on device type and options.

- Determine cut off dimension "X" by subtracting 2-7/8" from dimension "Y". Mark cut off point on mounting rail. (See below.)


⚠ Do not cut closer than 1-5/8" from the the front edge of the rail insert.

Information for Cutting Rails		
Rail Sizes	Door Widths	
	Standard	Minimum
W032	32"	24"
W036 (Std.)	36"	33"
W042	42"	37"
W048	48"	43"

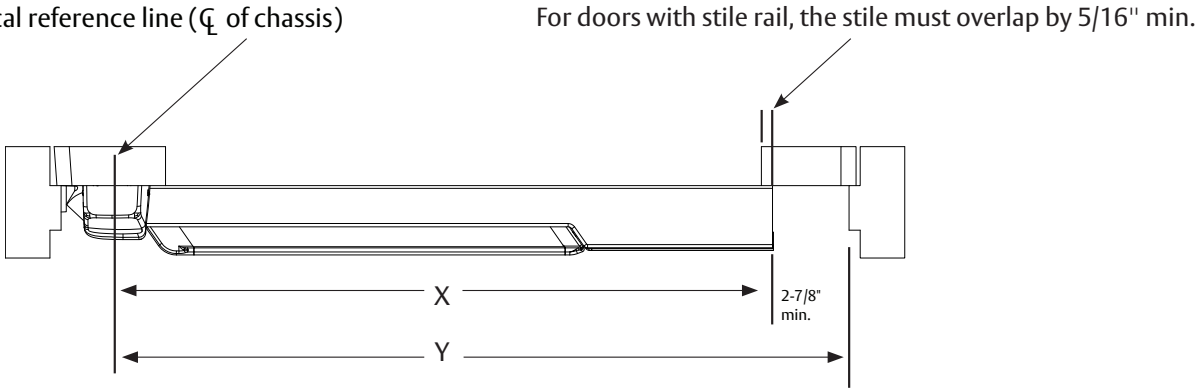

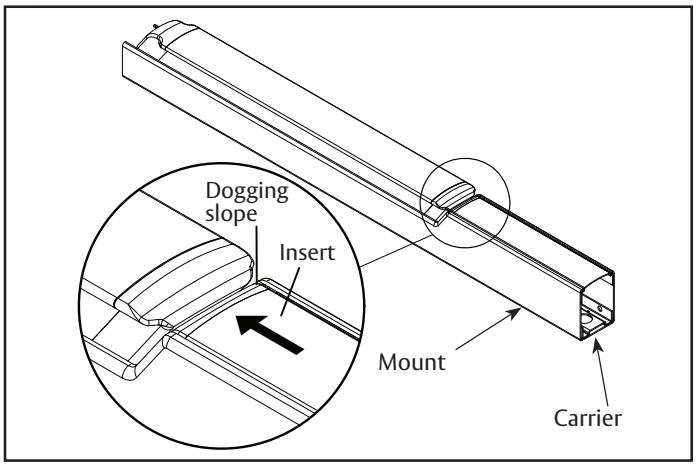

A. Ensure there isn't a gap between the insert and the dogging slope, and the carrier is flush with the mount.

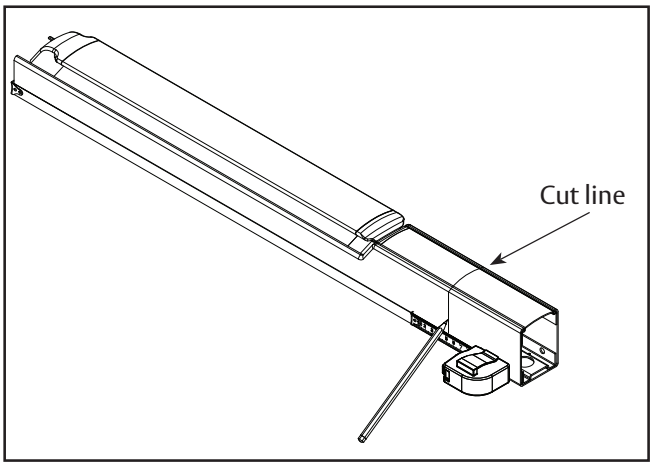


B. Mark rail at the required cut length.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com


Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world


Rail cutting guide, continued.

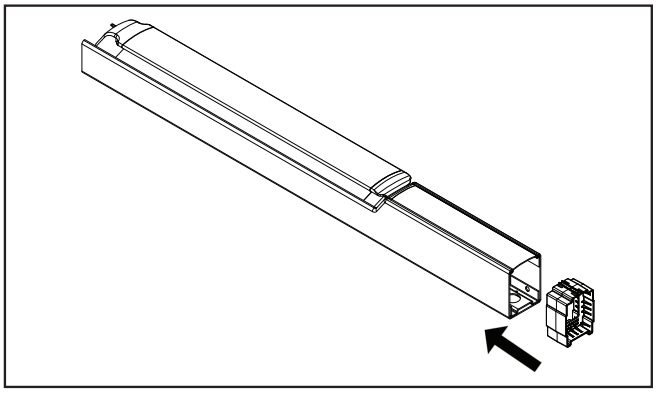


C. Ensure plastic insert support is installed under the cut line.

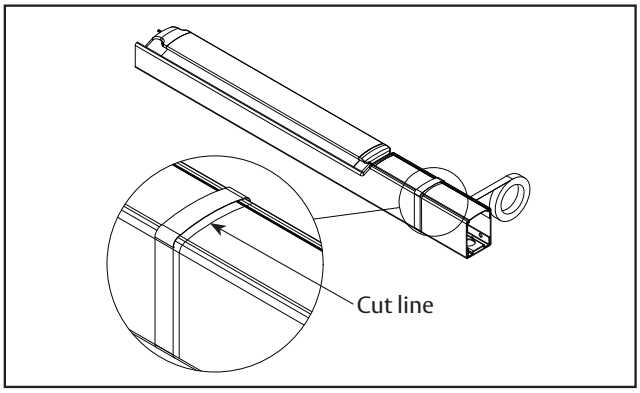


D. Wrap the rail and insert in masking tape, as shown.

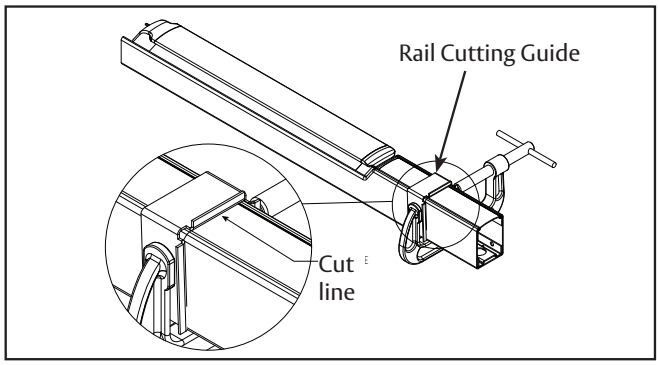

E. Place the rail cutting guide over the masking tape and align it with the cut line. Clamp the cut guide to the rail using a C-clamp.

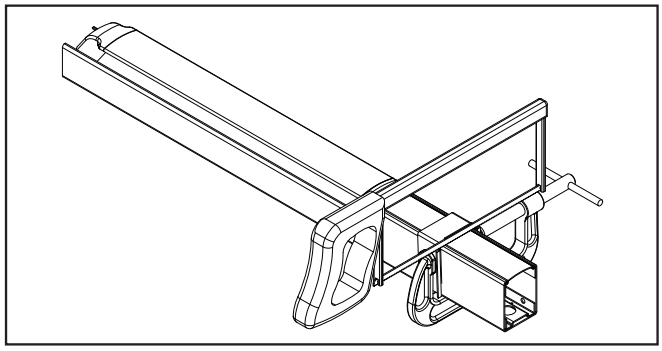


F. Using a hack saw with a new blade or a chop saw with a metal cutting blade, cut the rail, ensuring that the blade stays pressed against the rail cutting guide.

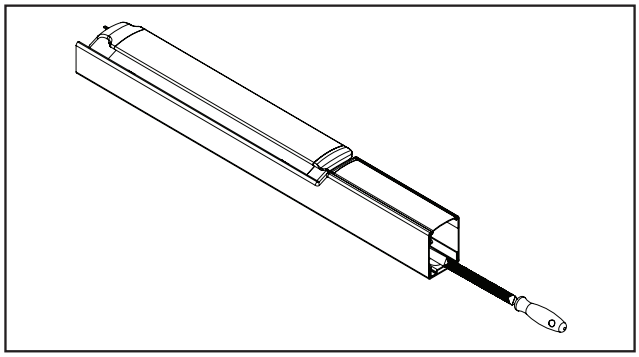

G. Deburr and smooth all cut edges with a file.


Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

12

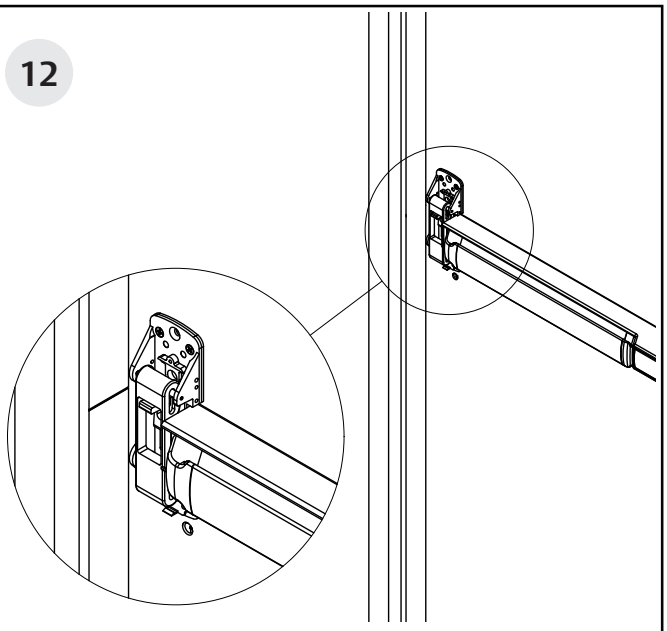


Slide the rail assembly on the chassis. Tighten chassis mounting screws.

13

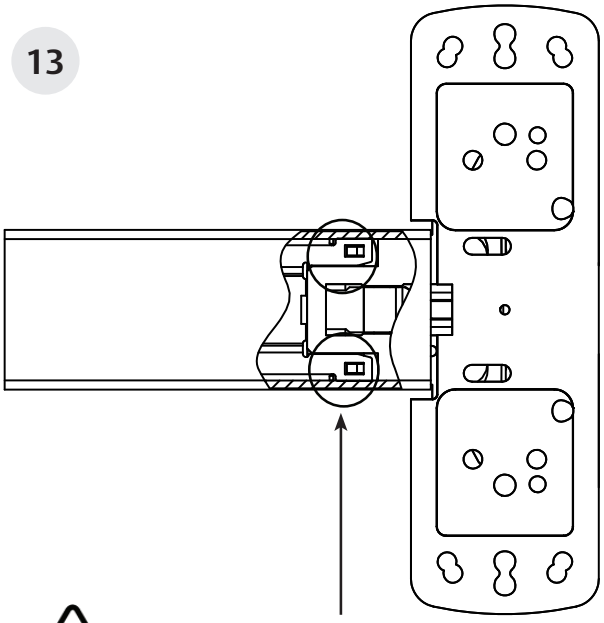


Ensure rail carrier tabs are aligned with chassis.

14

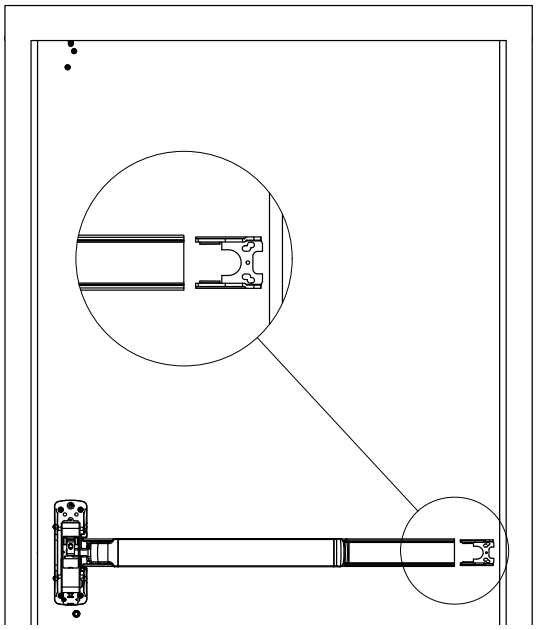

Insert the mounting bracket in the end of the rail.

15

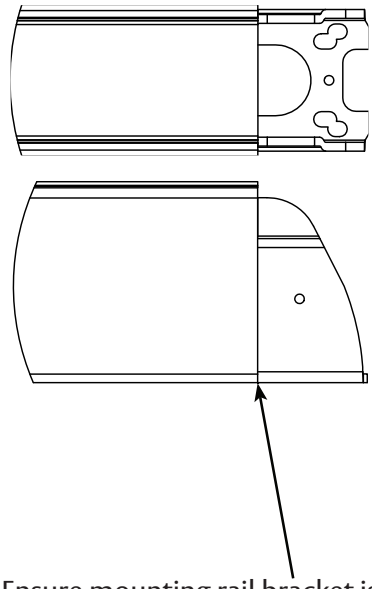


Ensure mounting rail bracket is against the rail without a gap.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com


Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

16

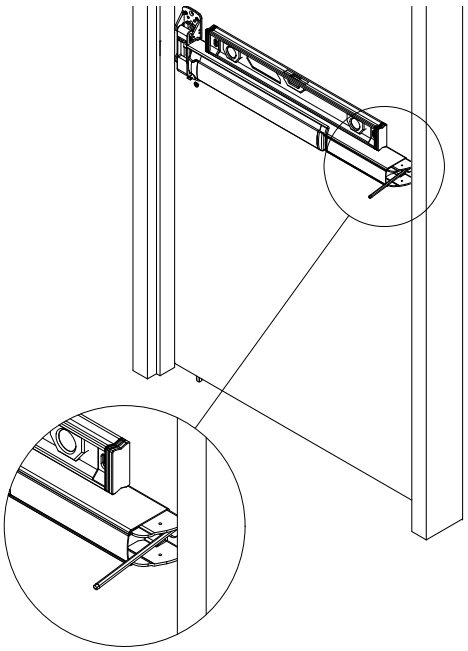


Level the rail and mark mounting holes, using the bracket as a guide.

17

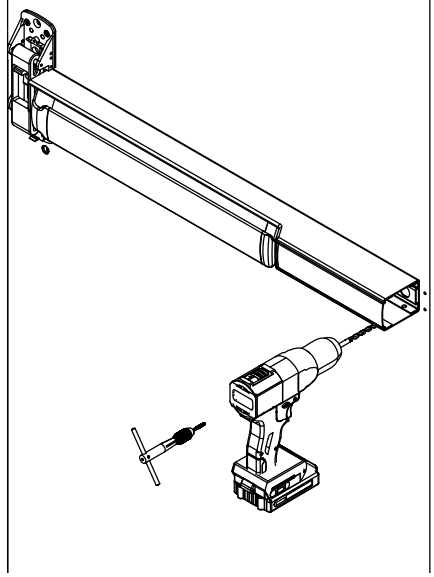

Drill and tap end cap bracket holes #10-24 (2 Places).

18

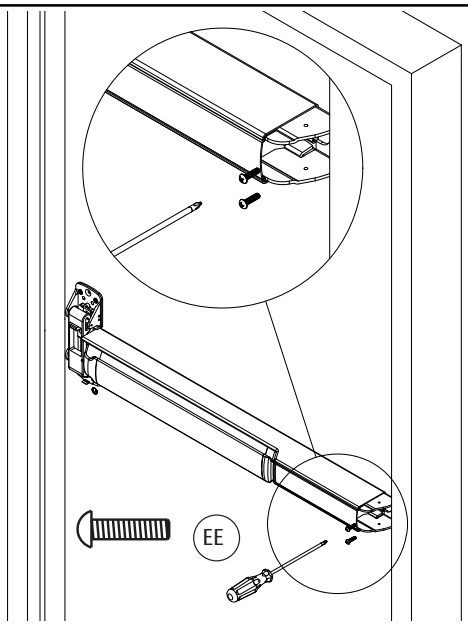


Atttach mounting bracket and secure rail assembly to door with #10-24 x 3/4” screws (EE).

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world

19

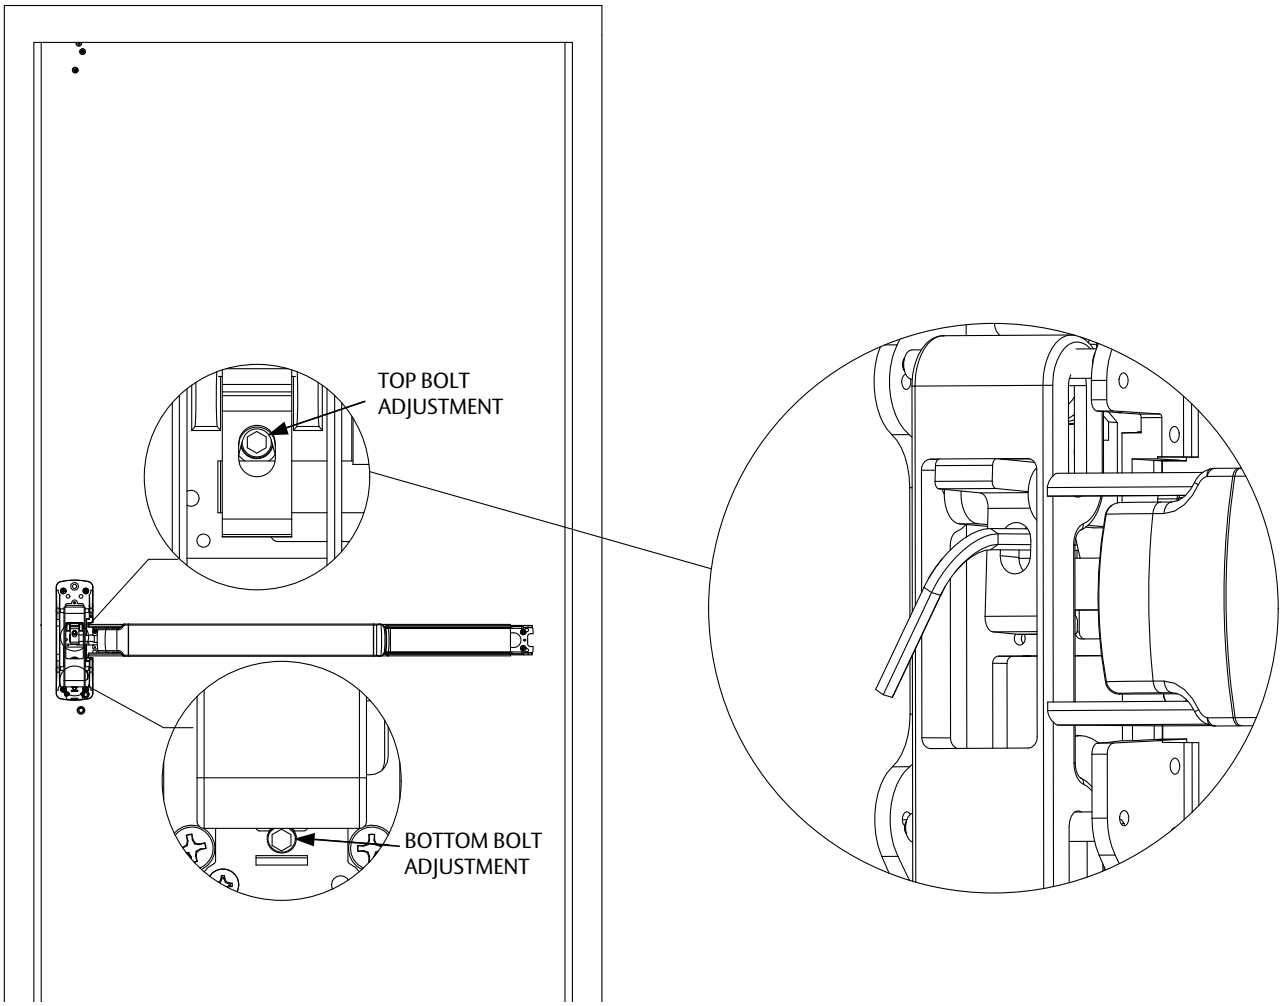

If adjustments are needed, before closing the door check the following:

- Push rail in to retract bolts.
- Bolts stay retracted (hold back).
- Bolts release when the door closes. The button inside the top of the door hits the frame.
- The bolt engages with the strike 1/4" - 5/16".

For final adjustment close door to adjust.

- Use 5/32" Allen wrench to adjust projection. Turn clockwise to adjust the bolt back into the door. Turn counter clockwise to extend the bolt.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com


Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world

Corbin Russwin


ASSA ABLOY

20

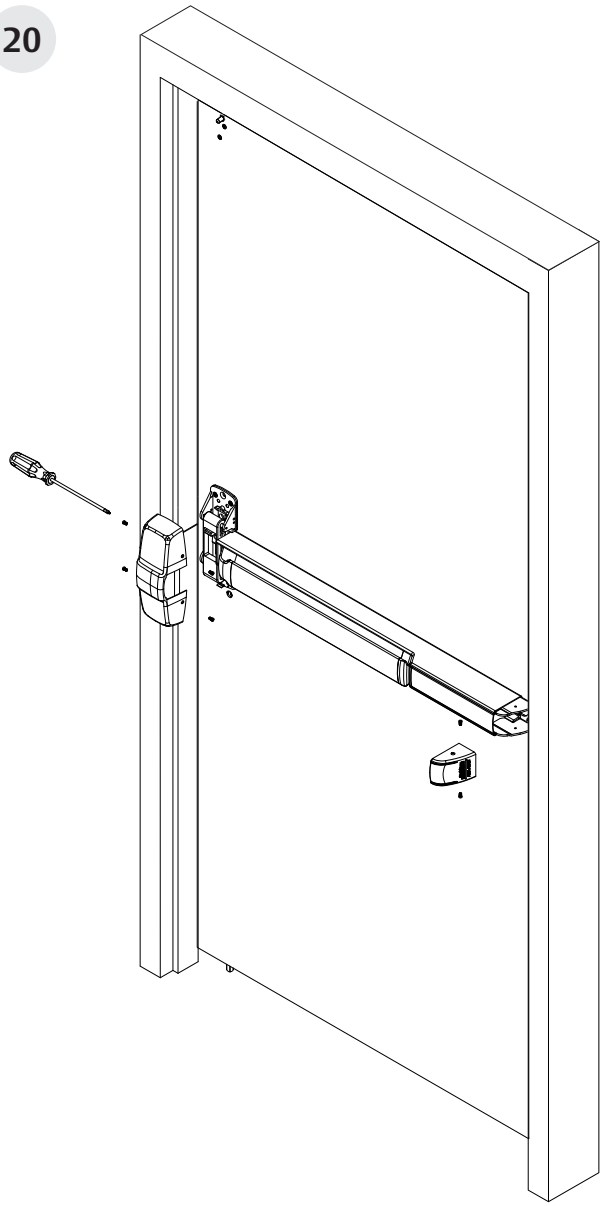

Install chassis and end cap cover, using supplied #8-32 oval head screws.

21

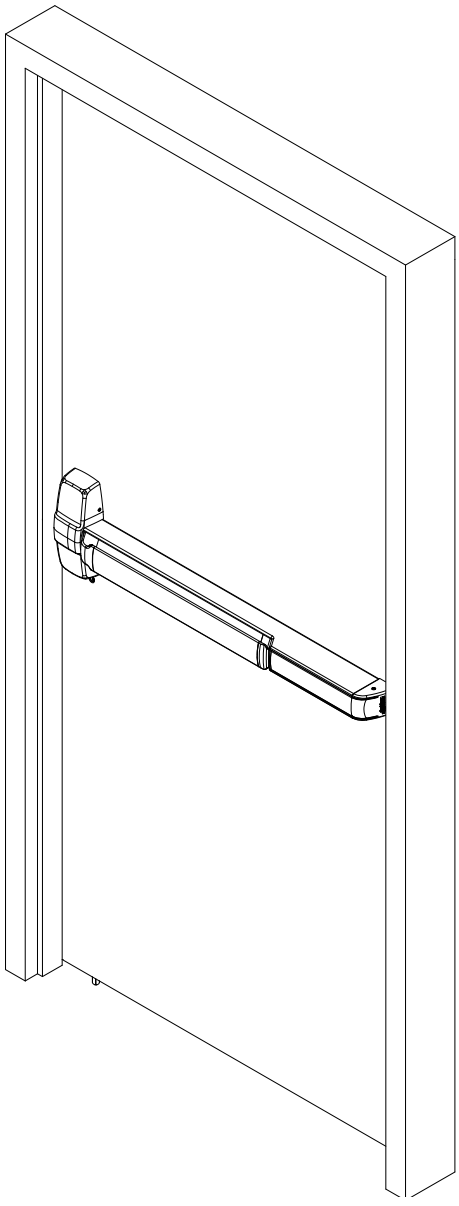

Check for proper operation.

1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2023 ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.
Patent pending and/or patent www.assaabloydss.com/patents.

FM581 1/23

Experience a safer and more open world