



ELECTRIC STRIKE DIMENSIONS

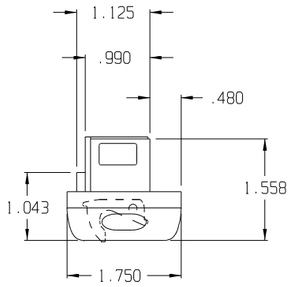

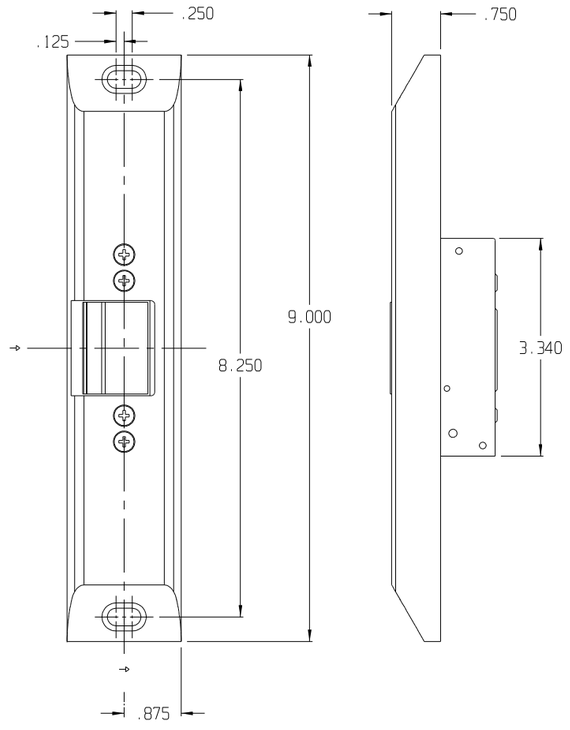

JAMB PREPARATION

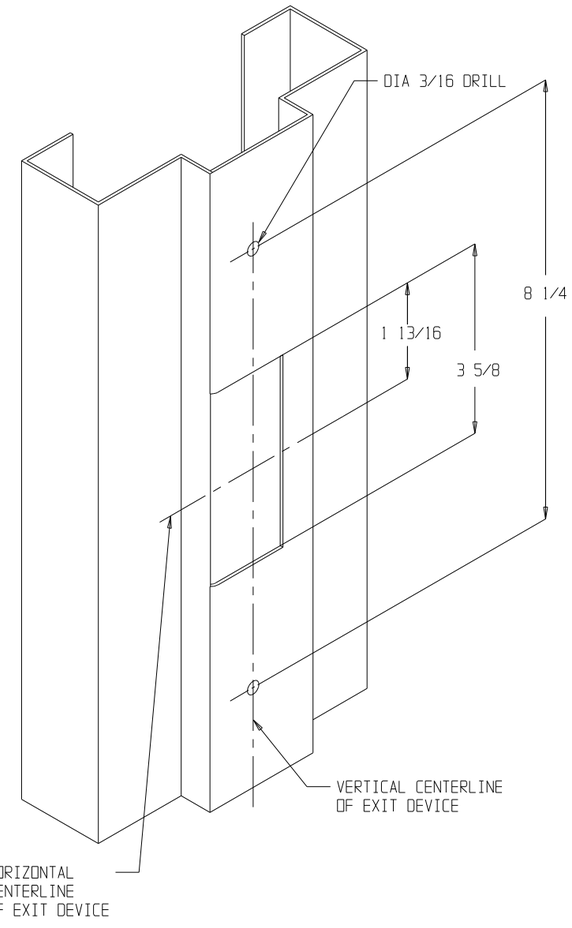

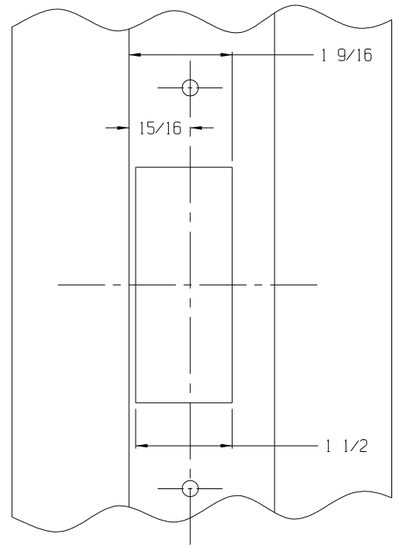


INSTALLATION INSTRUCTIONS

1. PREPARE DOOR JAMB PER DRAWING.
2. USING WIRE NUTS PROVIDED, CONNECT WIRES FROM SOLENOID TO THE WIRES COMING FROM THE LOW VOLTAGE SIDE OF THE TRANSFORMER.
3. INSERT ELECTRIC STRIKE INTO JAMB. ATTACH WITH TWO #12 SCREWS.

STATIC STRENGTH	DYNAMIC STRENGTH	ENDURANCE
1500 lbs.	70-foot-pound-force	250,000 cycles

RIM INSTALLATION

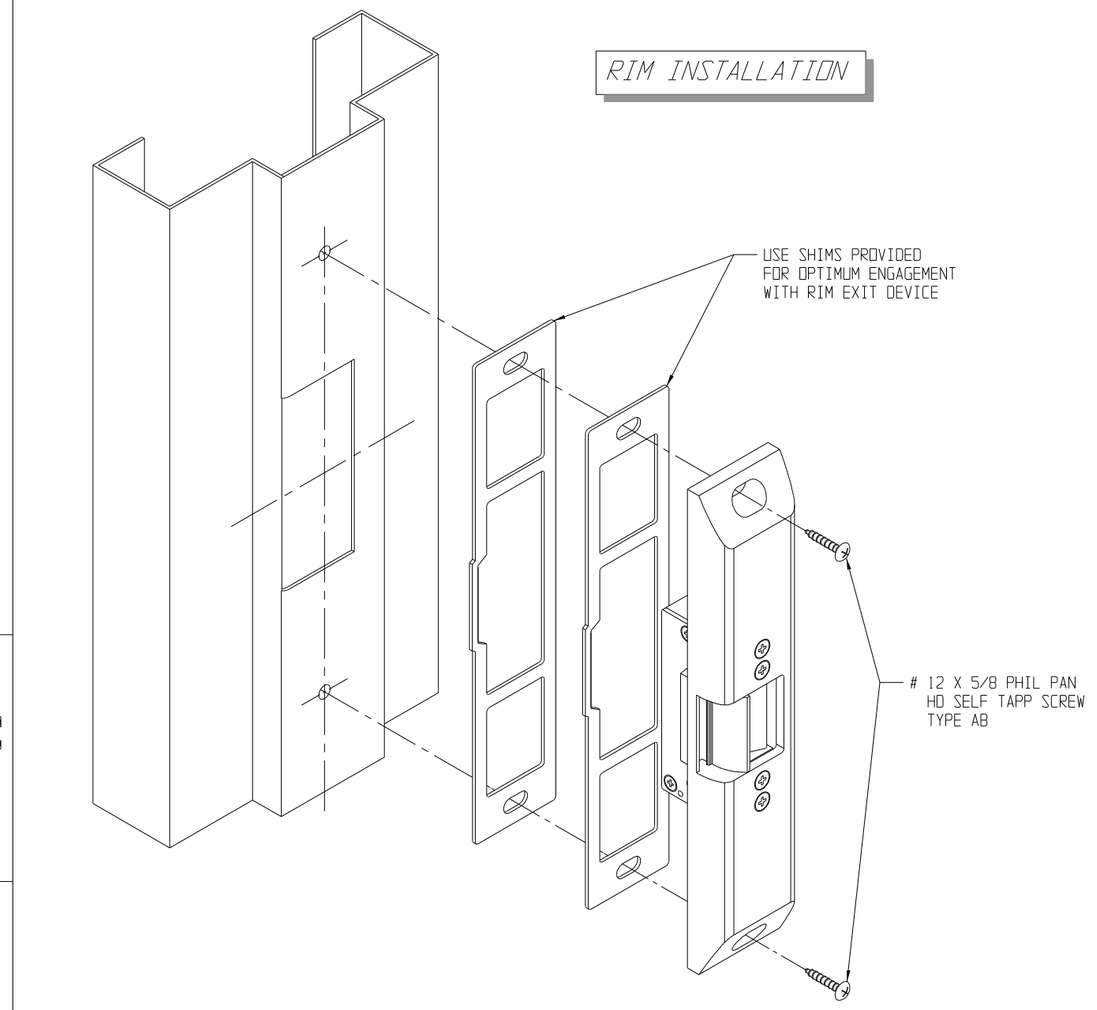

Adams Rite
ASSA ABLOY

www.adamsrite.com
Phone: 800-626-7590
800-872-3267

Fax: 866-582-4641
800-232-7329

71R1 ELECTRIC STRIKE FOR METAL JAMB

PART NO. : 80-0180-383
REV. : G
ECN : 119550
DATE : 07/20/12

REF. TEMPLATE NO. : 53000-0