
ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.
Rixson® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright© 2003, 2009, Yale Security Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

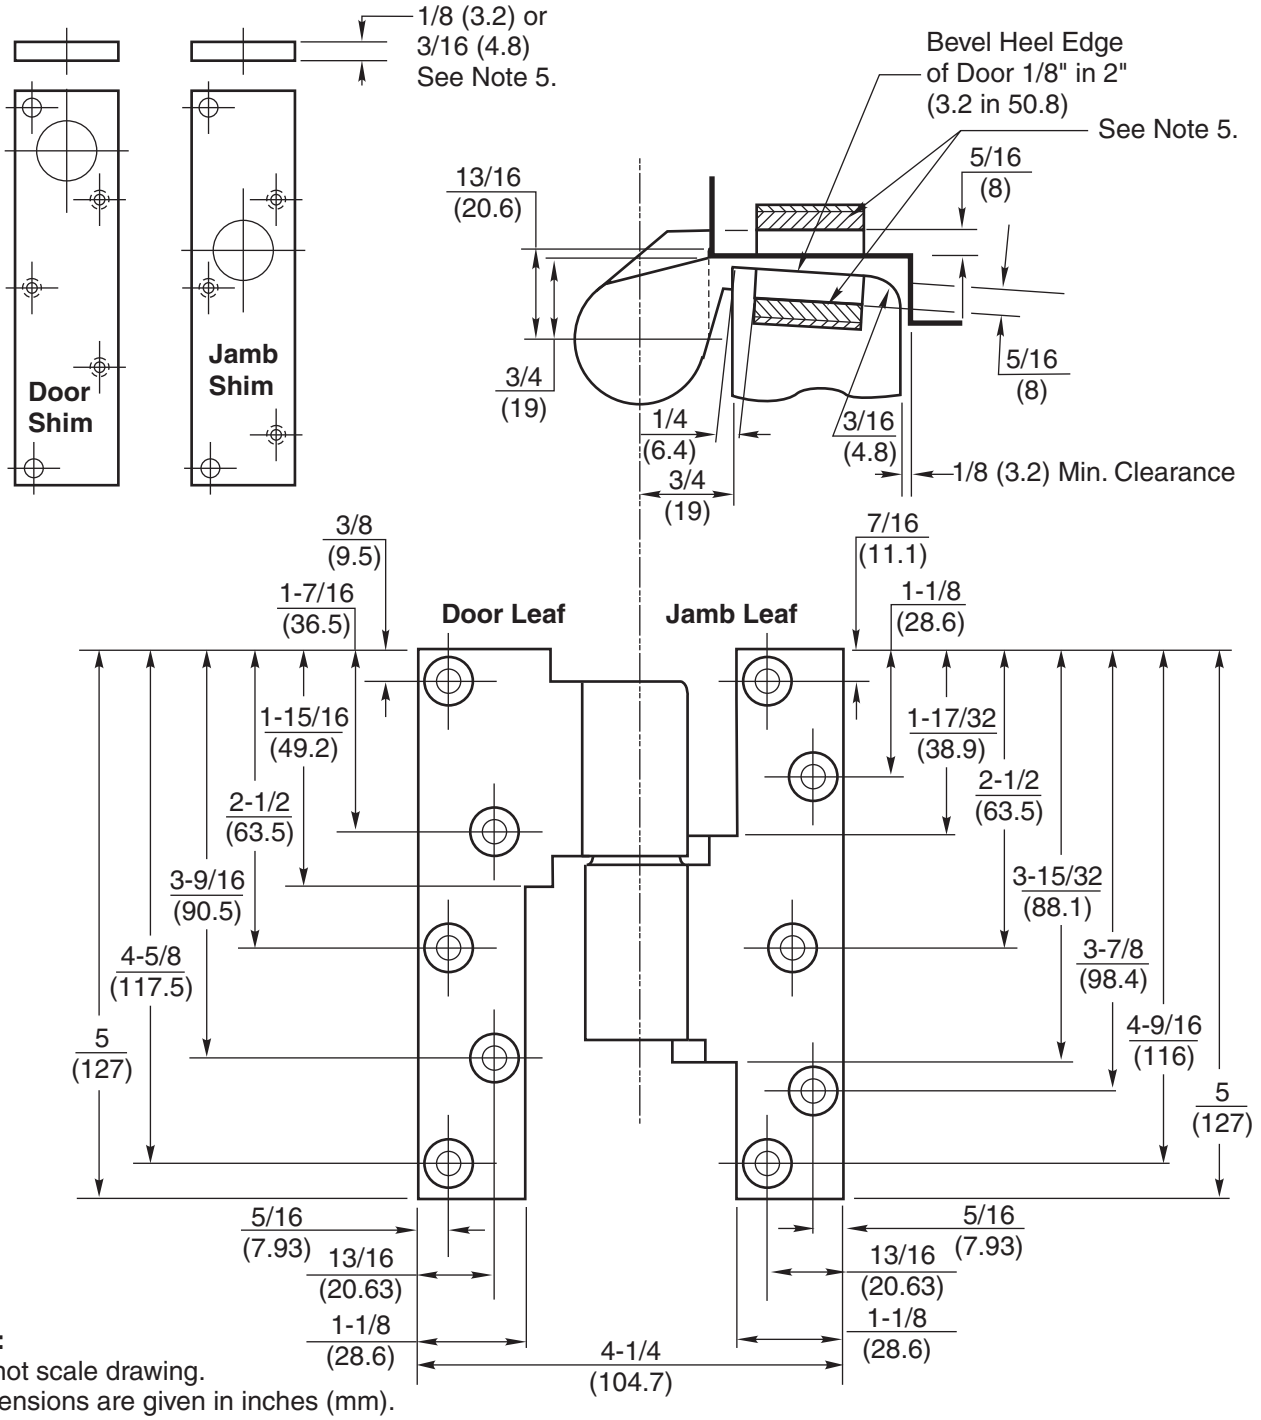

Notes:

1. Do not scale drawing.
2. Dimensions are given in inches (mm).
3. Pivot drilled for 5/8" x 1/4-20 FHMS
4. Right hand shown.
5. For hollow metal use 1/8" (3.2) shims (by Rixson)
   Door: 652001
   Jamb: 652003
   For aluminum use 3/16" (4.8) shims (by Rixson)
   Door: 652002
   Jamb: 652004
6. See templates T-EM19U-A and T-EM19-HM for door and frame prep.

Side Jamb Pivot
3/4" Offset – Handed

RIXSON
ASSA ABLOY
www.rixson.com

TEMPLATE NUMBER	DATE
IS-EM19U	07-09

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.
Rixson® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright© 2003, 2009, Yale Security Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

Handed


EM19U Side Jamb Pivot

3/4” Offset

Installation Instructions

IMPORTANT: Prepare door and frame per instructions on reverse side. Door must be hung before the pivot is installed. The EM-19U pivot cannot take the downward load (weight) of the door. The door weight must be carried by a floor closer, bottom pivot or additional M-19 or M-190 side jamb pivots.

ALIGNMENT: To insure proper installation , the centerline of the side jamb pivot must be in line with the centerline of the top and bottom pivot points. See illustration.

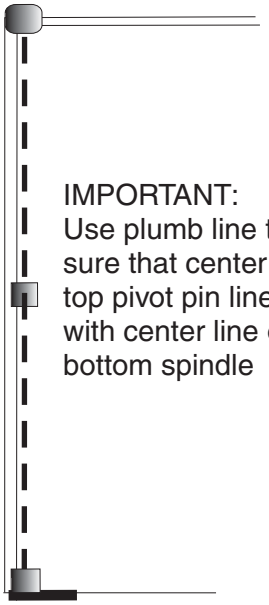


IMPORTANT:
Use plumb line to make sure that center line of top pivot pin lines up with center line of bottom spindle

PIVOT INSTALLATION:

NOTE: Door and jamb portion of EM-19U are assembled in the factory. They cannot be separated and must be installed as assembled.

Open door and connect wires on the jamb portion to the wires in the frame. Push the wires back into the frame as the jamb portion is set into place in the frame mortise. Install the 5 jamb screws.

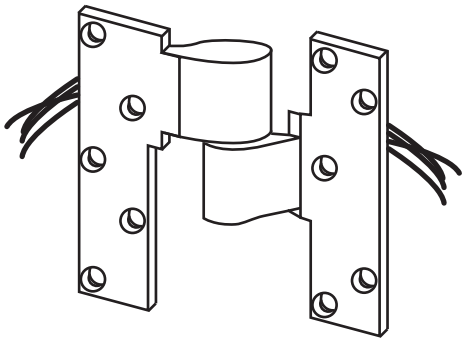


Connect the wires on the door portion to the door wires. Push the wires back into the door as the door portion is set into place in the door mortise. Install 5 door screws.

Test the electrical installation for proper operation of the wired door devices.

ELECTRICAL RATINGS:
Low voltage only
Current ratings each wire: 2 amp. continuous.

How To Determine Hand of Door

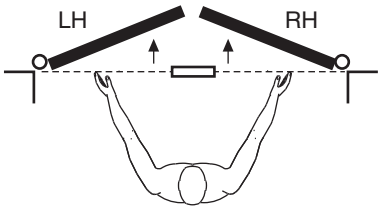

Face a door swinging open away from you. If it opens to the right, it is right hand. If it opens to the left, it is left hand.

Side Jamb Pivot
3/4" Offset – Handed

RIXSON
ASSA ABLOY
www.rixson.com

TEMPLATE NUMBER	DATE
IS-EM19U	07-09