
ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.
Rixson® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright© 1981, 2009, Yale Security Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

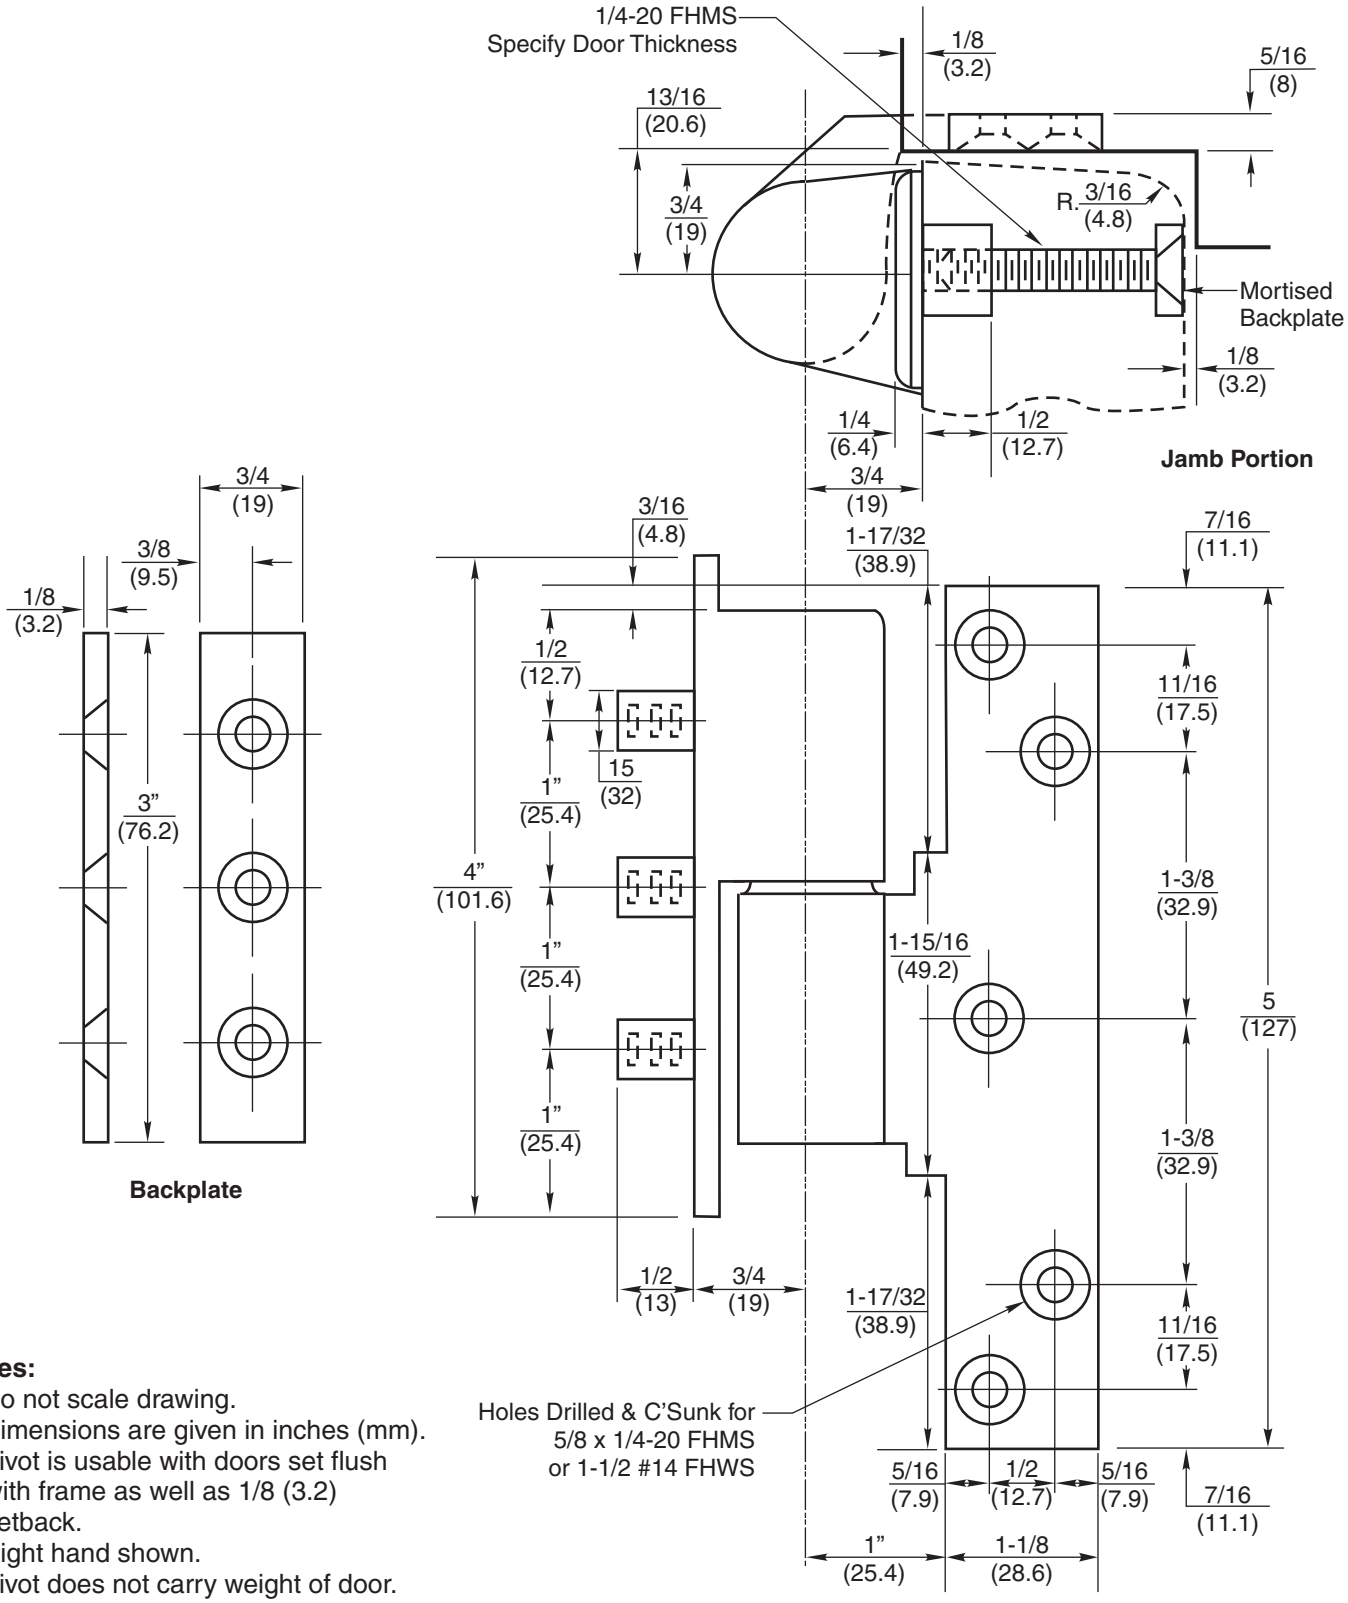

Notes:

1. Do not scale drawing.
2. Dimensions are given in inches (mm).
3. Pivot is usable with doors set flush with frame as well as 1/8 (3.2) setback.
4. Right hand shown.
5. Pivot does not carry weight of door.
6. Bevel edge of door: 1/8 in 2 (3.2 in 50.8)

F219 Side Jamb Pivot
Half Surface – Steel
3/4" Offset – Handed

RIXSON
ASSA ABLOY
www.rixson.com

TEMPLATE NUMBER	DATE
IS-F219	07-09

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.
Rixson® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright© 1981, 2009, Yale Security Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

Handed

F219 Side Jamb Pivot
Installation Instructions

3/4" Offset


Door should already be hung with top pivot and bottom pivot (or floor closer)

1. 
Mortise door & frame per template on reverse side.

2. 
Affix pivot to door & frame.


3. 
Align pivot point from top pivot to bottom arm. *(See diagram)*




4. 
Loosen arm screw*.

5. 
Remove hex cap.


6. 
Turn stud screw clockwise. Raise the door to the desired height.

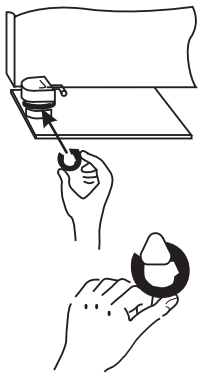
7. 
Using shims furnished with bottom arm, fill gap between arm and base.


How To Determine Hand of Door

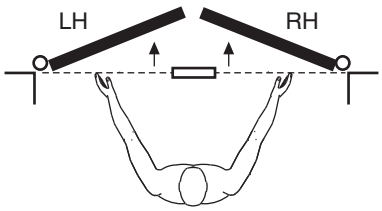


Face a door swinging open away from you. If it opens to the right, it is right hand. If it opens to the left, it is left hand.

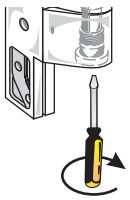8. 
Turn stud screw counterclockwise until door rests on shims.

9. 
Tighten arm screw on spindle. Open and close door several times Re-tighten arm screw.

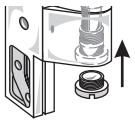10. 
Replace hex cap.

*** If bottom arm is for a Uni-Chek 67/68 or 117 pivot, make sure the arm is sitting all the way down on the base. Make NO adjustments to the M19.**



F219 Side Jamb Pivot
Half Surface – Steel
3/4" Offset – Handed

RIXSON
ASSA ABLOY
www.rixson.com

TEMPLATE NUMBER	DATE
IS-F219	07-09