
340-350 CATCHES (AdjusTITE)®

Installation Instructions

A FEW OF MANY APPLICATIONS

Used as Top Closer on Casement Windows

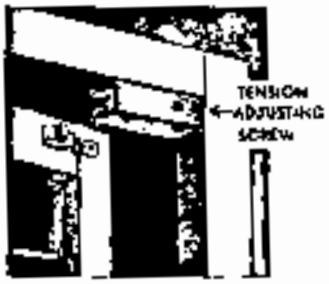

CASEMENT WINDOWS



CUPBOARD DOORS



CLOSET DOORS

On Single Casements apply the case to the upper corner of jamb. The tension adjusting screw must be next to the jamb (see illustration). Place template in notches on case and close the window. This marks position for center screw hole of strike, which is mounted on the sash. Be sure the hook end of strike is mounted toward the hinge side of the window.

On Double Casements the device is applied on the outer end of the active leaf in the same position as on Single Casements.

Other Applications

On cupboards, closets, screen doors, transoms, etc., the application is the same although the catch may be placed at head, sill, jamb, or under the shelf, as desired.


ADJUSTITE® CATCH


FOR USE ON CUPBOARDS, SMALL DOORS AND CASEMENT WINDOWS. FEATURES ADJUSTABLE TENSION.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/8" drill bit, Phillips screwdriver, awl or pencil.

1. **Position catch (A) on top corner of jam and edge of stop. Tension adjustment screw (B) must be next to jamb.**
2. **Mark, drill pilot holes at (C) and secure.**
3. **Place template in 4 front notches of catch with notch "D" facing outward.**
4. **Close door or window so that notch on template has marked position for the center screw (E) on strike.**
5. **Position strike (F) so the hook end is mounted toward the hinge side of the door. Mark, drill pilot holes in center of elongated holes (E & G) and secure.**
6. **To assure proper alignment of strike and catch, make any necessary left or right adjustment by use of elongated strike holes. To increase tension, turn adjustment screw in direction of arrow.**

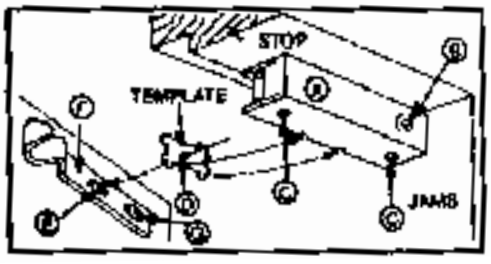

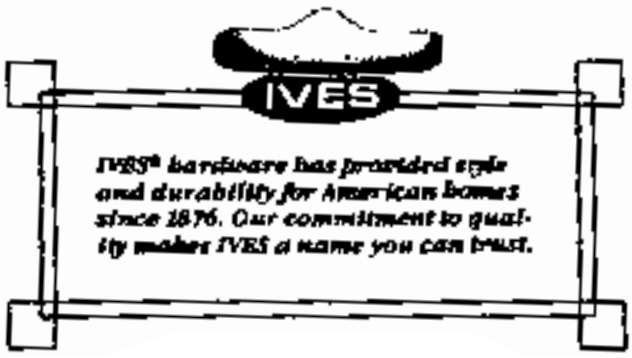

ALLEGION

Customer Service

1-877-671-7011 www.allegion.com/us

© Allegion 2015
Printed in U.S.A.
110334 Rev. 05/15-b