


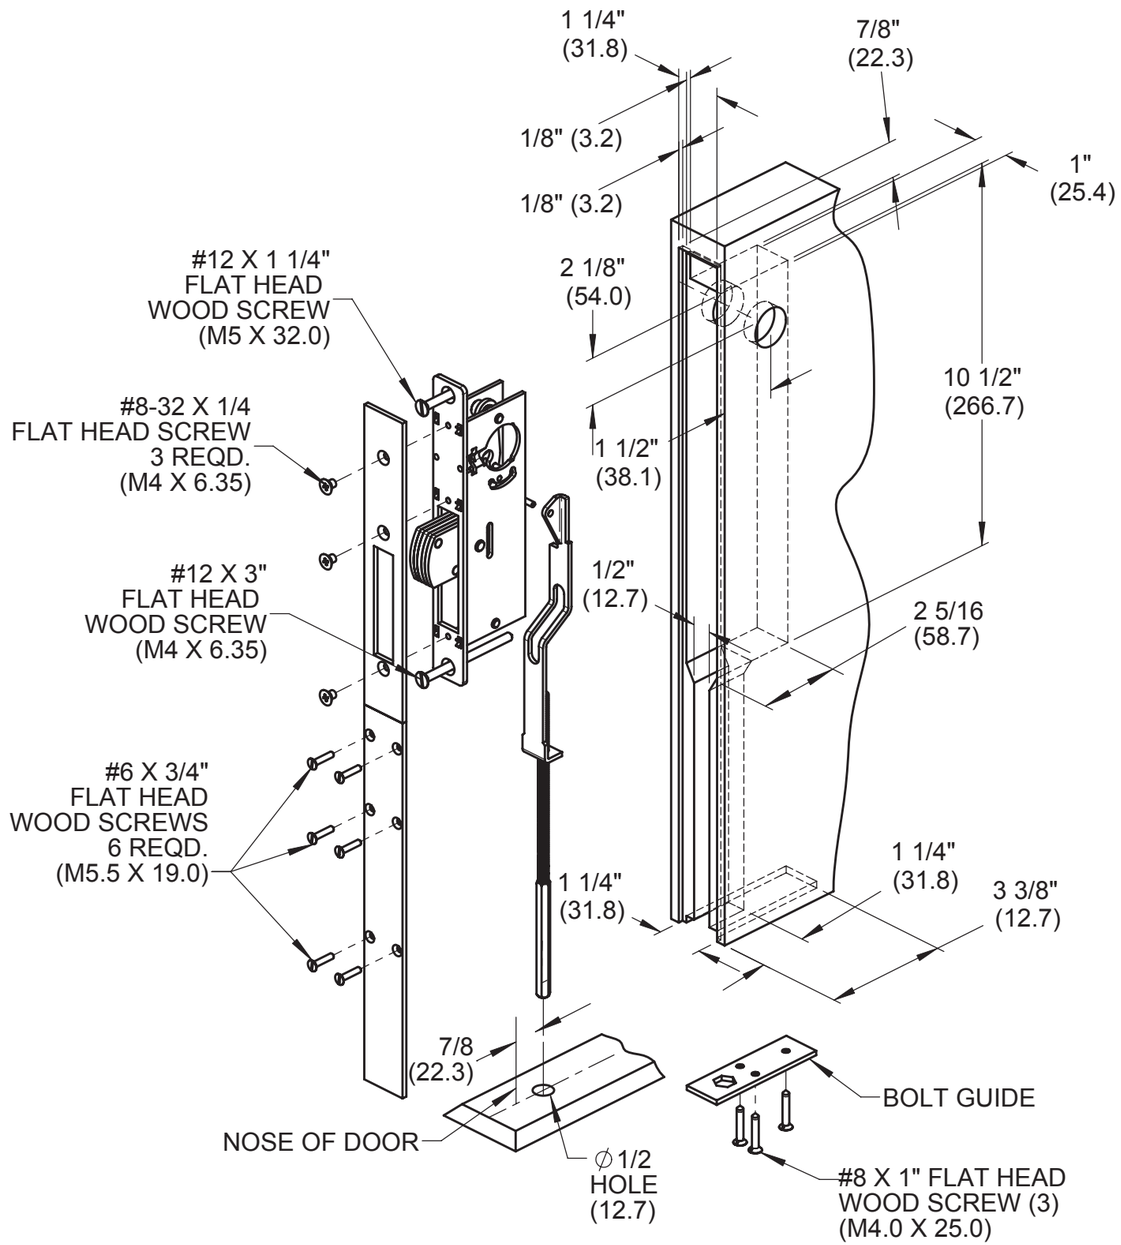


INSTALL ADAPTOR ARM IN LOCK FROM REAR WITH BOLT RETRACED AS SHOWN. DRIVE PIN THROUGH SLOTS IN LOCK SIDE PLATES, PASSING THROUGH HOLE IN ADAPTOR ARM.

LOCK DIMENSIONS

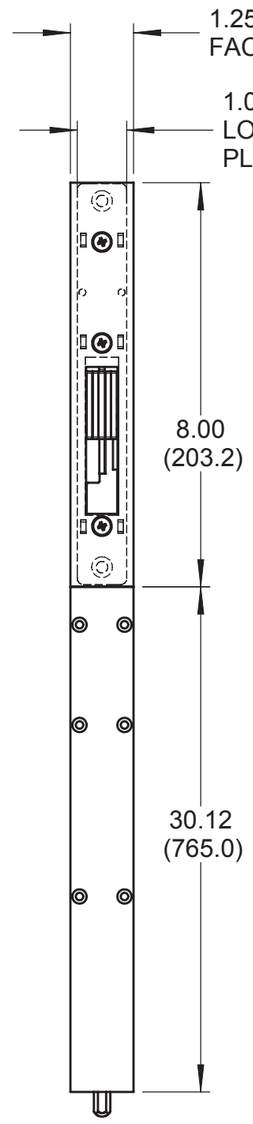

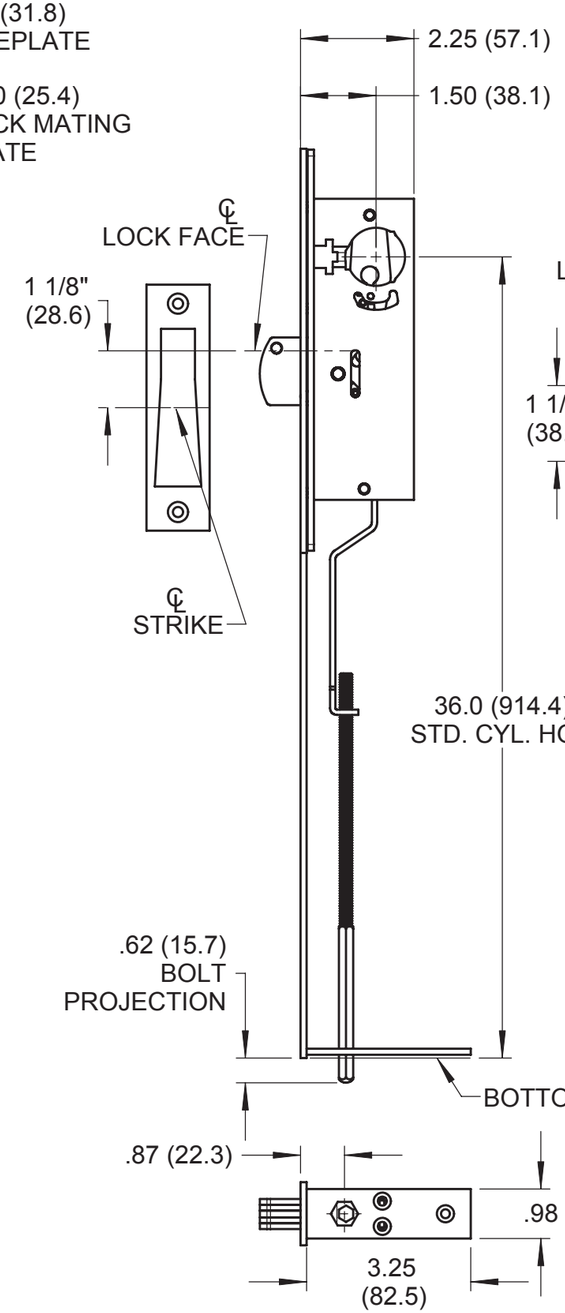

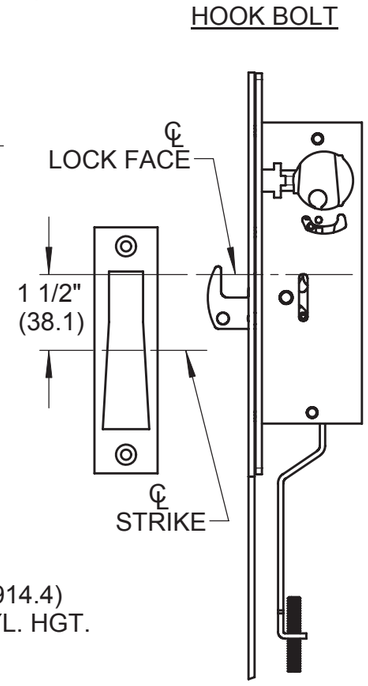

Adams Rite
ASSA ABLOY
Adams Rite Manufacturing Co.
260 Santa Fe Street,
Pomona, CA 91767
Phone: 909-632-2300
Fax: 909-632-2369
www.adamsrite.com

MS 1837 WOOD DOOR 2-POINT — INSTALLATION INSTRUCTIONS

80-0180-2 Rev. C ECN: 11003 Date: 12-08-08 Page 1of 1 Appvd: Date: