

NOTES:
1. FOR ADDITIONAL HANDLE INFORMATION SEE CATALOG PAGE #SW33.
2. FOR CYLINDER GUARD SEE CATALOG PAGE #SW13.
3. DIMENSIONS IN PARENTHESIS ARE IN MILLIMETERS.

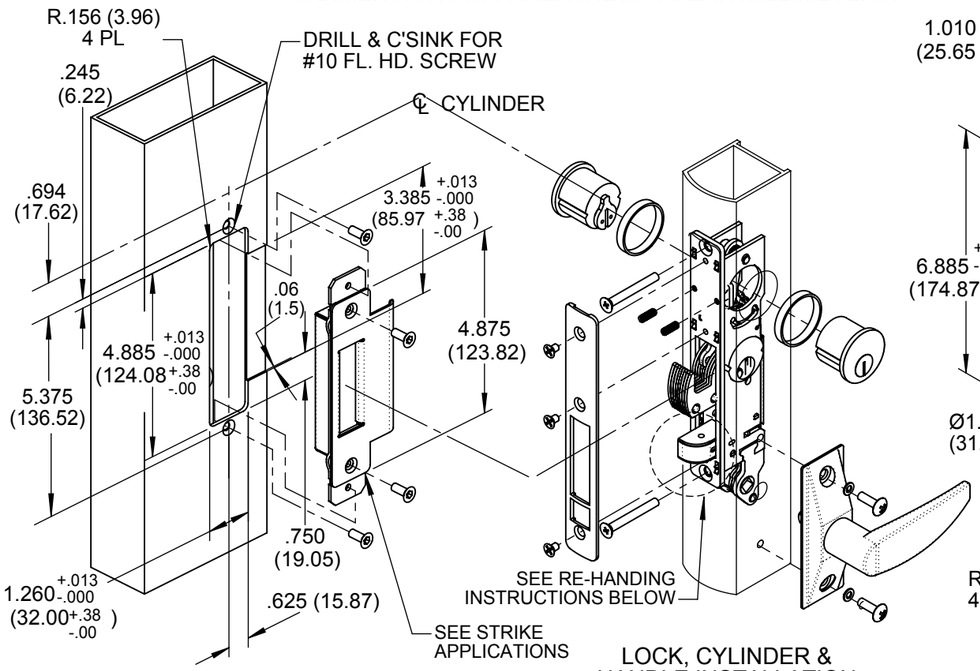


JAMB PREPARATION

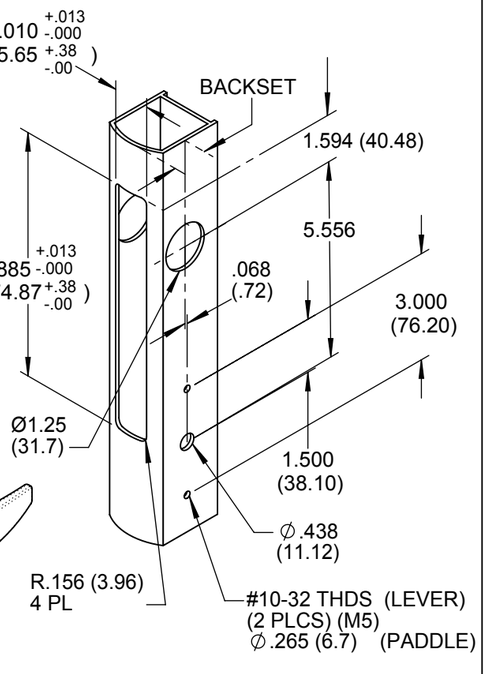


LOCK, CYLINDER &
HANDLE INSTALLATION

LOCK STILE PREPARATION

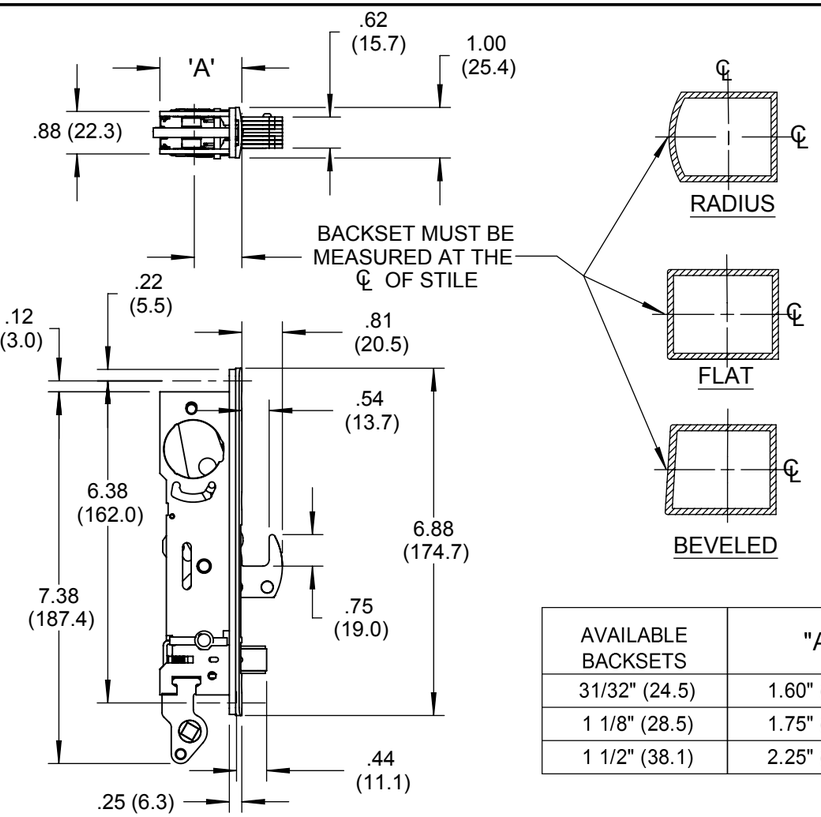

AVAILABLE BACKSETS	"A"
31/32" (24.5)	1.60" (40.6)
1 1/8" (28.5)	1.75" (44.4)
1 1/2" (38.1)	2.25" (57.1)

STRIKE APPLICATIONS

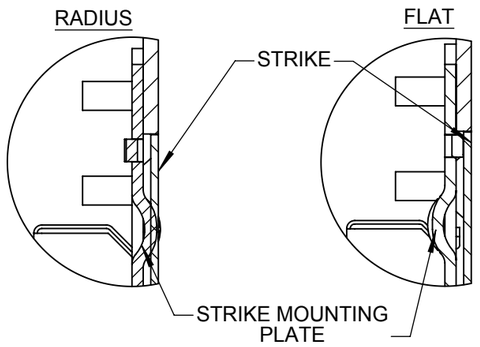


FLAT:
STRIKE MOUNTING PLATE TO BE INSTALLED AS SHOWN WHEN USED ON FLAT JAMB SECTION.


RADIUS:
STRIKE MOUNTING PLATE IS TO BE INSTALLED AS SHOWN WHEN USED ON RADIUSED PAIR OF DOORS. (INACTIVE LEAF)

RE-HANDING INSTRUCTIONS

- USING ALLEN HEX KEY, LOOSEN THE SET SCREW AND REMOVE THE BOLT (FIG. 1)
- ROTATE 180°, INSTALL IT BACK AND RE-TIGHTEN THE SET SCREW (FIG. 2)

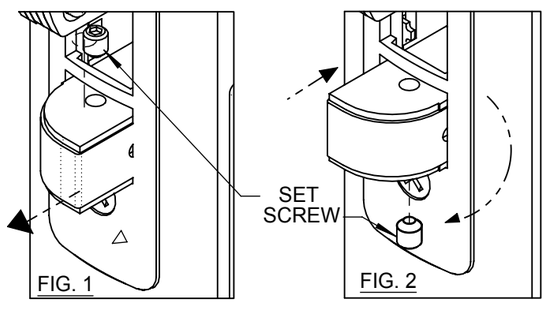


MOUNTING METHODS

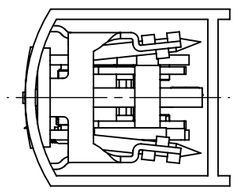

METHOD #1
4104

FOR MOUNTING INSTRUCTIONS SEE CATALOG PAGE #SW100

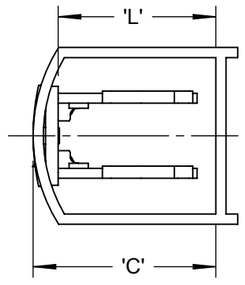

METHOD #2

LOCK IS SECURED TO BACK WEB OF STILE BY MEANS OF #10 (M4) FLAT HEAD MACHINE SCREWS & TUBE SPACERS OF PROPER LENGTH TO POSITION LOCK. FOR TUBE SPACER LENGTH (L) USE THE FOLLOWING FORMULA:

L = C -.25 (6.35)

SCREWS FURNISHED WILL BE APPROX. 1/4" LONGER THAN THE SPACER.

AVAILABLE FACEPLATES
FLAT
RADIUS
BEVEL RIGHT
BEVEL LEFT
RADIUS WEATHER STRIP

* MINIMUM SINGLE ACTION GAP 1/8" (3.1) WHEN USING WEATHER SEAL FACEPLATE

Adams Rite
ASSA ABLOY
www.adamsrite.com
Phone: 800-626-7590
800-872-3267
Fax: 866-582-4641
800-232-7329