
Rixson is a brand associated with Yale Security Inc., an ASSA ABLOY Group company. Copyright © 2016, Yale Security Inc.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

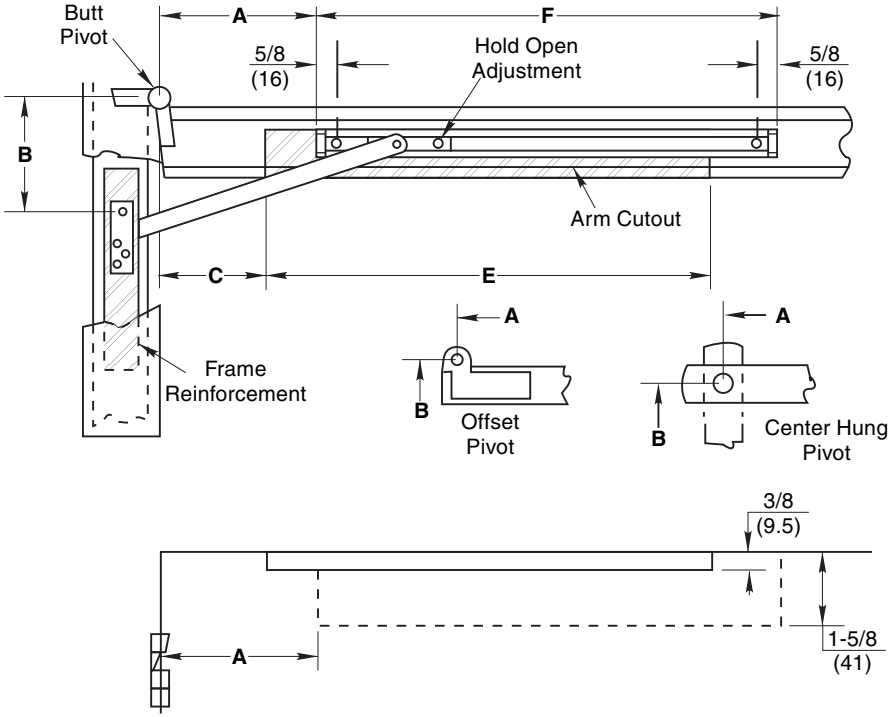


INSTALLATION INSTRUCTIONS


1. Determine the device number for the door opening. Then select proper dimensions from chart on OH800003B.

   NOTE: A, B and C dimensions are measured from hinge center, not edge of door.


2. Locate "B" dimension on frame and mortise 1/4" (6mm) deep for jamb bracket as shown.

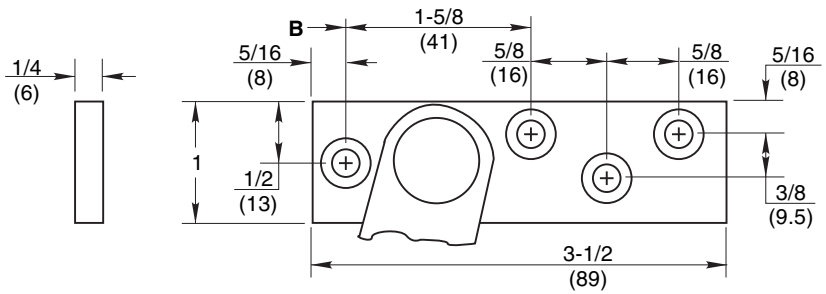

3. Locate "A" and "F dimensions on centerline of door and mortise 1-5/8" (41mm) deep for channel. 1/16" (2mm) head clearance shown. Coordinate the arm and rail cutout dimensions if head clearance varies.

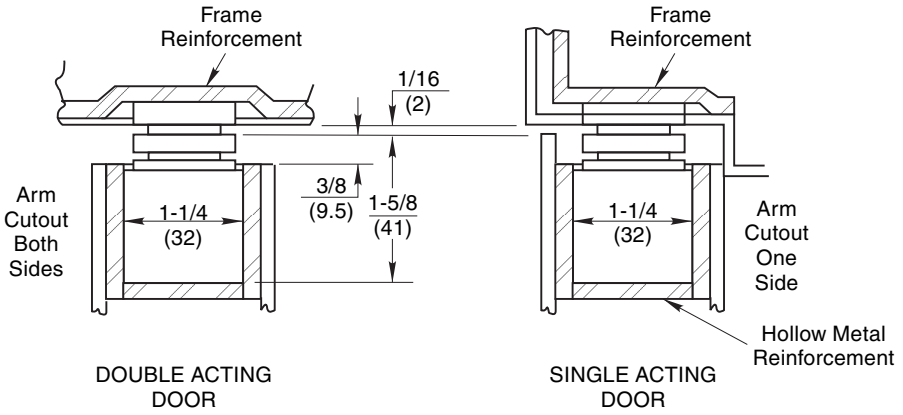

4. Locate "C" and "E" dimensions on top of door and mortise 3/8" (9.5mm)deep as shown for arm cutout.

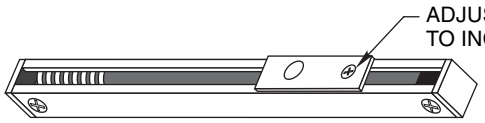


NOTES:

- All hollow metal frames are to be provided with 3/16" (5mm) min. thickness x 12" (305mm) min. length reinforcement plates.
- All hollow metal doors are to have minimum 3/16" reinforcement plates.
- A, B and C dimensions are measured from centerline of pivot, not edge of door.
- Left hand shown, right hand opposite.
- All dimensions are given in inches (mm).

CAUTION:

Note location of swing clear hinge centerline to determine "A", "B" and "C" dimensions.

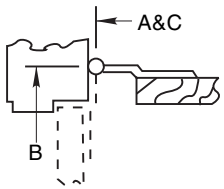

Screw Details	
Jamb	**Door**
1/4-20 x 3/4" FHMS or #14 x 1-1/2" FHWS	5/16-18 x 1-1/2" FHMS or #18 x 3" FHWS

No. 1 ADJ
Concealed Mounted
Door Stops and Holders

RIXSON
ASSA ABLOY
www.rixson.com

TEMPLATE NUMBER	DATE
OH800003A	07-16

Rixson is a brand associated with Yale Security Inc., an ASSA ABLOY Group company. Copyright © 2016, Yale Security Inc.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

No. 1 Series Surface Mounted Door Stops and Holders

1. See **OH800003A** for installation instructions.
2. Select proper dimensions noted below.
3. All dimensions given in inches (mm).


When Using Center Hung Pivots, Check Pivot Manufacturer's Compatibility Prior to Specifying

* Butt mounting only.
Reversible, non-handed

	Device Number		Degree						
	H.O.	Stop	Door Opening	A	B	C	E	F	Max Opening
1-3/4 - 2-1/4 Butts & 3/4 Offset Pivot	1ADJ-126	1ADJ-136	24 - 28 (610 - 711)	*3-1/16 (78)	*4-1/8 (105)	* 0 (0)	*16-5/8 (422)	17-3/16 (437)	110°
	1ADJ-226	1ADJ-236	28-1/16 - 33 (713 - 838)	* 4-5/8 (117)	* 5" (127)	* 1" (25)	*19-1/8 (486)	18-7/16 (468)	110°
	1ADJ-326	1ADJ-336	33-1/16 - 38 (840 - 965)	7-7/8 (200)	6" (152)	4-1/4 (108)	20-5/8 (524)	19-15/16 (506)	110°
	1ADJ-426	1ADJ-436	38-1/16 - 43 (967 - 1092)	10-7/16 (265)	7-7/16 (189)	7-1/4 (184)	22-3/8 (568)	22-1/16 (560)	110°
	1ADJ-526	1ADJ-536	43-1/16 - 48 (1094 - 1219)	13-3/4 (349)	8-1/2 (216)	8-1/4 (210)	26-1/4 (667)	23-9/16 (598)	110°

NOTE: A, B, and C dimensions measured from centerline of pivot, not edge of door.

	Device Number		Degree						
	H.O.	Stop	Door Opening	A	B	C	E	F	Max Opening
1-3/4 - 2-1/4 Center Hung	–	–	–	–	–	–	–	–	N/A
	1ADJ-226	1ADJ-236	30 - 36 (762 - 914)	5-5/16 (135)	5-11/16 (144)	5-1/2 (140)	15-3/8 (391)	18-7/16 (468)	105°
	1ADJ-326	1ADJ-336	36-1/16 - 41 (916 - 1041)	8-3/8 (213)	6-1/2 (165)	6-1/4 (159)	19-1/8 (486)	19-15/16 (506)	110°
	1ADJ-426	1ADJ-436	41-1/16 - 46 (1043 - 1168)	10-7/8 (276)	7-7/8 (200)	7-3/4 (197)	22-3/8 (568)	22-1/16 (560)	110°
	1ADJ-526	1ADJ-536	46-1/16 - 50 (1170 - 1270)	14-3/16 (360)	8-15/16 (227)	8-3/4 (222)	26-1/8 (664)	23-9/16 (598)	110°

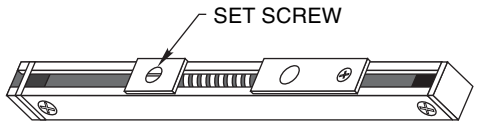

TO SELECT DEGREE OF STOP

1. With a screwdriver, loosen the Set Screw in the Slide Block.
2. Open door to desired degree of opening.
3. Move Slide Block and Spring until the Spring touches Slide Cam.
4. Tighten Set Screw.
5. Verify door opening position and re-adjust, as needed.

No. 1 ADJ
Concealed Mounted
Door Stops and Holders

RIXSON
ASSA ABLOY
www.rixson.com

TEMPLATE NUMBER **OH800003B**

DATE **07-16**