

Rixson® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright© 1999, 2009, Yale Security Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.

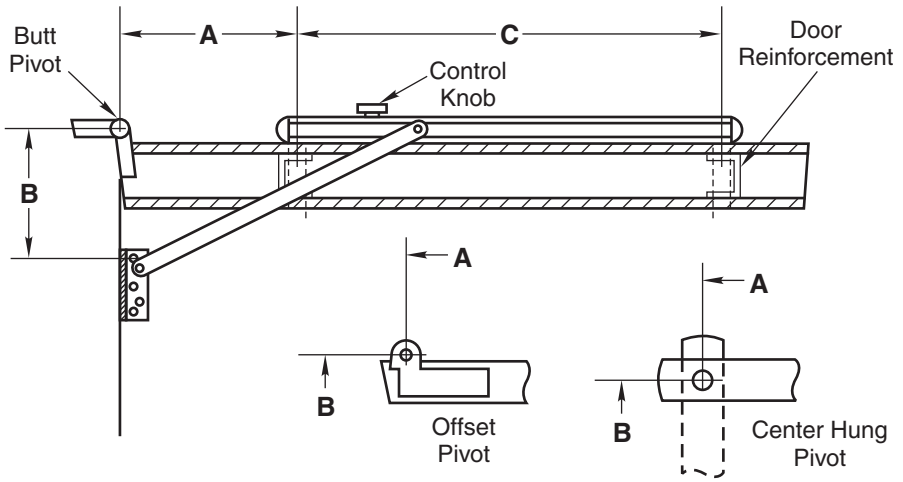


INSTALLATION INSTRUCTIONS

1. Select and determine degree of hold open or dead stop from chart on OH80062B.
2. Locate “A” and “B” dimensions on door and frame.
3. Install angle bracket on front face as shown, using "B" dim. and 1-25/32" (45.2) from jamb to top hole in bracket.

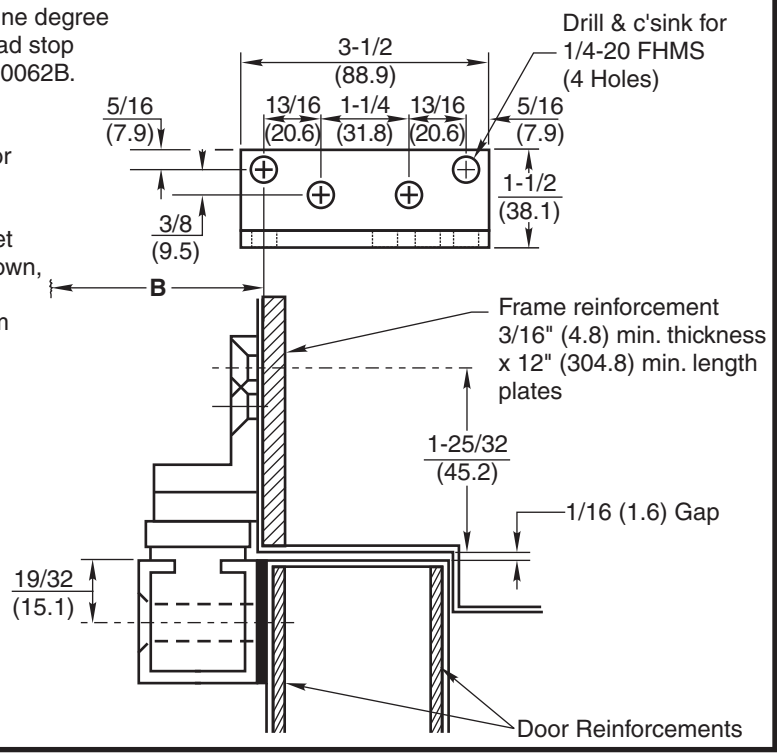


4. Install channel on door with “A” dimension and 19/32 (15.1) from top of door. Locate “C” dimension sex bolt hole making sure that channel is horizontal and parallel with top edge of door. Drill 1/2 (12.7) dia. sex bolt hole and finish installing holder. Install control knob on channel as shown. Install jamb bracket to angle bracket.

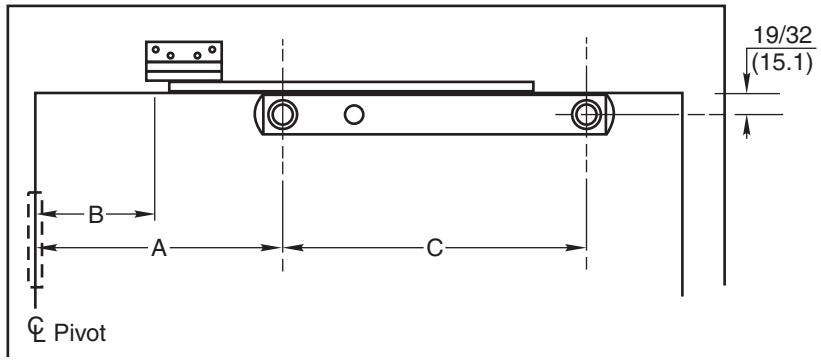

Notes:

- All hollow metal frames should be properly reinforced with 3/16” (4.8) min. thickness x 12” (304.8) min. length reinforcement plates.
- All hollow metal doors should be properly reinforced with 2-1/2" (63.5) wide x 3/16" (4.8) min. thick x full width of door reinforcement plates.
- All drilling and tapping to be done by field men.
- Suggest mounting door stop or holder first and then other hardware to clear. Contact factory if interference results with other hardware.
- Right hand shown (Angle Bracket #5459) - left hand opposite (Angle Bracket #5458). Note hole pattern in jamb bracket.
- All dimensions are given in inches (mm).

Caution:
Note location of swing clear hinge centerline to determine “A” and “B” dimensions.

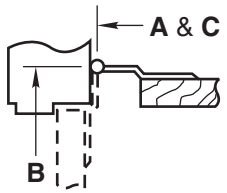

Screw Details	
Jamb	**Door**
#14-20 x 3/4” FHMS or #14 x 1-1/2” FHWS (4 Places)	5/16-18 x 2” FHMS and 1/2” Dia. Sex Bolt (2 Places)

No. 9 Series
Angle Bracket Surface Mounted On Pull Side of Door
Door Stops and Holders

RIXSON
ASSA ABLOY
www.rixson.com

TEMPLATE NUMBER	DATE
OH80062A	05-09

Rixson® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright© 1999, 2009, Yale Security Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.

No. 9 Series Angle Bracket Surface Mounted on Pull Side of Door

1. See OH80062A for installation instructions.
2. Select proper dimensions noted below.
3. All drilling and tapping to be done by field man.
4. All dimensions given in inches (mm).

Reversible, non-handed.

H.O. = Hold Open
D.S. = Dead Stop

	Device Number			Degree	85°				90°				95°				100°				105°				110°				
					H.O.		D.S.		H.O.		D.S.		H.O.		D.S.		H.O.		D.S.		H.O.		D.S.		H.O.		D.S.		
1-3/4 - 2-1/4 (44.5 - 57.2) Butts & 3/4 (19) Offset Pivot	Friction	H.O.	Stop	Door Opening	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	C
	9-116	9-126	9-136	25-1/8 - 28-1/2	6-3/16	4-3/4	6-13/16	4-3/4	5-13/16	4-3/8	6-7/16	4-3/8	5-1/2	4-1/16	6-1/8	4-1/16	5-1/4	3-13/16	5-7/8	3-13/16	–	–	–	–	–	–	–	–	15-15/16
	9-216	9-226	9-236	28-9/16 - 33-1/2	8-1/16	5-7/8	8-11/16	5-7/8	7-5/8	5-7/16	8-1/4	5-7/16	7-5/16	5-1/8	7-15/16	5-1/8	7	4-13/16	7-5/8	4-13/16	6-11/16	4-1/2	7-5/16	4-1/2	6-1/2	4-5/16	7-1/8	4-5/16	17-3/16
	9-316	9-326	9-336	33-9/16 - 38-1/2	11-11/16	7-1/4	12-5/16	7-1/4	11-3/16	6-3/4	11-13/16	6-3/4	10-3/4	6-5/16	11-3/8	6-5/16	10-3/8	5-15/16	11	5-15/16	10-1/16	5-5/8	10-11/16	5-5/8	9-13/16	5-3/8	10-7/16	5-3/8	18-11/16
	9-416	9-426	9-436	38-9/16 - 43-1/2	14-5/8	9-1/8	15-1/4	9-1/8	14-1/16	8-1/2	14-11/16	8-1/2	13-9/16	8	14-3/16	8	13-1/8	7-9/16	13-3/4	7-9/16	12-3/4	7-3/16	13-3/8	7-3/16	12-7/16	6-7/8	13-1/16	6-7/8	20-13/16
	9-516	9-526	9-536	43-9/16 - 48	18-3/16	10-3/8	18-13/16	10-3/8	17-9/16	9-3/4	18-3/16	9-3/4	16-15/16	9-1/8	17-9/16	9-1/8	16-7/16	8-5/8	17-1/16	8-5/8	16	8-3/16	16-5/8	8-3/16	15-5/8	7-13/16	16-1/4	7-13/16	22-5/16

	Device Number			Degree	85°				90°				95°				100°				105°				110°				
					H.O.		D.S.		H.O.		D.S.		H.O.		D.S.		H.O.		D.S.		H.O.		D.S.		H.O.		D.S.		
1-3/4 - 2-1/4 (44.5 - 57.2) Center Hung	Friction	H.O.	Stop	Door Opening	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	C
	9-116	9-126	9-136	27-3/8 - 31	6-7/16	5-9/16	7-1/16	5-9/16	6-1/8	5-1/4	6-3/4	5-1/4	5-13/16	4-15/16	6-7/16	4-15/16	5-9/16	4-11/16	6-3/16	4-11/16	5-5/16	4-7/16	5-15/16	4-7/16	5-1/16	4-3/16	5-11/16	4-3/16	15-15/16
	9-216	9-226	9-236	31-1/16 - 36	8-1/4	6-1/2	8-7/8	6-1/2	7-7/8	6-1/8	8-1/2	6-1/8	7-1/2	5-3/4	8-1/8	5-3/4	7-3/16	5-7/16	7-13/16	5-7/16	6-15/16	5-3/16	7-9/16	5-3/16	6-11/16	4-15/16	7-5/16	4-15/16	17-3/16
	9-316	9-326	9-336	36-1/16 - 41	11-7/8	8	12-1/2	8	11-3/8	7-1/2	12	7-1/2	10-15/16	7-1/16	11-9/16	7-1/16	10-9/16	6-11/16	11-3/16	6-11/16	8-7/8	6-3/8	10-7/8	6-3/8	9-15/16	6-1/16	10-9/16	6-1/16	18-11/16
	9-416	9-426	9-436	41-1/16 - 46	14-3/4	9-3/4	15-3/8	9-3/4	14-3/16	9-3/16	14-13/16	9-3/16	13-11/16	8-11/16	14-5/16	8-11/16	13-3/16	8-3/16	13-13/16	8-3/16	12-13/16	7-13/16	13-7/16	7-13/16	12-1/2	7-1/2	13-1/8	7-1/2	20-13/16
	9-516	9-526	9-536	46-1/16 - 50	18-7/16	11-3/16	19-1/16	11-3/16	17-3/4	10-1/2	18-3/4	10-1/2	17-1/8	9-7/8	17-3/4	9-7/8	16-5/8	9-3/8	17-1/4	9-3/8	16-1/8	8-7/8	16-3/4	8-7/8	15-3/4	8-1/2	16-3/8	8-1/2	22-5/16

Note: "A" and "B" dimensions measured from centerline of pivot, not edge of door.

No. 9 Series
Angle Bracket Surface Mounted On Pull Side of Door
Door Stops and Holders

RIXSON
ASSA ABLOY
www.rixson.com

TEMPLATE NUMBER **OH80062B**

DATE **05-09**