

PemkoHinge®


The global leader in
door opening solutions

Applies to the following product:

_FM_HD1

Continuous Geared Hinge

**Grade 1 Heavy Duty
Full Mortise
3" Between Bearing Centers**

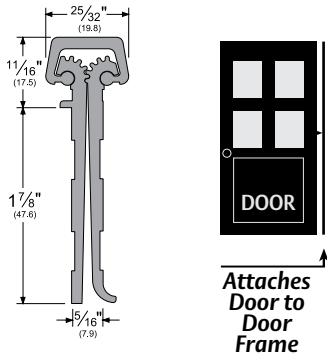

Attributes:

PemkoHinge® Attributes:

- With a continuous hinge, typical alignment problems, such as door sag and binding, are eliminated. Unlike conventional hinges, the continuous hinge distributes load stress uniformly along the full length of the door and frame.
- The gear design of the continuous hinge ensures identical operation of each leaf; therefore, very little effort is required to open heavy commercial doors.
- Continuous hinge installation screws are located along the full length of the hinge, thereby preventing warping of the door along the hinge jamb.
- The continuous hinge acts as reinforcement for both door and frame.
- A high degree of security can be achieved for exterior openings or restricted spaces by using a continuous hinge. With the geared construction and the full-length channel cap, the common gap between the door and frame is sealed, which provides security against prying.
- In addition, the closing of this gap protects against pinching fingers in doors in public areas, particularly those where children are present.
- Sightproof design of the continuous hinge provides privacy for lavatories, executive offices, or file rooms.
- PemkoHinge® products are GUARANTEED FOR THE LIFE OF THE OPENING against defects in material or workmanship with the exception of residential and aluminum hinges which carry a 10 year warranty.

Heavy Duty Full Mortise-Short Leaf Flush:

- Designed mainly for new doors and frames.
- HD1 Hinges conform to Grade 2-150, Grade 1-300, and Grade 1-600.
- Applied to conceal both leaves.

Why PemkoHinge® ?

- Tested and certified with the best warranty in the industry.
- No restrictions on frame gauge and wall conditions.
- No restriction on cutting hinges in field.
- No special cutting instructions or voided warranties.
- No special door and frame preps up to and including 90 minute doors.

Product / Available Finishes:

CFM	Clear Anodized Aluminum - Full Mortise	SNFM	Satin Nickel Anodized Aluminum - Full Mortise
DFM	Dark Bronze Anodized Aluminum - Full Mortise	BLFM	Black Anodized Aluminum - Full Mortise *
GFM	Satin Nickel Anodized Aluminum - Full Mortise	PWFM	Painted White Aluminum - Full Mortise *

* Black and Painted White are special order finishes.

Testing/Ratings:

Aluminum continuous hinge for use on swinging type fire doors of the hollow metal, tin-clad, sheet metal and steel covered composite type rated up to 3 hours, wood covered composite type rated up to and including 1-1/2 hours. Also wood core rated up to and including 20 minutes without hose stream. Meet criteria of UBC 7.2 for positive pressure.



LISTED
Door Hinges
76Y2

Architectural Door Accessories

PemkoHinge®

The global leader in
door opening solutions

Installation Instructions:

Full Mortise units are designed mainly for new doors and frames, and are applied so as to conceal both leaves. In retrofit applications, the door width must be reduced for proper clearance as shown in Figures A & B (below).

1. With the hinge leaves open, position the hinge against the frame rabbet. Be sure the leaf alignment flange is tight against the face of the frame. Allow 1/8" between the frame header and the top of the hinge leaf for door clearance. Mark and drill the top two holes per Drill Size Chart (below). **(Do not install).**
2. Position the door leaf of the hinge on the door. Be sure that the door leaf alignment flange is seated along the full length of the door edge, and the top edge of the door leaf is flush with the top edge of the door. Mark and drill all holes per Drill Size Chart. Thread tapping not required.
3. Screw the door leaf portion of the hinge to the door using the 12-24x7/16" thread forming screws. (Use wax or soap on screws to aid installation.)
4. Position the door at 90° to the frame. Install the top two screws in the frame leaf.
5. Close door and inspect for proper clearance and fit. Make adjustments as required due to improper frame installation if necessary to ensure proper operation of the complete assembly.
6. Mark and drill remaining frame leaf holes per Drill Size Chart, and install remaining screws.
7. Special Patented FirePins™ (U.S. Patent Number 5,492,208) are required on 3 hour (A-Label) assemblies. (See next page for instructions).

Shortening the Hinge:




If the PemkoHinge® must be shortened, cut the bottom only using a chop saw. This will allow metal chips to work out after the installation. Although the PemkoHinge® is not handed, the hinge becomes handed after cutting and the cut edge must be installed at the bottom of the opening.

Drill Size Chart:

MATERIAL	THICKNESS	DRILL SIZE
Aluminum	.090 - .140	13
Metal	20 gauge	17
Metal	16-18 gauge	15
Metal	12-14 gauge	13
Wood	N/A	5/32"

Figures:

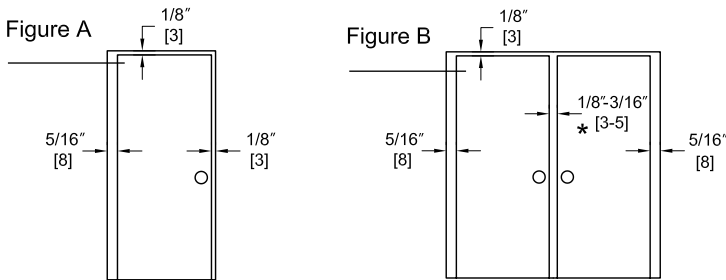

Testing/Ratings:

Aluminum continuous hinge for use on swinging type fire doors of the hollow metal, tin-clad, sheet metal and steel covered composite type rated up to 3 hours, wood covered composite type rated up to and including 1-1/2 hours. Also wood core rated up to and including 20 minutes without hose stream. Meet criteria of UBC 7.2 for positive pressure.




LISTED
Door Hinges
76Y2

PemkoHinge®

The global leader in
door opening solutions

Fire Pins:

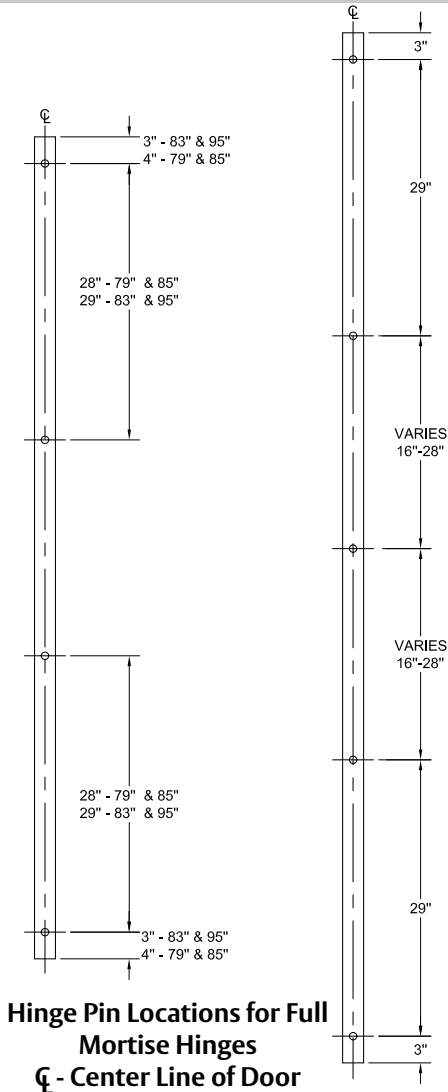

FIRE PINS ARE REQUIRED ON 3 HOUR RATED DOORS ONLY

PIN INSTALLATION:

Full Mortise (Edge Mounted) Hinge:
Install PemkoHinge® on door and
frame prior to locating pins.

1. Drill and tap for 5/16-18 threads
in frame as indicated on the
template or the drilled frame
leaf of the PemkoHinge®.
2. Insert Firepin in threaded hole.
3. Drill 3/4" hole 1/2" deep in edge
of door where indicated on the
template or the drilled door leaf
of the PemkoHinge®.

PEMKO FIREPIN™
U.S. PAT. #5,492,208

Testing/Ratings:

Aluminum continuous
hinge for use on swinging
type fire doors of the
hollow metal, tin-clad,
sheet metal and steel
covered composite type
rated up to 3 hours, wood
covered composite type
rated up to and
including 1-1/2 hours.
Also wood core rated up
to and including 20
minutes without hose
stream. Meet criteria of
UBC 7.2 for positive
pressure.



LISTED
Door Hinges
76Y2

Tools Required:

