



IMPORTANT
FOLD HERE ON HIGH EDGE OF BEVELED DOOR
BORE 2⅛" HOLE THRU DOOR FIRST
A6828A
1¾" DOOR
1⅜" DOOR
2⅜" BACKSET (20 PREFIX)
2¾" BACKSET
MARK FOR 1" DIA. HOLE AT CENTER OF DOOR THICKNESS.
DRILL THRU INTO CROSS BORE HOLE PARALLEL TO SIDES OF DOOR.
DETERMINE CORRECT BACKSET AND DOOR THICKNESS—THEN PLACE TEMPLATE ON DOOR AND MARK FOR HOLES.


TO MORTISE DOOR FOR LOCK


1 DETERMINE CORRECT BACKSET AND DOOR THICKNESS—THEN PLACE TEMPLATE ON DOOR AND MARK FOR HOLES.

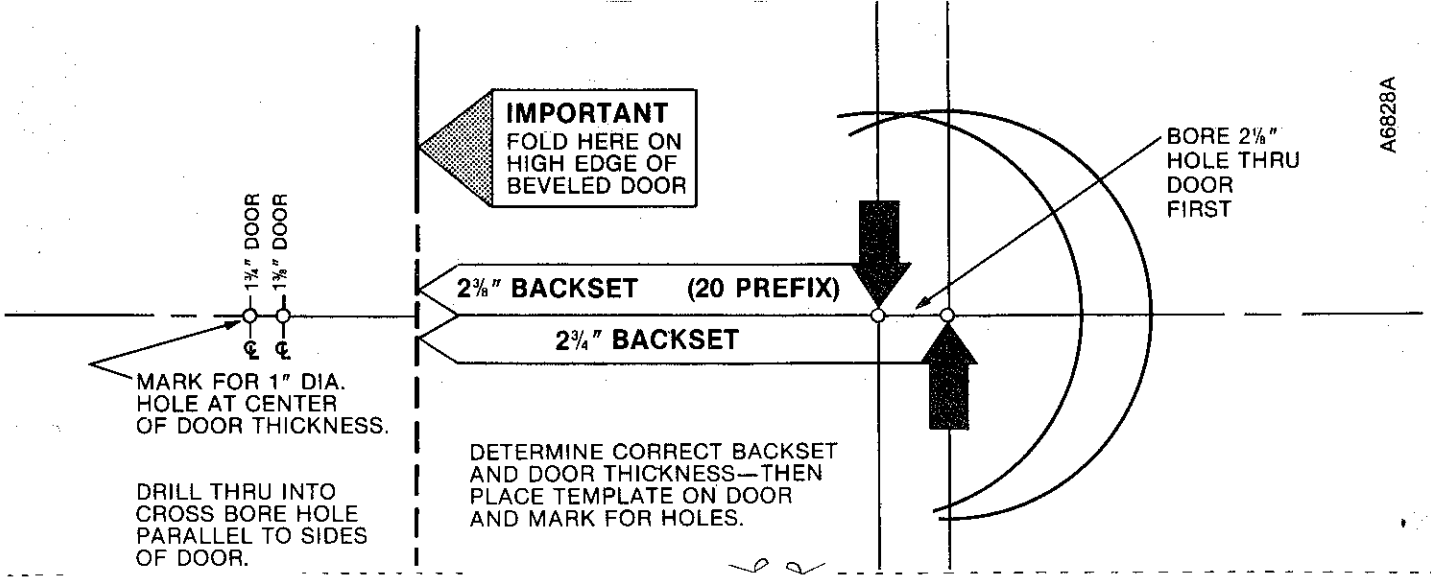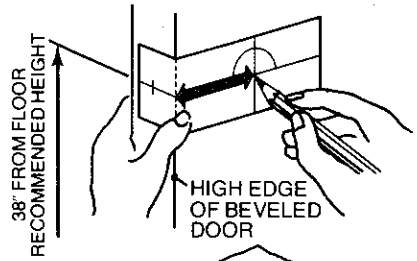

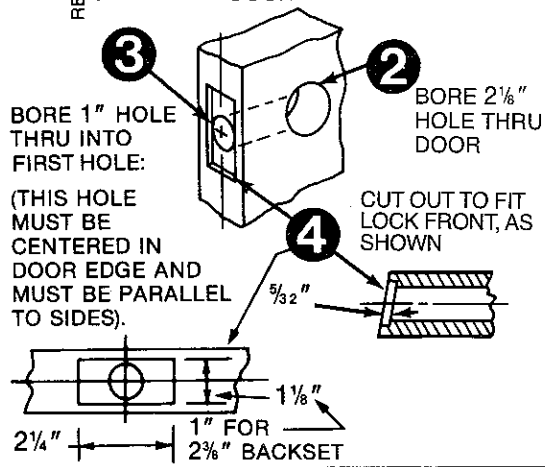

TO MORTISE FRAME FOR STRIKE

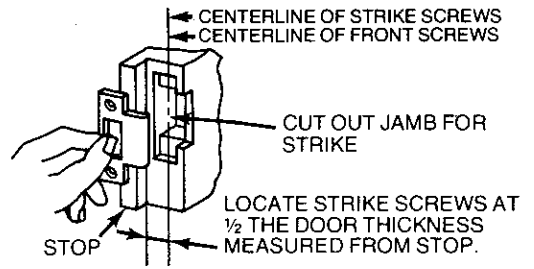

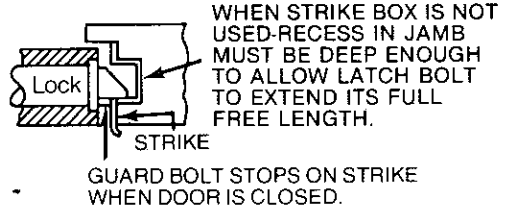

SEE REVERSE SIDE