
Installation Instructions


SARGENT
ASSA ABLOY

P106, P113, WD-P106 & WD-P113

Auxiliary control with Concealed Vertical Rod Exit Devices

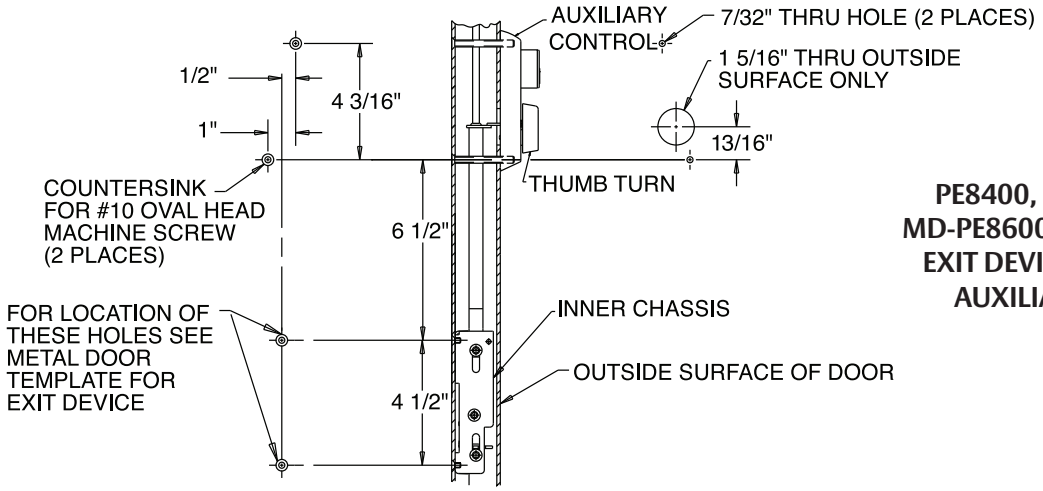

PE8400, 12-MD-PE8400, MD-PE8600 & 12-MD-PE8600 EXIT DEVICE X P100 SERIES AUXILIARY CONTROL

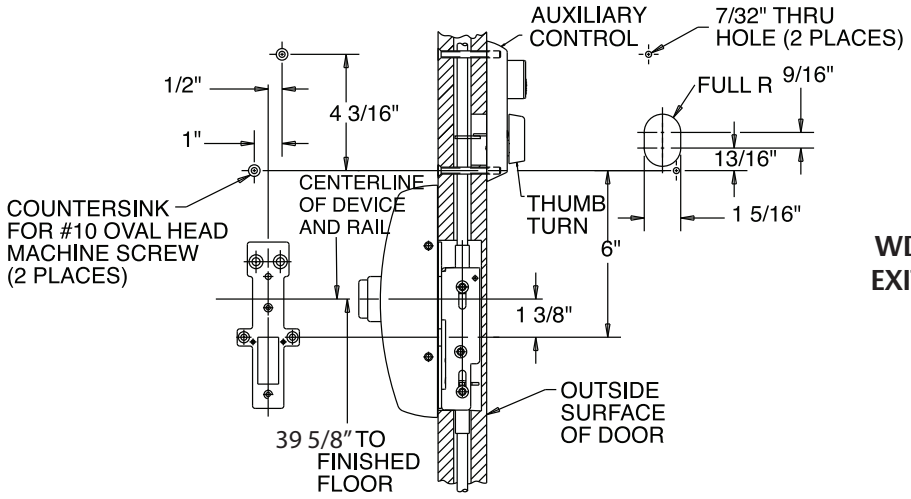

WD-PE8600 & 12-WD-PE8600 EXIT DEVICE X WD-P100 SERIES AUXILIARY CONTROL

⚠ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

1-800-727-5477 • www.sargentlock.com

Copyright © 2023, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

A8309 -1 05/23

Experience a safer and more open world

SARGENT
ASSA ABLOY


Installation Instructions

1 Using the exit device instructions, prepare the door for the exit device.

2 Prepare the door for auxiliary control as illustrated on page 1.


3 For wood doors, follow steps to install the auxiliary control bracket.

a

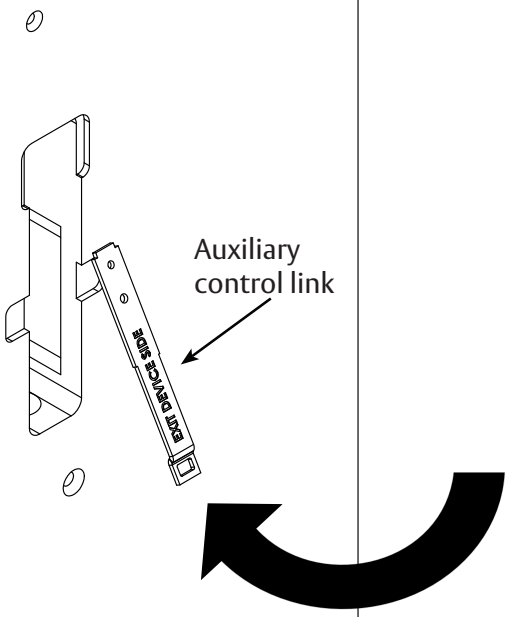

Feed the auxiliary control link up and through the exit device side of the door.


b

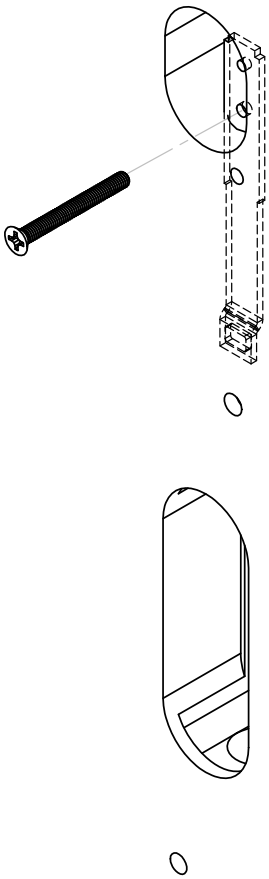

Screw the #10-32 X 2" fastener to the auxiliary control link that was placed in the door from step a.


Copyright © 2023, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

c

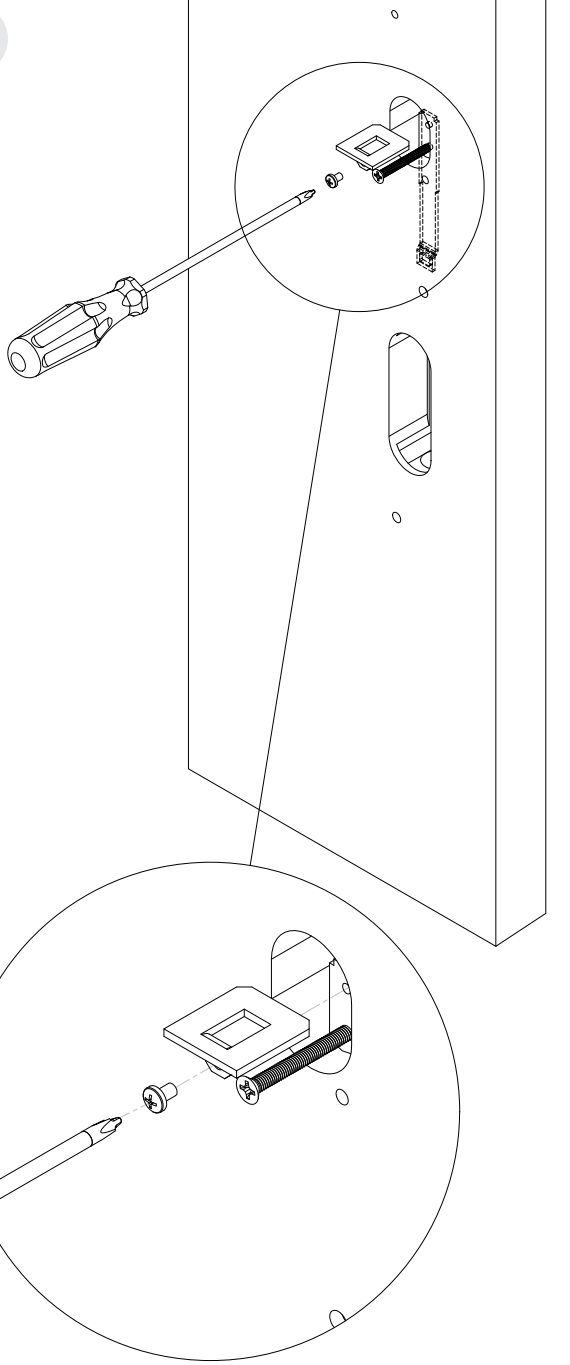

Holding the #10-32 fastener, take the platform and the smaller screw and attach it to the upper hole on the link in the door. Remove the #10-32 X 2" fastener.


d

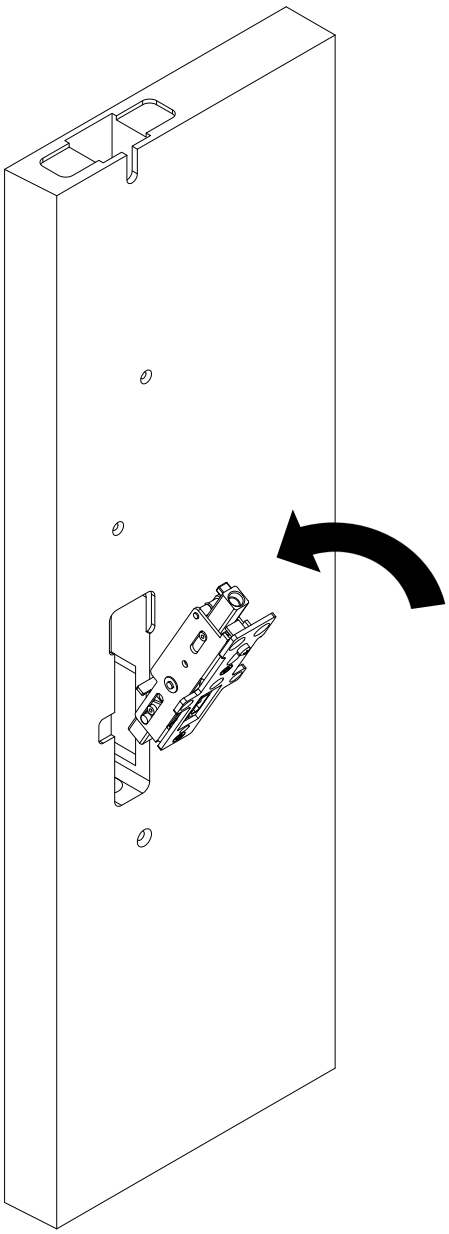

Take the inner chassis and place it into the opening.


Copyright © 2023, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

e

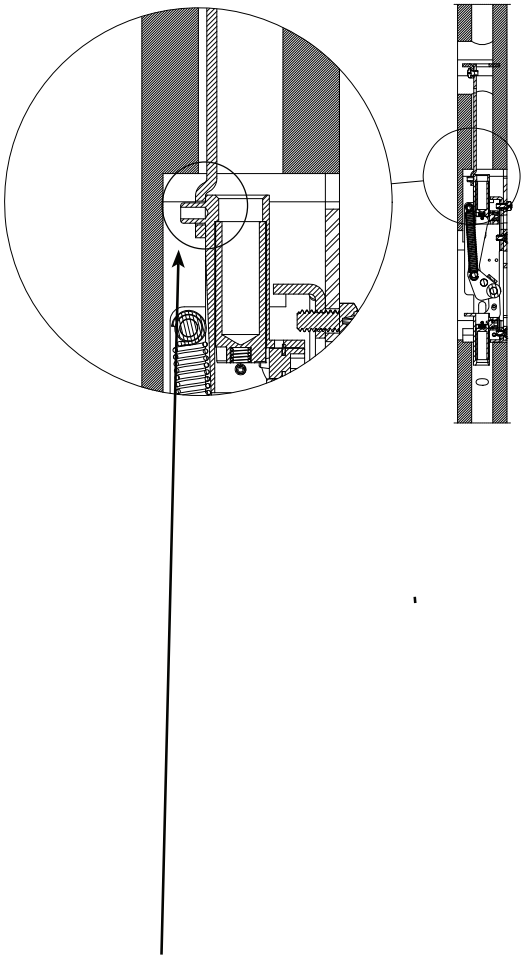

Hook the inner chassis into the link.


f

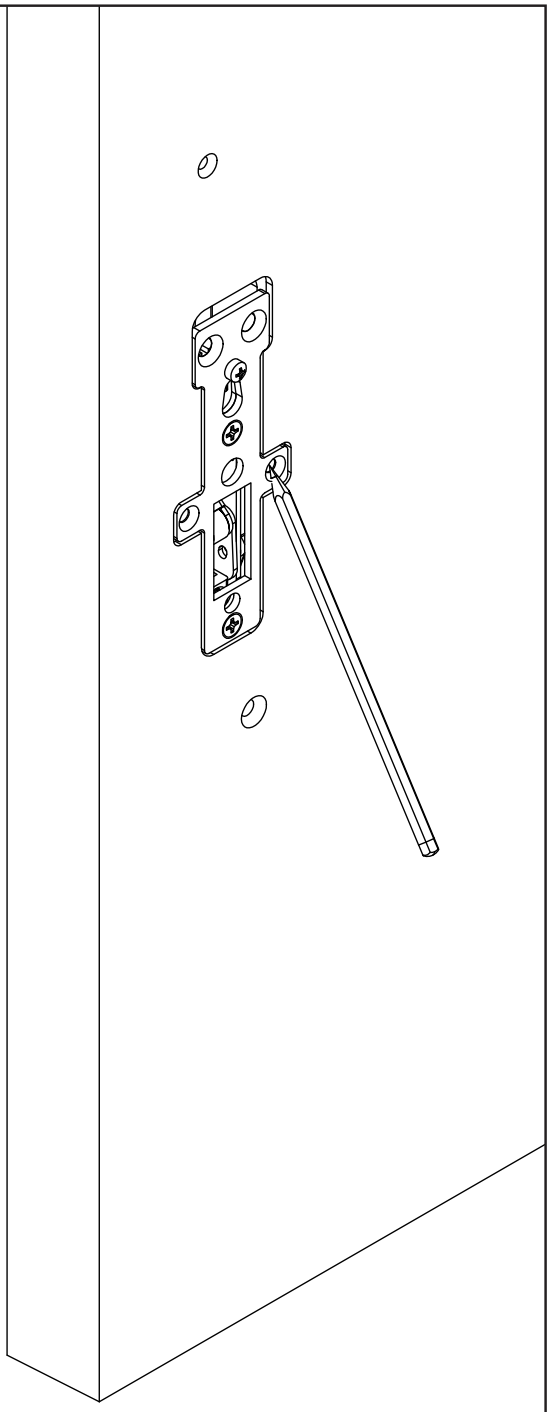

Mark the inner chassis mounting holes.


Copyright © 2023, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

g

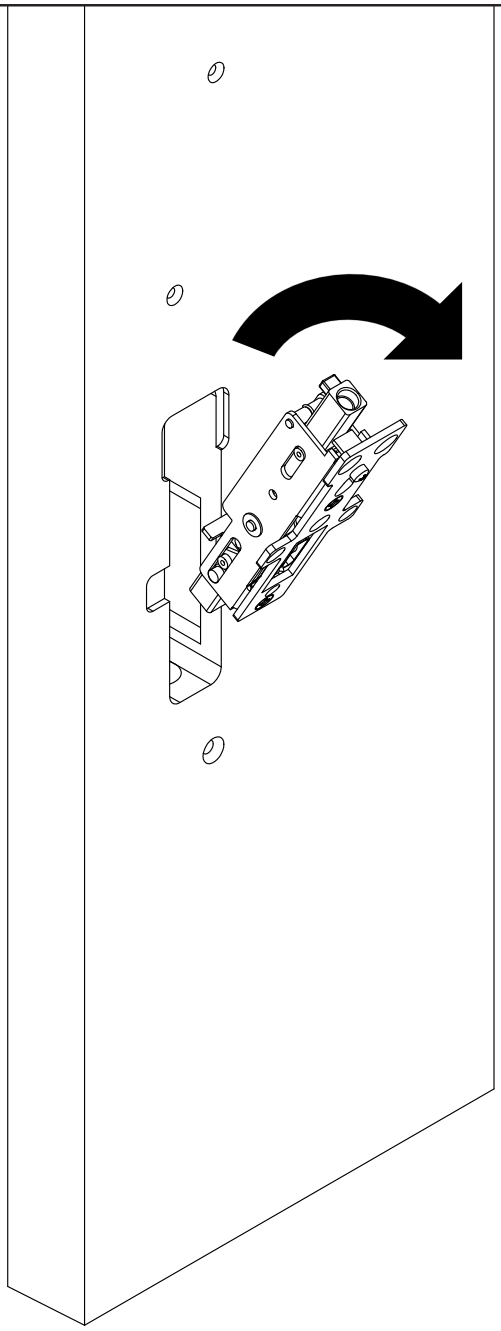

Remove the inner chassis.

h

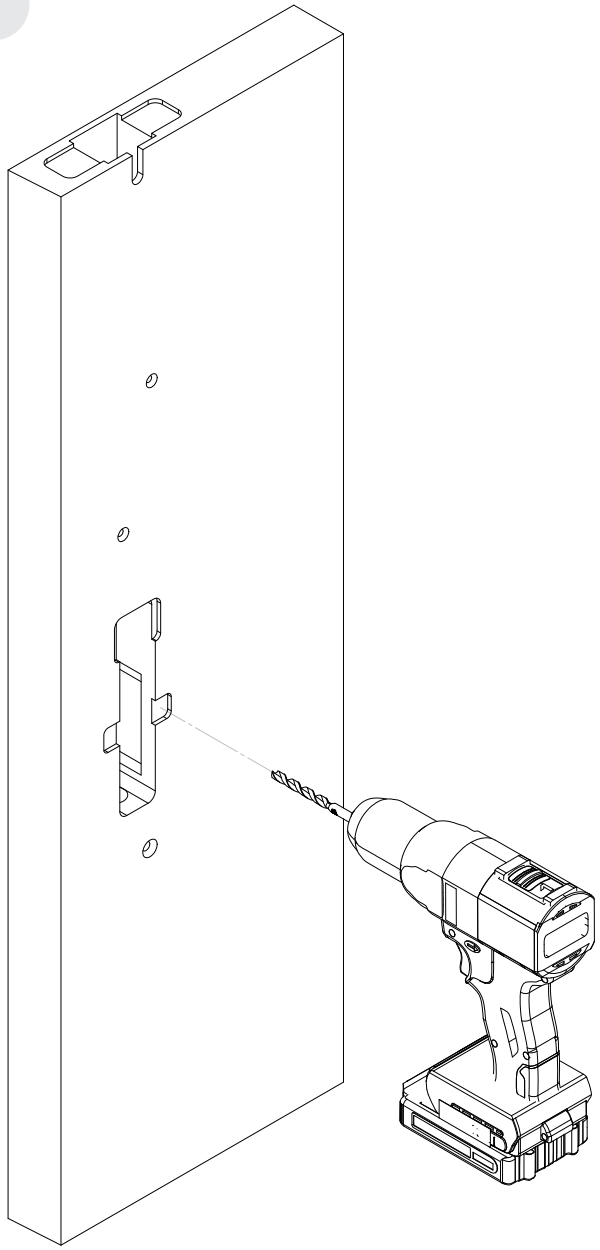


Pre-drill the holes in the door with a 1/8” drill bit.


1-800-727-5477 • www.sargentlock.com

Copyright © 2023, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world


i

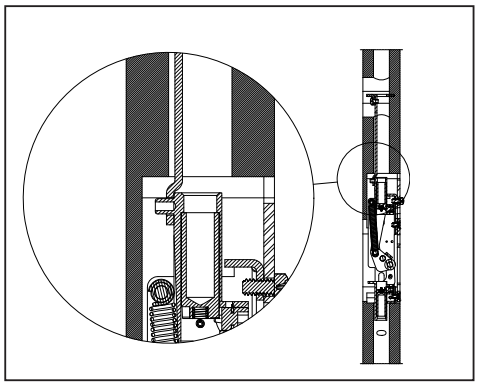

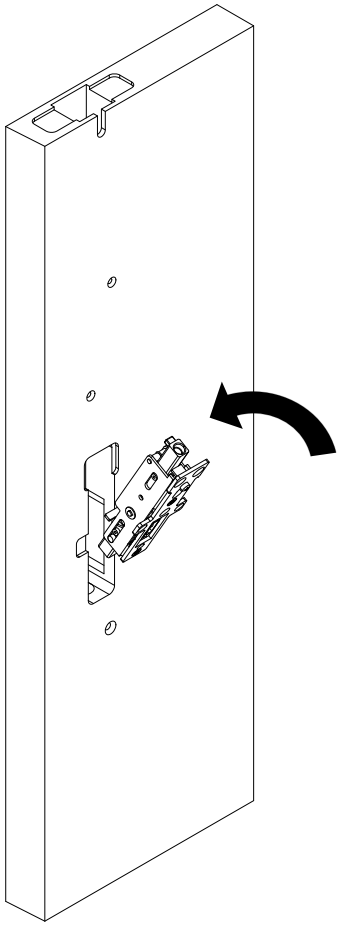

Rehook the inner chassis into the link and then insert the inner chassis back into the door.

j

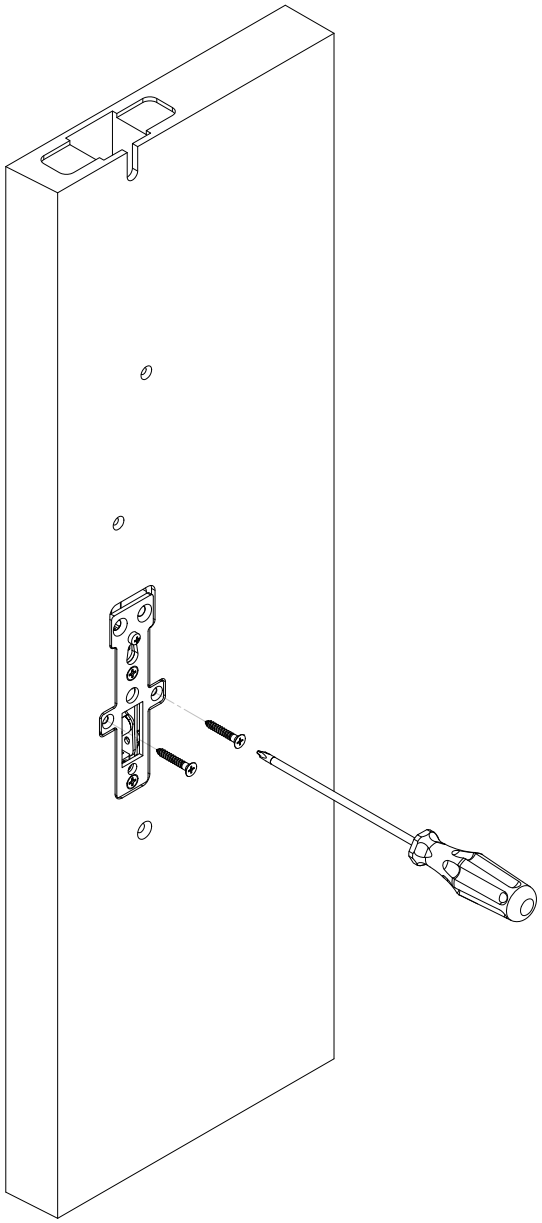

Secure the inner chassis with two screws.


A8309-1 5/23

1-800-727-5477 • www.sargentlock.com

Copyright © 2023, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world

k

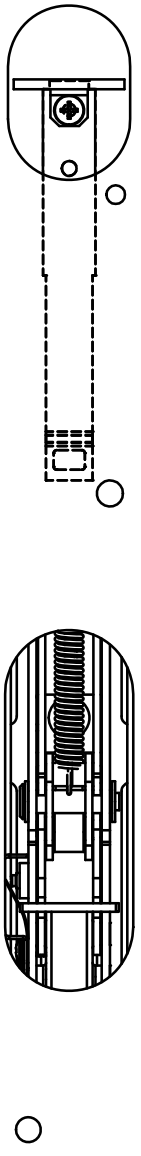


Confirm installation is as shown.

Copyright © 2023, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.


4 Using exit device instructions, mount exit device to the door.

5 Mount auxiliary control to door.

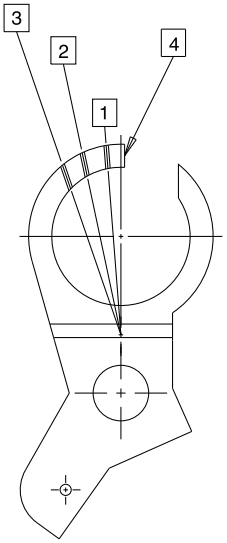

BREAK OFF POINTS (IF NEEDED)

1. USED FOR SARGENT P-106 AND WD-P106 FUNCTION.
2. USED ON 51-P106 FUNCTION, 82-P106 AND 83-P106 PREFIX (OLD STYLE REMOVEABLE CORE).
3. USED ON SARGENT P-113 AND WD-113 FUNCTION, ALL CYLINDERS.
4. USE AS IS FOR 70-P106, 70-WD-P106, 72-P106, 72-WD-P106, 73-P106, AND 73-WD-P106 BEST CYLINDER FUNCTIONS. SCHLAGE CYLINDER SIZE #41.

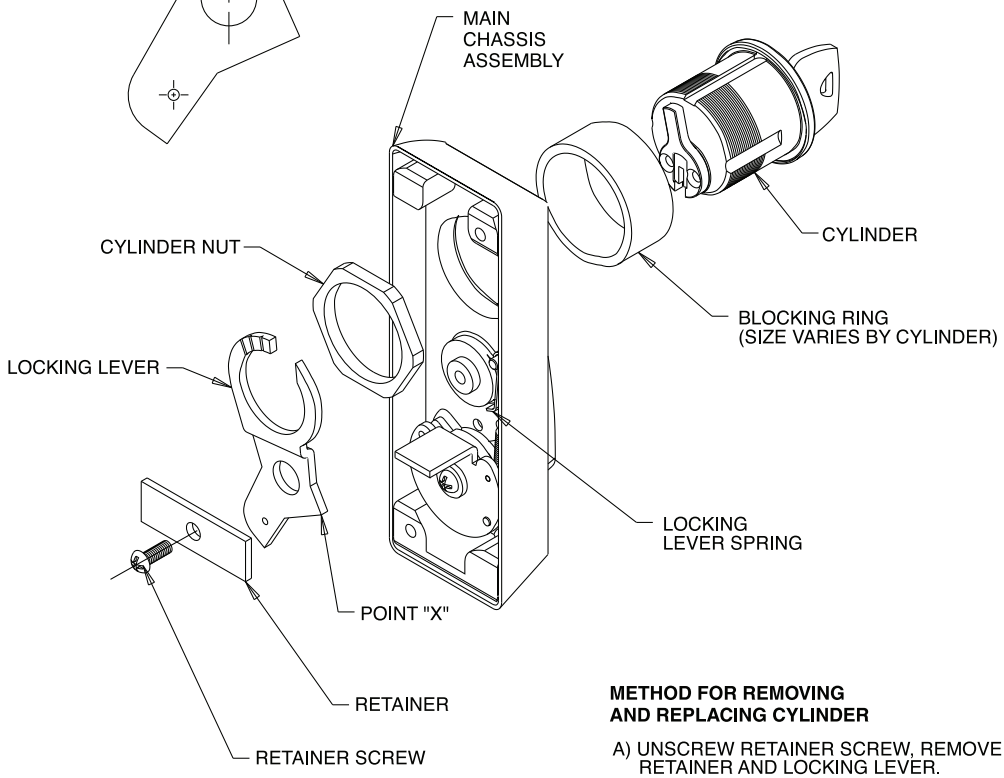

METHOD FOR REMOVING AND REPLACING CYLINDER

A) UNSCREW RETAINER SCREW, REMOVE RETAINER AND LOCKING LEVER.

B) UNSCREW CYLINDER NUT, REMOVE BLOCKING RING AND CYLINDER.

C) REPLACE CYLINDER BY REVERSING PROCEDURES ABOVE. MAKE SURE THAT CYLINDER CAM FACES UP AND THAT LOCKING LEVER SPRING ENGAGES LOCKING LEVER AT POINT "X".

Copyright © 2023, SARGENT Manufacturing Company. All rights reserved. Reproduction in whole or in part without the express written permission of SARGENT Manufacturing Company is prohibited. Patent pending and/or patent www.assaabloydss.com/patents.

Experience a safer and more open world