
Schlage Control™ Smart Deadbolt

with Engage Technology

Model FE410F

Door Preparation Instructions for Door with Existing Holes

Tools Needed

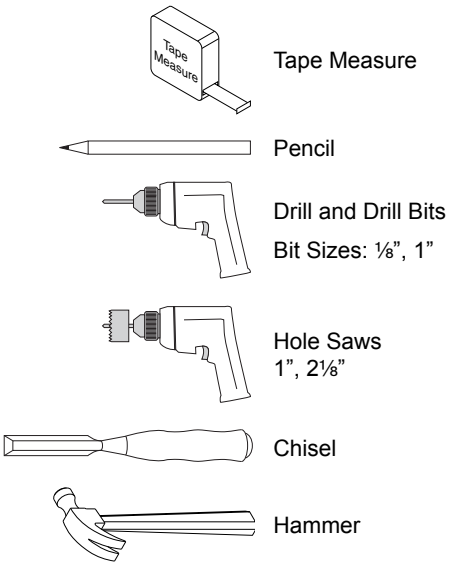

Tape Measure

Pencil

Drill and Drill Bits

Bit Sizes: ⅛", 1"


Hole Saws
1", 2⅛"

Chisel

Hammer

1 Measure door thickness.


If the door is thinner than 1⅜" or thicker than 1¾", then the lock will not fit properly on the door.

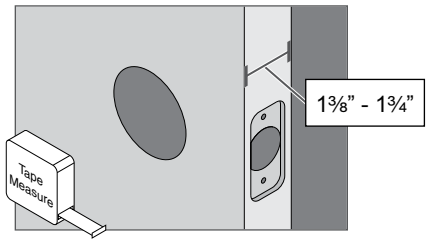

ⓘ **A thick door kit is available from Product Support at** 800-847-1864**.**


2 Measure the backset.

If existing backset is not 2⅜" or 2¾", then the lock will not fit properly on the door.

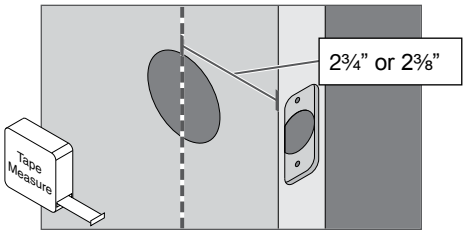


3 Measure the distance between the two holes.

The two holes must be either 4" or 5½" apart. If they are not, the lock will not fit.

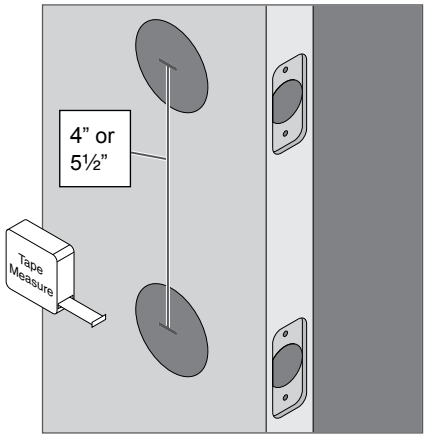


4 Measure the hole sizes.


4a If hole sizes are larger than those shown, then the lock will not fit properly on the door. If hole sizes are smaller than those shown, see steps ***4b*** and ***4c***.

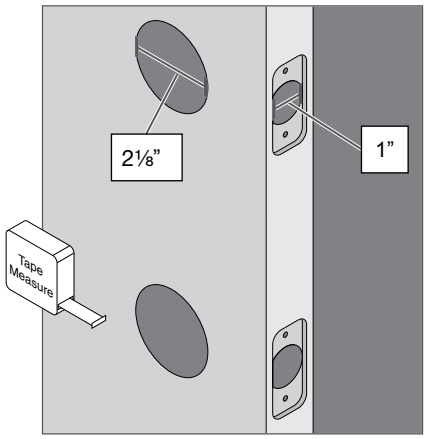

4b If necessary, enlarge holes in door face.

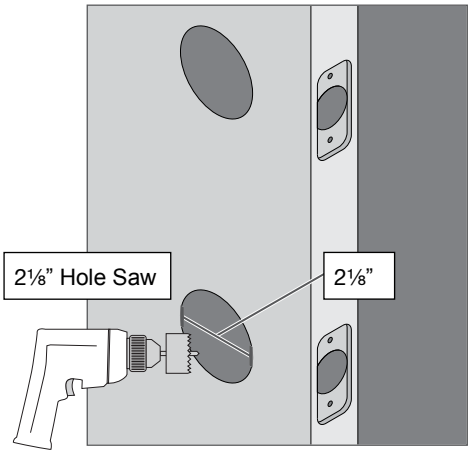


4c If necessary, enlarge holes in door edge.

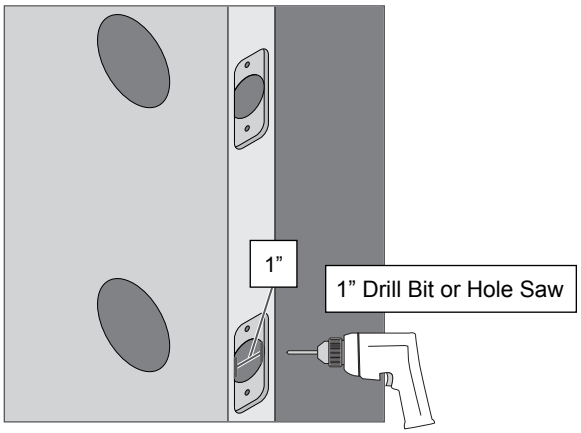


5 Check the door jamb.


5a Place new latch strike, and bolt strike and reinforcement plate against the door jamb. If these do not fit properly, see steps ***5b*** and ***5c*** .

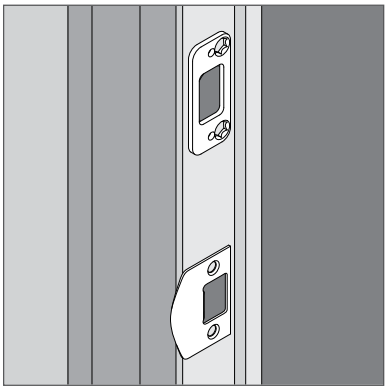

5b If correction is necessary, trace the faceplates and mark holes.

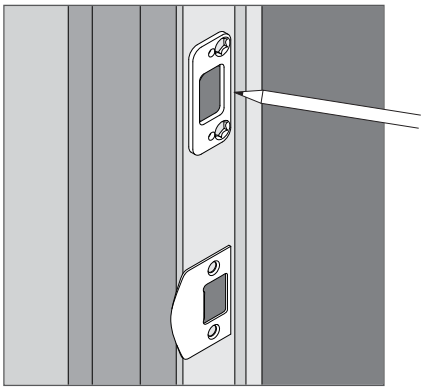

5c If necessary, use chisel, hammer and drill to correct door jamb preparation.

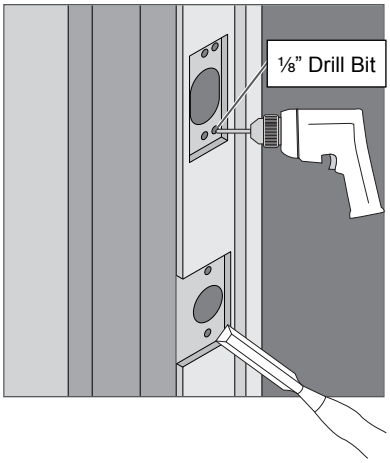

Product Support

800-847-1864 www.allegion.com

ALLEGION

© Allegion 2016