
REV.	DESCRIPTION	ECO NO.	DATE
01	ADD LATCH ORIENTATION NOTE		3/10/2008
02	UPDATED THRU HOLE NOTE		5/8/2008

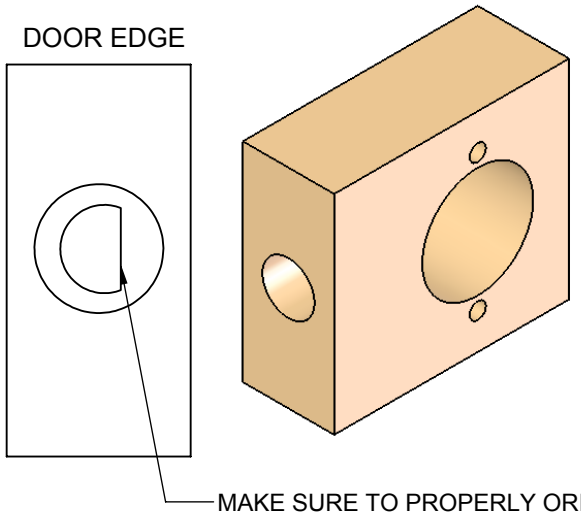

NOTE: INSERT LATCH INTO ∅1" [25] HOLE USING FINGER PRESSURE. THEN WHILE HOLDING A PIECE OF WOOD OVER THE LATCH FACE, STRIKE WITH A MALLET UNTIL LATCH IS SITTING FLUSH WITH DOOR EDGE.

DOOR TYPE: WOOD OR COMPOSITE, FLAT

DOOR THICKNESS: KNOB 1 3/8"[35] - 1 3/4"[45], LEVER 1 3/8"[35] - 2"[51]

FACEPLATE: CIRCULAR DRIVE-IN

BACKSET: 2 3/4"

DIMENSIONS IN [ ] ARE IN MILLIMETERS

HAGER COMPANIES ST. LOUIS, MISSOURI

HAGER RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE. CALL HAGER ENGINEERING AT 1-800-325-9995 FOR THE LATEST REVISION DATE OF TEMPLATE.

PRIMARY DIMENSIONS SHOWN IN INCHES, DIMENSIONS IN [ ] ARE MILLIMETERS.

MATERIAL

FINISH -

DO NOT SCALE DRAWING

DRAWN	MRJ	11/19/2007
ENG. APPR.	MAM	12/05/2007
Q.A.		

TOLERANCES:
FRACTIONAL: ±0.015"
ANGULAR: MACH: ± 1° BEND: ±1°
TWO PLACE DECIMAL: ±0.01"
THREE PLACE DECIMAL: ±0.004"

3500
DRIVE-IN LATCHBOLT DOOR TEMPLATE (2-3/4 BACKSET)

SIZE	DWG. NO.	REV.
A	T-LS00238	02

SCALE:1:2 | WEIGHT: 0.42 | SHEET 1 OF 1