Installation Instructions for 6K Dummy Trim

Overview

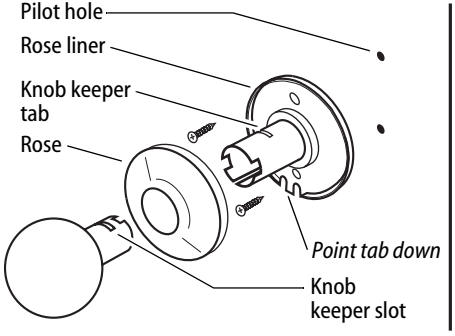


Figure 1 – Overview diagram

1 Prepare door

1 Place the template on the door at the appropriate height and tape it to the door.

Note: *The suggested height from floor to centerline of the lock is 40 5/16 inches.*

2 Mark and drill two pilot holes if necessary.

2 Disassemble trim

1 Using a screwdriver, depress the knob keeper tab and pull the knob off the sleeve.
2 Pry the rose off the rose liner.

3 Install dummy trim

1 Mount the rose liner onto the door using the screws that are provided. Make sure that the tab on the rose liner points down. See Figure 1.
2 Press the rose onto the rose liner.
3 Aligning the knob keeper slot with the knob keeper tab, press the knob onto the sleeve until it snaps into place.

T80943/Rev – 1888824 ER7991-39 Feb 2004

BEST ACCESS SYSTEMS
Indianapolis, Indiana