921100-00

Trim

696/697TP/TP-BE

VON DUPRIN

Installation Instructions

1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
2. Prepare door for trim:
   - **A.** Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled.
   - **B.** Locate and prepare all holes as shown.
3. For TP trim with 98/99 Rim, 98/9927, or 98/9947 exit device:
   - **A.** Install cylinder (Figure 1).
   - **B.** Cut cylinder tailpiece to extend 7/16″ to 9/16″ out of exit device side of door.
   - **C.** Install tailpiece guide in exit device cam (Figure 2).
4. Apply trim.
5. Apply exit device.

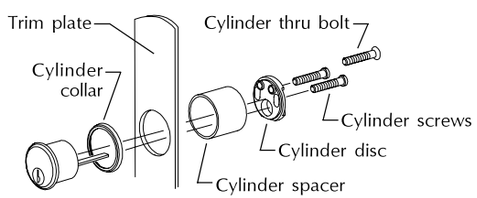


Figure 1


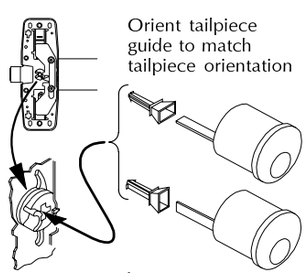


Figure 2

Device Application Schedule				
Device	**"A"**	**"B"**	**"C"**	**"D"**
98/99 Rim	1/4″	3/8″	1-9/16″	1-1/2″
98/9927				
98/9947				
98/9975	2-1/4″	1/2″	3/4″	5/8″

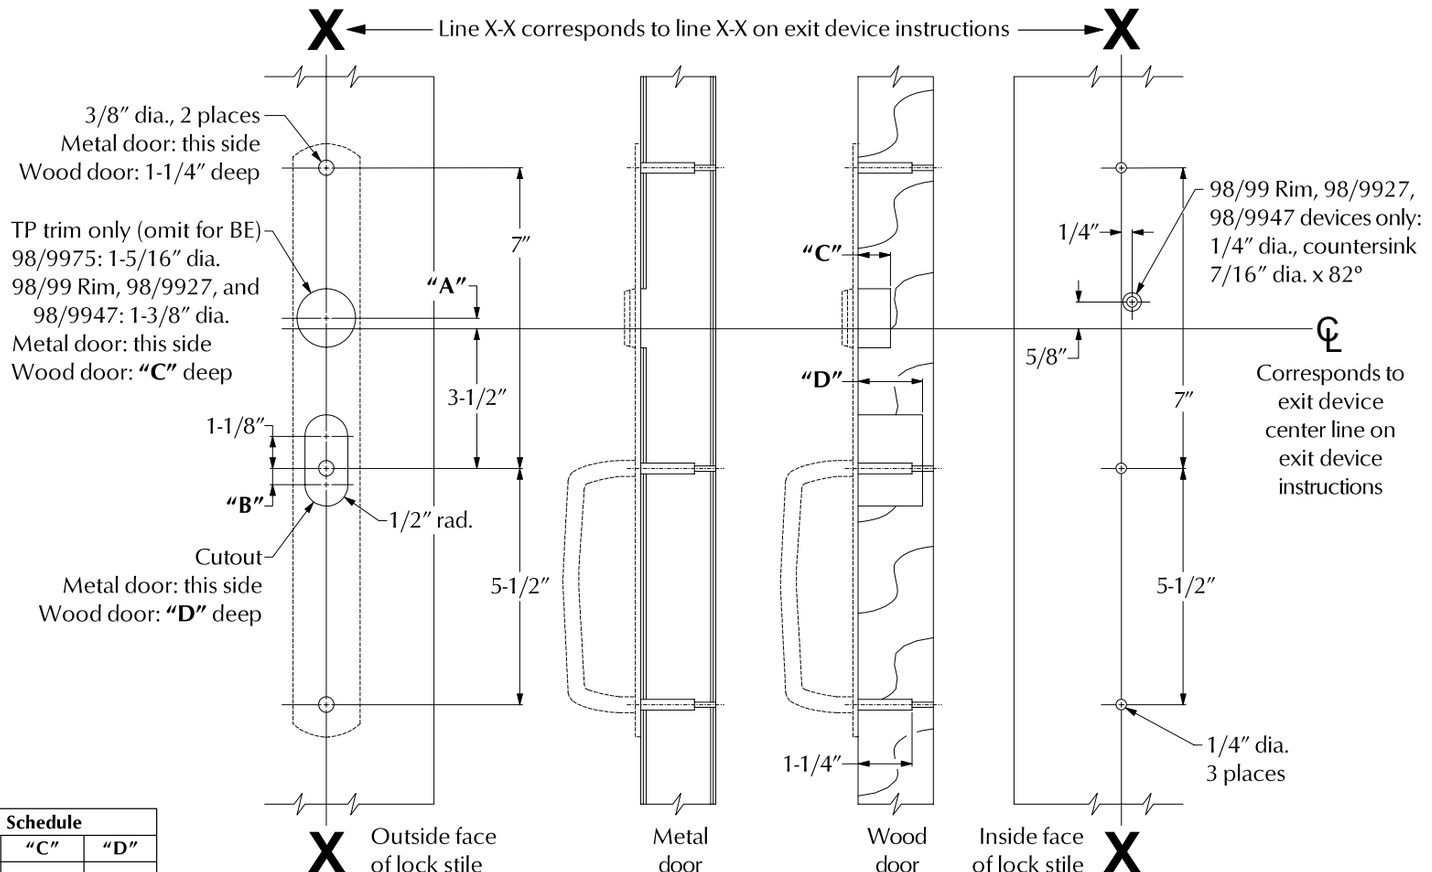

LHR shown, RHR opposite

For cutouts on inside face of door, see exit device instructions

Customer Service

1-877-671-7011 www.allegion.com/us

ALLEGION

© Allegion 2014
Printed in U.S.A.

921100-00 Rev. 01/14-b