


Finger Guard 2248

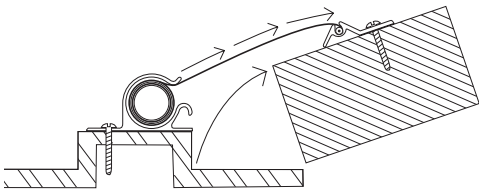

This product should be mounted before any panic bars or other surface mounted hardware.

Installation Instructions

1. Position bottom of Fingerguard flush with bottom of door.
2. Mount roller portion on door frame soffit flush with door stop edge closest to door.
3. Mount the fabric retainer to the surface of the door, with mounting holes approx. 2-3/4" from edge of the door.

NOTE: With door closed, the two (2) metal portions should be approximately 7/8" apart to prevent pinching fingers.

Este producto debe instalarse antes que las barras de pánico u otro herraje montado en la superficie de la puerta.

Instrucciones de Instalación

1. Coloque la parte inferior del protector de dedos para puertas al ras de la parte inferior de la puerta.
2. Instale el rodillo en el marco de la puerta con el intradós al ras de la orilla del borde más cercano a la puerta.
3. Instale el retenedor de tela en la superficie de la puerta, con orificios de montaje aproximadamente a 2-3/4" de la orilla de la puerta.

NOTA: Con la puerta cerrada, los dos (2) segmentos de metal deben de estar separados aproximadamente 7/8" para evitar pellizcarse los dedos.



POSITIVE PRES-
SURE TESTED
MISCELLANEOUS
FIRE DOOR
ACCESSORY

SOMETIDOS A PRUEBA
DE PRESION POSITIVA
ACCESORIO
MISCELÁNEO PARA
PUERTA CORTAFUEGO