R 908 Series - 135/167/199mm Components

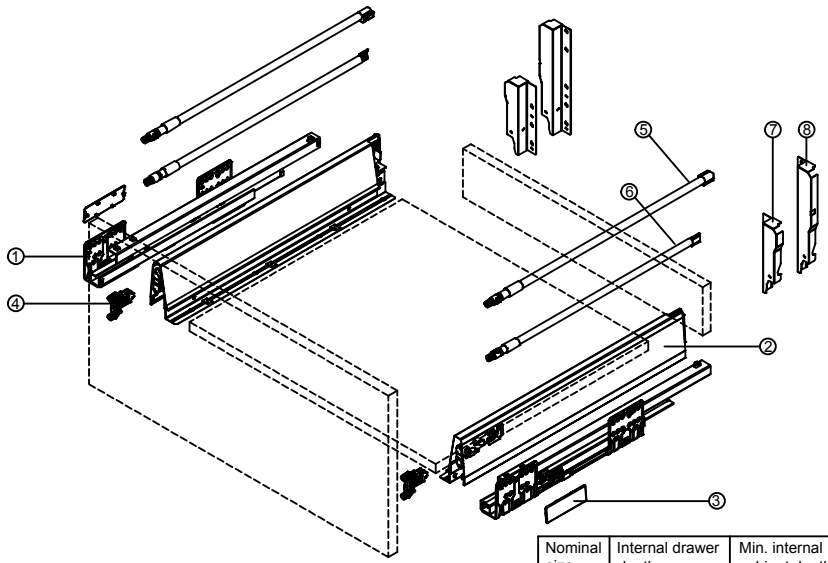

1. Slides (L/R)	6. Mid gallery rails (199 model only)
2. Drawer profile (L/R)	7. 135 or 167 rear fixing bracket
3. Cover caps	8. 199 rear fixing brackets
4. Front brackets	
5. Upper gallery rails	

Nominal size	Internal drawer depth	Min. internal cabinet depth
270mm	244mm	280mm
300mm	274mm	310mm
350mm	324mm	360mm
400mm	374mm	410mm
450mm	424mm	460mm
500mm	474mm	510mm
550mm	524mm	560mm

Slides installation

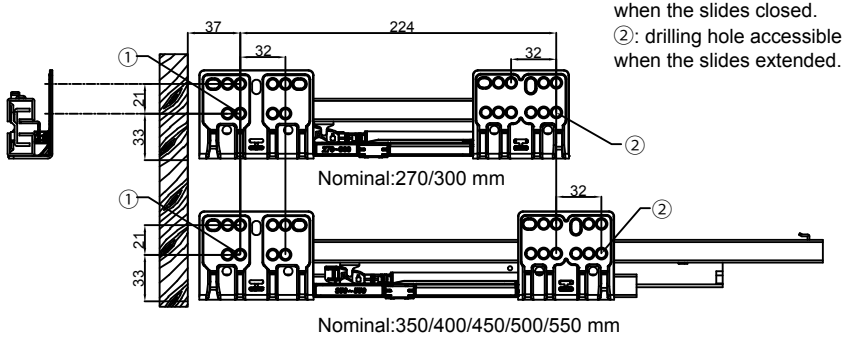

①: drilling hole accessible when the slides closed.
②: drilling hole accessible when the slides extended.

Update: 2016-04-05

135mm Installation dimensions

Assembing dimensions of cabinet

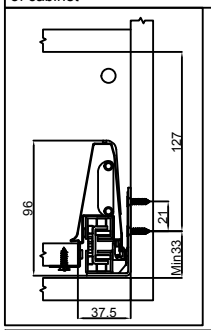

Front fixing bracket

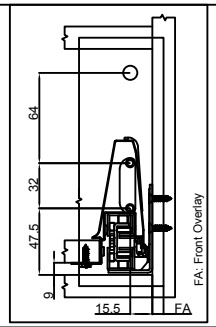

Drilling hole size on drawer front

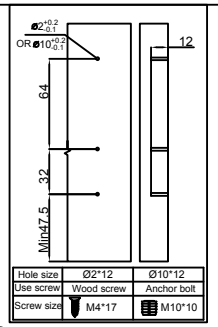

Hole size	Ø2*12	Ø10*12
Use screw	Wood screw	Anchor bolt
Screw size	M4*17	M10*10

Drawer back

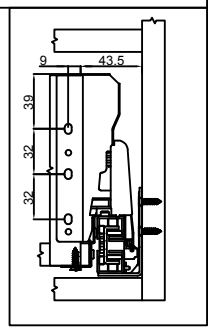

167mm Installation dimensions

Assembing dimensions of cabinet

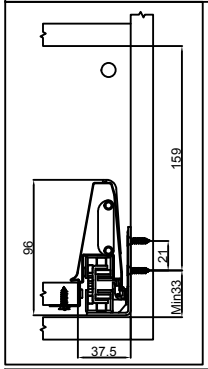

Front fixing bracket

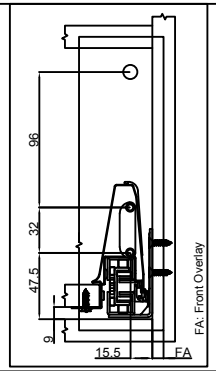

Drilling hole size on drawer front

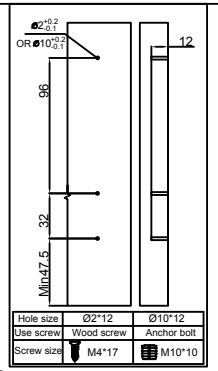

Hole size	Ø2*12	Ø10*12
Use screw	Wood screw	Anchor bolt
Screw size	M4*17	M10*10

Drawer back

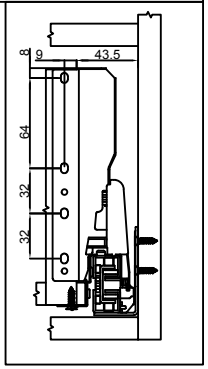

199mm Installation dimensions

Assembing dimensions of cabinet

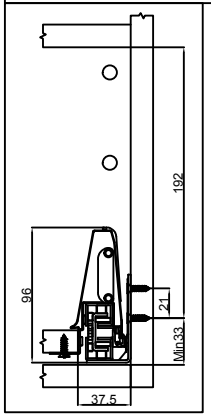

Front fixing bracket

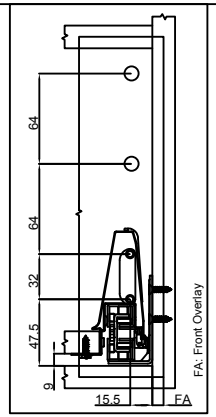

Drilling hole size on drawer front

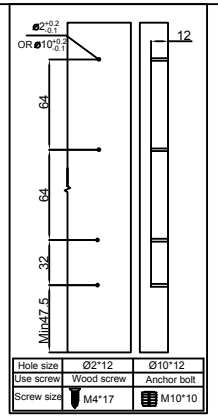

Hole size	Ø2*12	Ø10*12
Use screw	Wood screw	Anchor bolt
Screw size	M4*17	M10*10

Drawer back

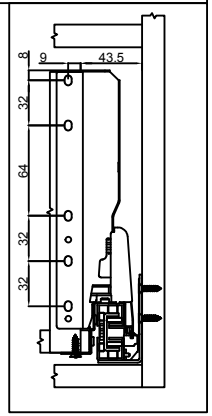

Bottom and back panels measurement

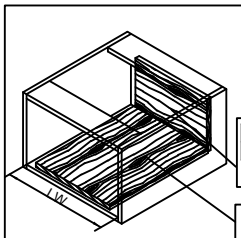

16mm Thickness panel
LW: Internal cabinet width

Nominal Length:
270/300/350/400/450/500/550mm

Drawer size	135	167	199
Back panel height	135	167	199

Back panel width = LW-87±0.5

Bottom panel width = LW-75±0.5
Bottom panel length = Nominal length-24mm

Drawer assembly

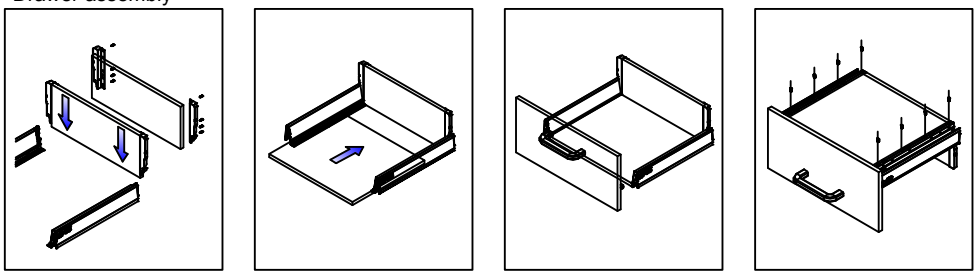

Gallery assembly

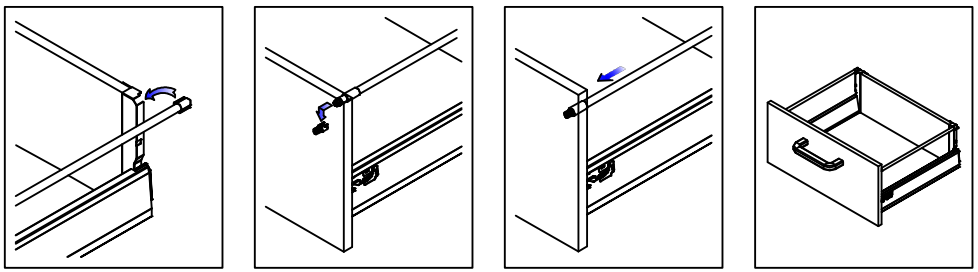

Install wooden drawer front

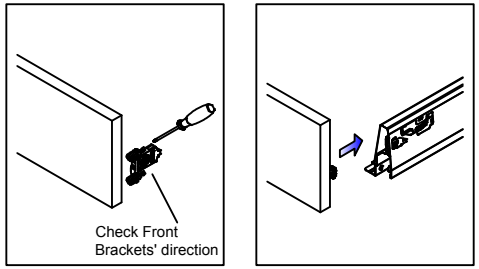

Disassemble wooden drawer front

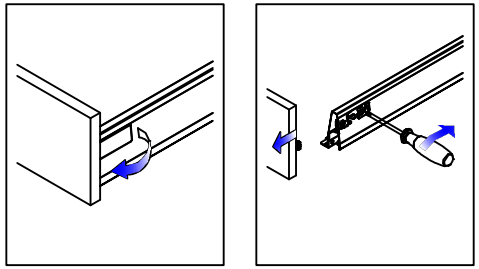

Drawer front height adjustment：±2mm

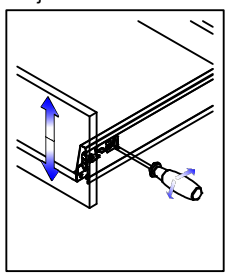

Drawer front right adjustment 1mm

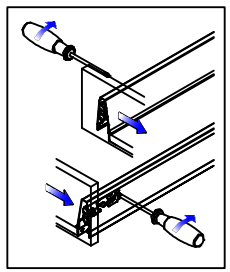

Drawer front left adjustment 1mm

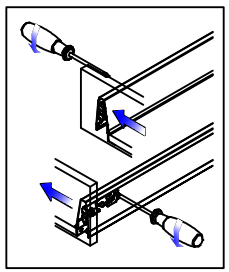

Drawer front top in/out adjustment

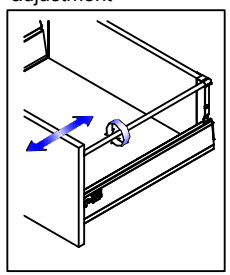
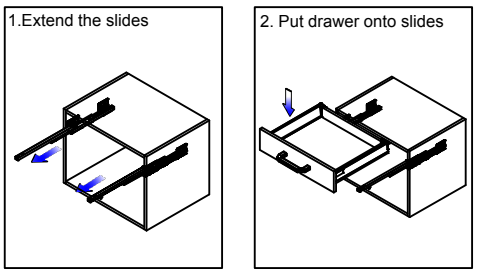
Install & uninstall drawer