Installation CONCEALED version

INSTALLATION TO BE EMBEDDED INSIDE THE PANEL

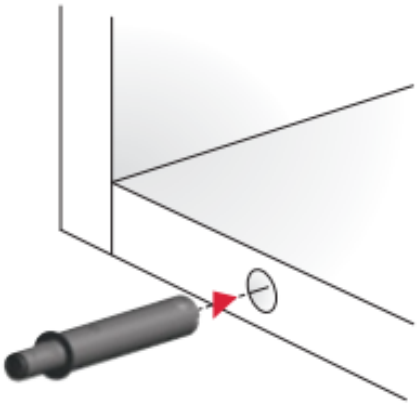

WITH MAGNET
for cabinets using unsprung hinges
or negative hinges.

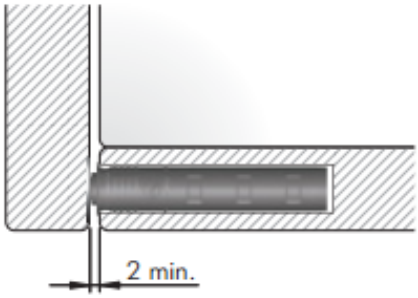

For details refer to
"K PUSH TECH AND
K LOCK DOOR PLATES".

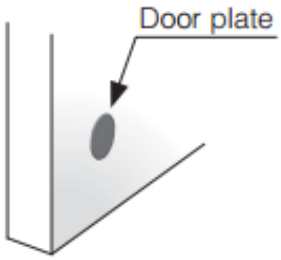

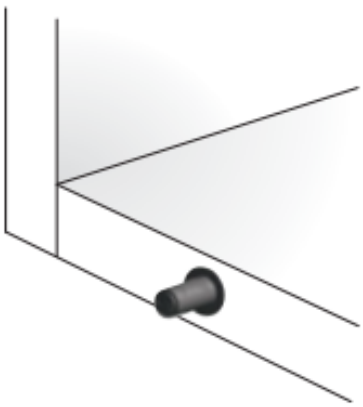

WITH BUFFER
for cabinets using sprung hinges.

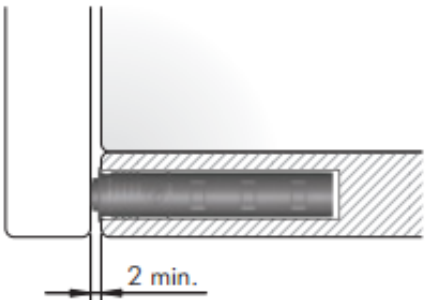
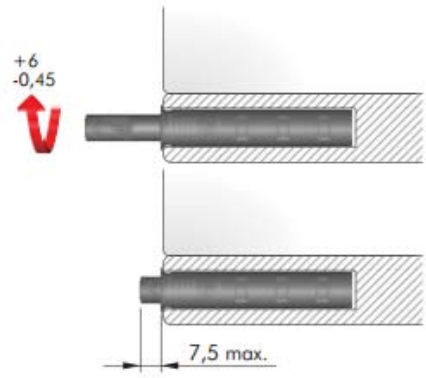
ADJUSTMENTS