


**SURFACE BOLT**

FOR USE ON STANDARD DOORS AND DOUBLE DOORS. PROVIDES POSITIVE LATCHING AND ADDED SECURITY. FEATURES FULLY CONCEALED, THREE SCREW INSTALLATION.

**INSTALLATION INSTRUCTIONS**

TOOLS REQUIRED: Drill, 1/8" drill bit for pilot holes, small chisel, Phillips screwdriver, pencil, and hex key wrench (included with package).

1. FOR VERTICAL APPLICATION - Using hex key wrench (A) unscrew stop screw (B). Slide upper section of bolt off bottom section.
  2. Place bottom section of bolt approx. 2" - 3" from edge of door - flush with top of door. Mark (C), drill and secure.
  3. Slide top section over bottom section and tighten stop screw (B).
  4. Universal strike application (D) - Align strike with bolt. Mark, drill and secure.
  5. Angle strike application (E) - Align strike on door jamb stop strip as shown in illustration. Mark opening and screw holes. Using drill and small chisel, mortise opening to approx. 1" deep. Secure strike.
1. FOR HORIZONTAL APPLICATION - Follow same instructions as above after placing bolt in desired position.

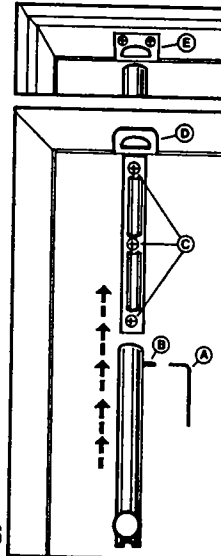

**MAINTENANCE INSTRUCTIONS**

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



SURFACE BOLTS



DUTCH DOOR BOLTS



DUTCH DOOR QUADRANT



DELUXE SURFACE BOLTS



SURFACE BOLT 6" C144 B3 BRT

MADE IN U.S.A.