

# TEMPLATE DRAWING

DWG # 2258  
Rev A, new drawing #  
10/5/99

## INSTALLATION INSTRUCTIONS FOR C821 TOUCH LATCH

1. Place the Touch Latch on the floor or shelf of the cupboard away from the door hinges, with the latch extending beyond the front edge of the floor or shelf.

Close the door gently, pushing the Touch Latch inward. Open the door and, where the Touch Latch rests, outline the elongated holes in pencil. Remove the Touch Latch and make screw holes in the rear radius of the pencil outlines. Replace the Touch Latch and screw it down firmly with two of the screws provided, making certain that the two screws are in the center of the elongated holes.

2. Slip the pointed Marker over the upper front edge of the Touch Latch with the point uppermost. Close the door firmly against the point. Open the door and, where the point has marked the inside, make a screw hole. Fit the strike hook firmly to the door, with the hook downwards; and the screw in the center of the elongated hole. Remove the Marker.

If the instructions have been carefully followed, the door should close leaving a clearance of about  $\frac{3}{8}$  in. between door and cupboard. If not, adjust the Touch Latch as follows:


- (a) if the door fails to catch, slacken the two screws holding the latch and move it outwards slightly.
- (b) If the clearance is too great, slacken the screws and move the latch inwards.

Raise or lower the Strike Hook as necessary.

3. When no further adjustment is necessary, set the position of the Touch Latch by driving the pins provided through the small holes in the latch and install the additional screw in the strike hook.

### OPTIONAL INSTALLATIONS

Though most easily installed on the floor or shelf of the cupboard, it may sometimes be more convenient to install the Touch Latch on the side of the cupboard or under a shelf. Whatever the position, the latch will operate perfectly. The important thing to remember for an optional installation is to maintain the same distance from door to mounting location. Follow steps 1 through 3 above.

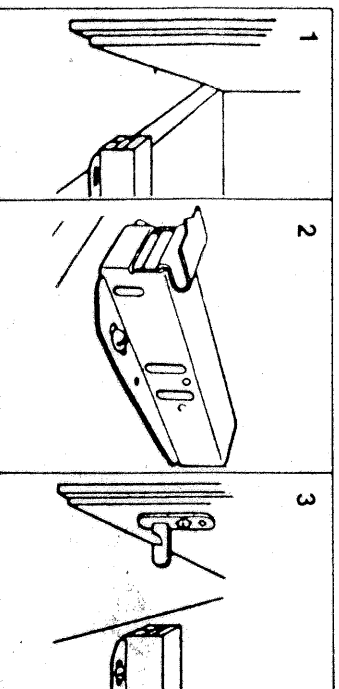

Printed in U.S.A.

Made in Taiwan

**IVES**

A Division of LEIGH PRODUCTS, INC  
New Haven, Conn. 06508

**IVES**

821 TOUCH LATCH

TEMPLATE NO. HB-821-68

DRAWN BY: F J H

DATE: 10-15-84

THE H. B. IVES CO.  
P.O. BOX 1887, NEW HAVEN, CONN. 06508