ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.
Rixson® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright© 2006, 2009, Yale Security Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

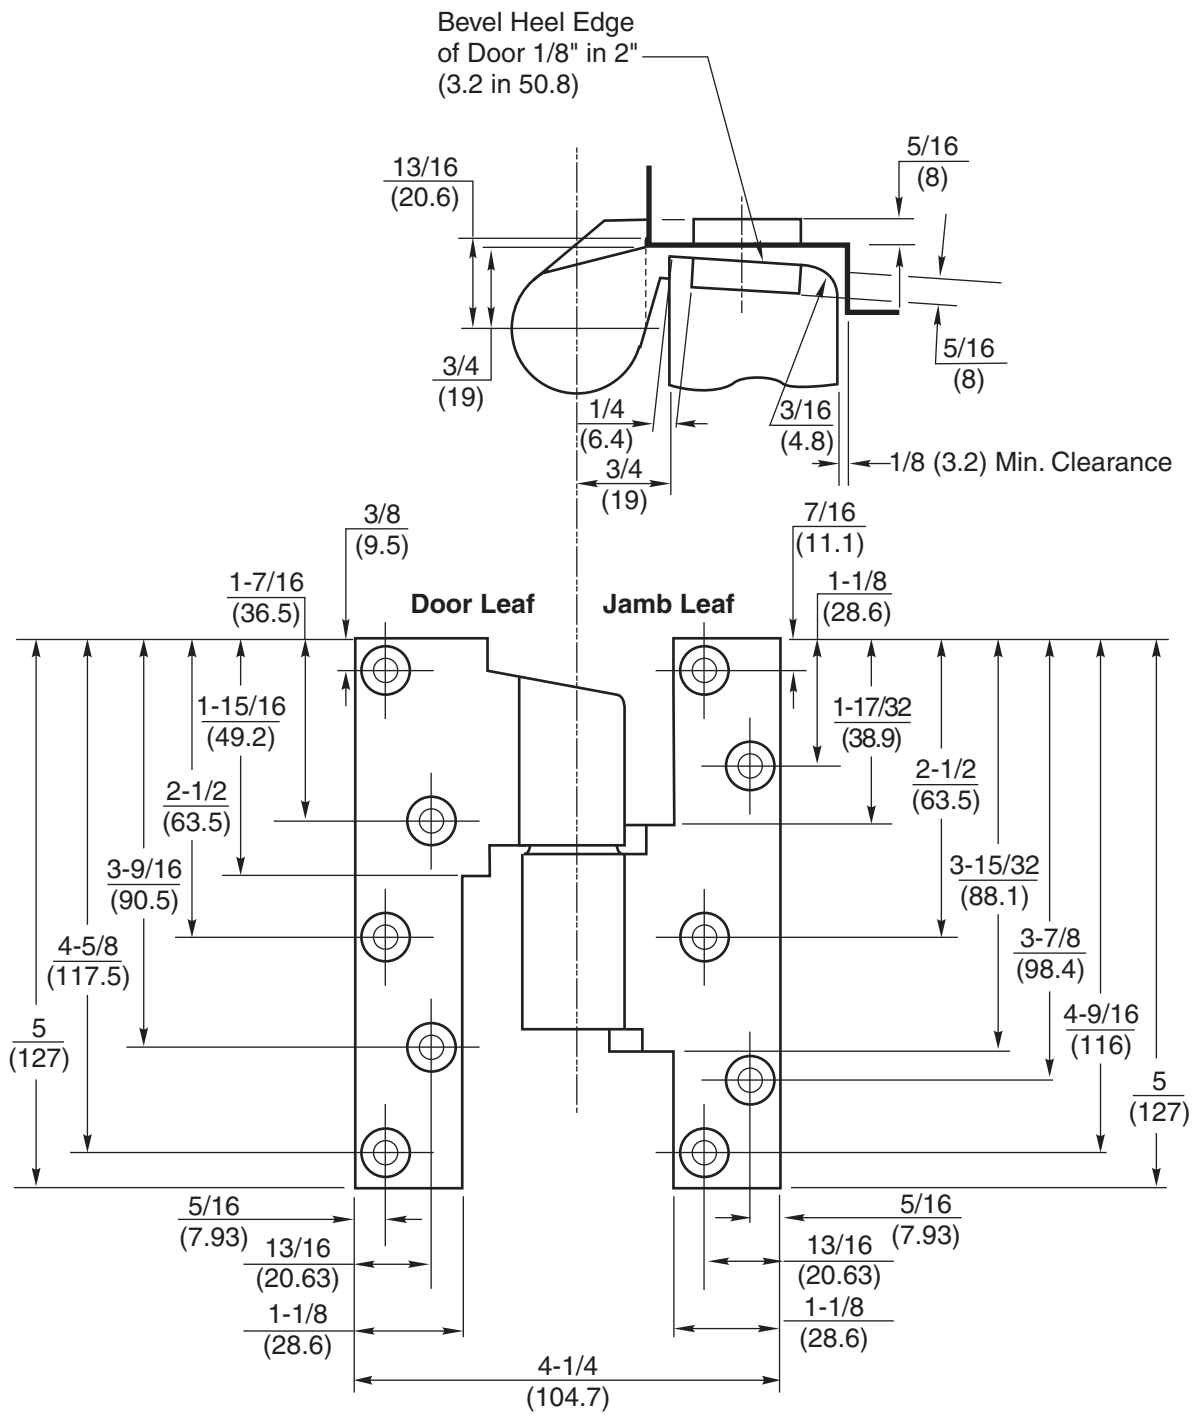


**Notes:**
1. Do not scale drawing.
2. Dimensions are given in inches (mm).
3. Pivot drilled for 1/4-20 x 5/8" FHMS or #14 x 1-1/2 FHWS
4. Right hand shown.
5. Template drawing for reference only.

# Side Jamb Pivot
# Asylum Design
# 3/4" Offset – Handed

RIXSON
ASSA ABLOY
www.rixson.com

| TEMPLATE NUMBER | DATE |
|---|---|
| IS-FA19 | 07-09 |

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.
Rixson® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright© 2006, 2009, Yale Security Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

Handed

# FA19 Side Jamb Pivot

3/4” Offset

## Installation Instructions

Door should already be hung with top pivot and bottom pivot (or floor closer)

**1.**
Mortise door & frame per template on reverse side.

**2.**
Affix pivot to door & frame.

**3.**
Align pivot point from top pivot to bottom arm. *(See diagram)*

**4.** 
Loosen arm screw*.

**5.**
Remove hex cap.

**6.**
Turn stud screw clockwise. Raise the door to the desired height.

**7.** 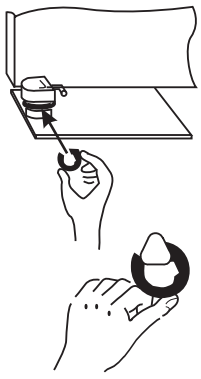
Using shims furnished with bottom arm, fill gap between arm and base.

**How To Determine Hand of Door**

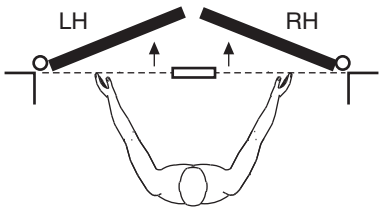


Face a door swinging open away from you. If it opens to the right, it is right hand. If it opens to the left, it is left hand.

**8.** 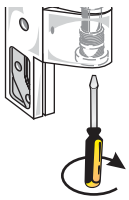
Turn stud screw counterclockwise until door rests on shims.

**9.** 
Tighten arm screw on spindle. Open and close door several times Re-tighten arm screw.

**10.** 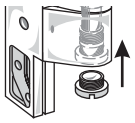
Replace hex cap.

*** If bottom arm is for a Uni-Chek 67/68 or 117 pivot, make sure the arm is sitting all the way down on the base. Make NO adjustments to the M19.**



**Side Jamb Pivot**
**Asylum Design**
**3/4" Offset – Handed**

RIXSON
ASSA ABLOY
www.rixson.com

| TEMPLATE NUMBER | DATE |
|---|---|
| IS-FA19 | 07-09 |