7803

Combi-Cam Series: 4-Dial Round Combination Cam Lock

SPECIFICATIONS

Keyless/Combination: 4-dial combination cam lock provides for up to 10,000 possible combinations.
Resettable: To change the combination, simply have it on the opening combination, depress the change pin, and change to the new combination.
Cam rotation: 90º stop cam placement allows cam to rotate (swing) to the right or left as you face the lock.
Body: Zinc, steel
Cylinder length: 5/8″
Barrel diameter: 3/4″
Finish: Chrome or Black
Packaged: 20 per box / 100 per case

INCLUDED ACCESSORIES

Pronged wood washer, fixing nut, 90º stop cam, cam screw and lock washer, and two cams (3/4″ straight cam, 1-1/2″ straight cam).

OPTIONAL ACCESSORIES

Finger pull: #7803-FP - For use as cabinet handle. Mounts between Combi-Cam and cabinet surface.

7803

Function: Cabinet door or drawer cam lock
Locking: 4-dial combination
Barrel lengths: 5/8″
Finish: Chrome or black




Chrome



Black



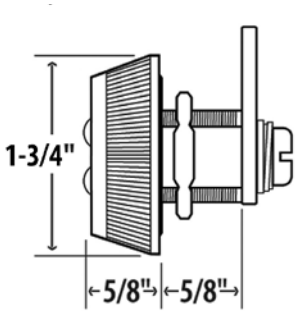

INCLUDED ACCESSORIES

Pronged wood washer, fixing nut, 90º stop cam (not shown), cam screw and lock washer, and two cams (3/4″ straight cam, 1-1/2″ straight cam).

7803 Combi-Cam 4-Dial

Item	Finish	Cyl. Length	Fits Max. Material Thickness
7803S 7803S-BLK	Chrome Black	5/8"	3/8"
Accessory Items (Sold Separately)			
7803-FP	Finger Pull		
7850-LC-1-19/64	1-19/64″ straight cam		
7850-LC-1-15/16	1-15/16″ straight cam		
7850-OC	1-1/2″ x 1/4″ offset cam		
7850-OC-1-3/8	1-3/8″ x 7/16″ offset cam		
7850-OC-60MM	2-1/3″ x 1/4″ offset cam		

WARNING: This product can expose you to chemicals including chromium, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

OLYMPUS® LOCK INC

7803

Combi-Cam Series: 4-Dial Round Combination Cam Lock


OPTIONAL ACCESSORIES




Finger Pull - Item #7803-FP

7803 — OPTIONAL CAMS


Width: 3/4"
Thickness: 1/8"

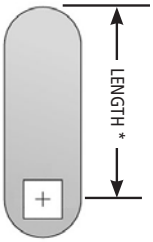

Straight Cams

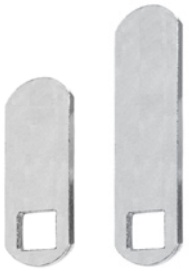

Offset Cams

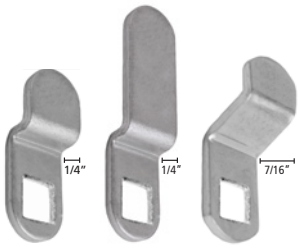

SKU: 7850-LC-1-19/64 7850-LC-1-15/16

7850-OC 7850-OC-60MM 7850-OC-1-3/8

* **LENGTH** = The distance from the center of the mounting hole to the top of the cam.

SKU	Length*
7850-LC-1-19/64	1-19/64"
7850-LC-1-15/16	1-15/16"


SKU	Length*	Offset
7850-OC	1-1/2"	1/4"
7850-OC-1-3/8	1-3/8"	7/16"
7850-OC-60MM	2-1/3"	1/4"

EASY COMBINATION RESET

***IMPORTANT!** See below precautions to not get locked out during combination reset:*

- Confirm all four dials are at code you intended prior to releasing change button. As you set later dials, you can accidentally shift prior dials so make sure you confirm the code prior to releasing the change button.
- While setting the lock, do not release the change pin. If you release pin and start turning a dial, combination would be that code at moment you briefly let go.

1. Set the combination to the number that opens the cabinet lock (factory default setting is **0-0-0-0**). The combination must be on the opening number prior to resetting.
2. If lock is installed, set/reset combination with the door/drawer in the open position.
3. On the underside outer edge of the lock there is a hole for the code reset button. Rotate the face of the cam until the code reset button comes into view. Push this pin in with a paper clip and keep it pushed in until you are done setting the new combination.
4. Set your personal combination by turning the dials to the desired combination—starting with dial marked '1', and moving to '2', '3', and then '4'.
5. Release the reset button and your combination is now set. Change your combination any time and as often as you want.
6. To lock, rotate to "locked" position. Rotate one or more dials after lock is closed. To open lock, turn dials to your personal combination.

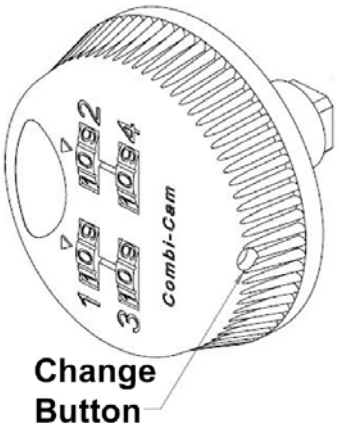

NOTES: If your Combi-Cam does not open on the default code it has been changed and you do not know the current code, you are locked out. There is no way to retrieve your code.

© 2025 Olympus Lock, Inc.

OLYMPUS® LOCK INC