
ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience.
Rixson® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright© 2006, 2009, Yale Security Inc., an ASSA ABLOY Group company.
All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

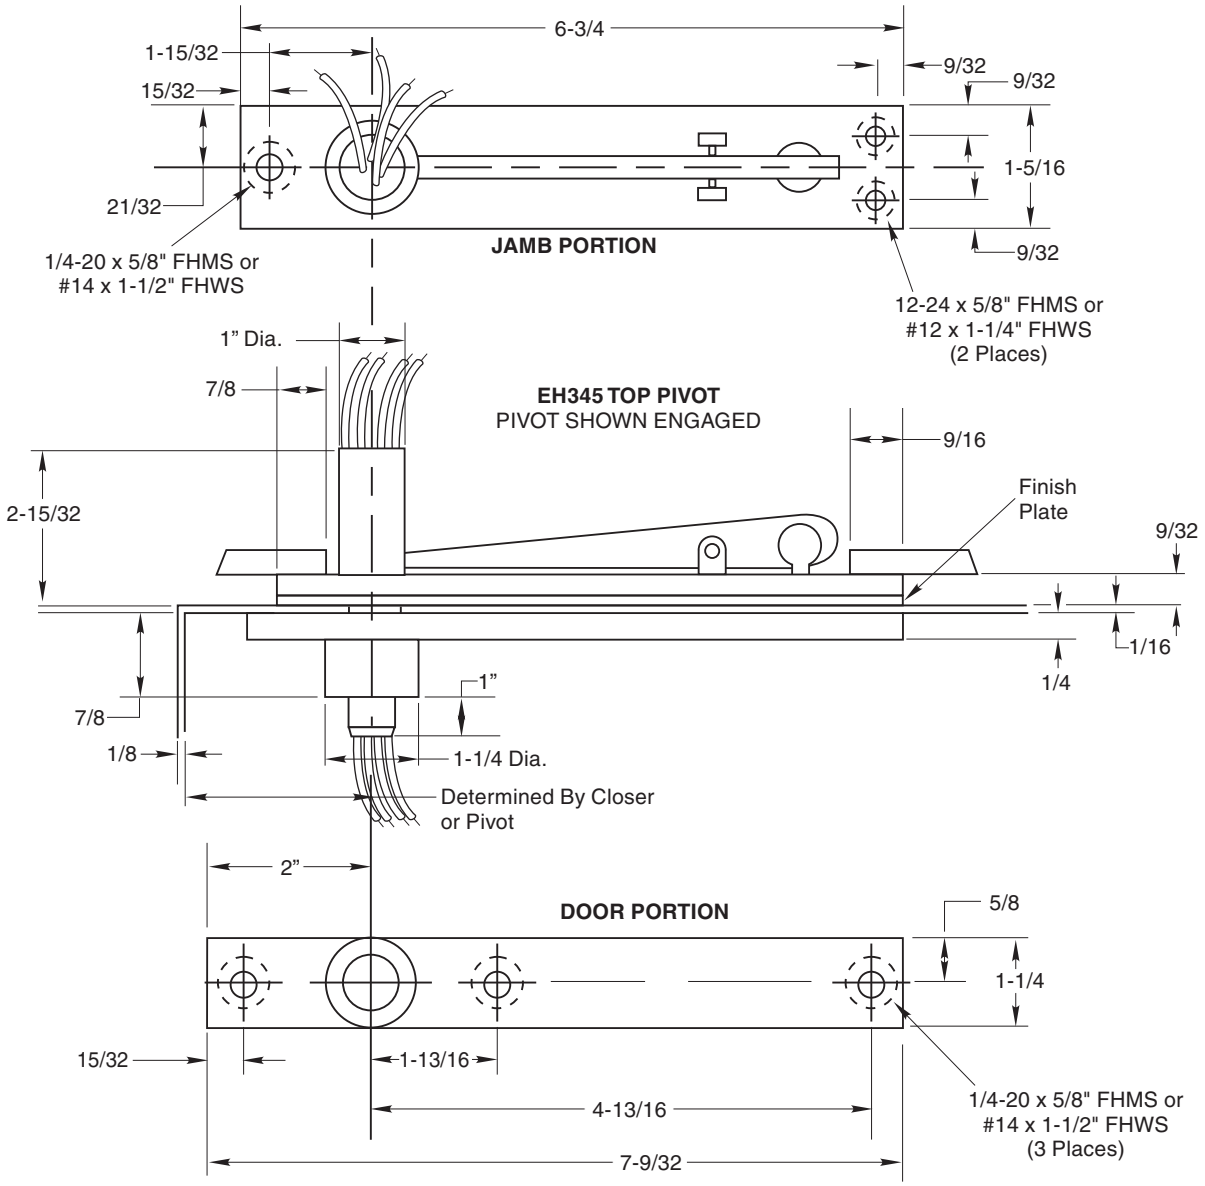

Installation Instructions:

1. Prepare door and frame per details shown.
2. To insure proper operation of door, the centerline of the top pivot pin must be straight and plumb with bottom spindle.
3. Connect wires in door frame and install jamb portion with pin retracted.
4. Place door on bottom pivot and raise door so that its top is within two feet of the top jamb.
5. Push wires through door portion bearing hole and connect wires in door.
6. Install door portion.
7. Raise door to vertical position while carefully pushing wires down inside door.
8. Engage top pivot pin by turning adjusting screw clockwise when door portion is in alignment with the jamb portion.
9. Test the electrical installation for proper operation of the wired door devices.

Notes:

1. Do not scale drawing.
2. All dimensions are in inches.
   Conversion to metric = inch x 25.4.
3. Electrical Ratings: Four wires #22 AWG circuits, rated 2 amps continuous. Low voltage only.

Top Pivot
EH345
Center Hung

RIXSON
ASSA ABLOY
www.rixson.com

TEMPLATE NUMBER	DATE
IS-EH345	07-09