
28466

4040XP/4041DA

Drop Plate

Installation Instructions

4040XP & 4041DA PUSH SIDE (TOP JAMB) DROP PLATE PERMITS 120° MAXIMUM OPENING

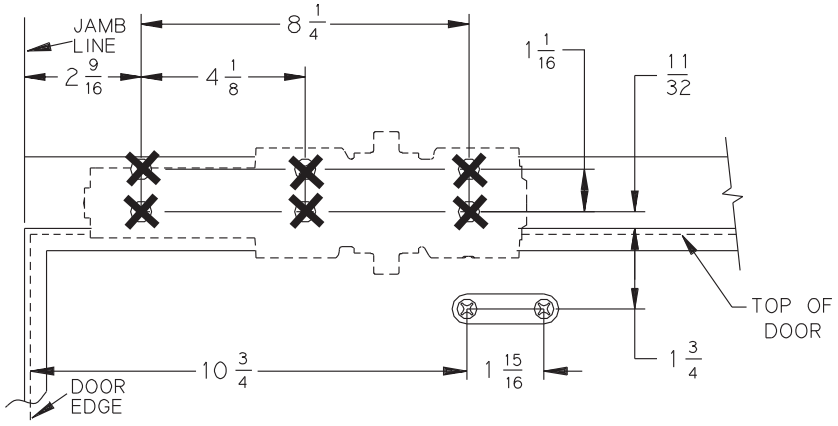


LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.


MAXIMUM REVEAL OF 2 9/16.
FOR REVEALS 2 5/8 - 4 13/16 SPECIFY LONG ROD.
FOR REVEALS 8" SPECIFY EXTRA LONG ROD.

Locate drop plate & shoe from centerline of pivot or swing clear hinge pin when used.

PUSH SIDE MOUNT ON: 4040XP-18TJ DROP PLATE

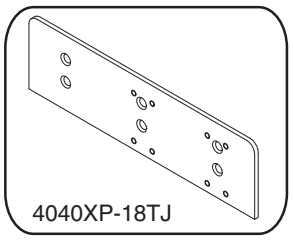


4040XP & 4041DA PUSH SIDE (TOP JAMB) DROP PLATE PERMITS 120° MAXIMUM OPENING FOR FLUSH CEILING

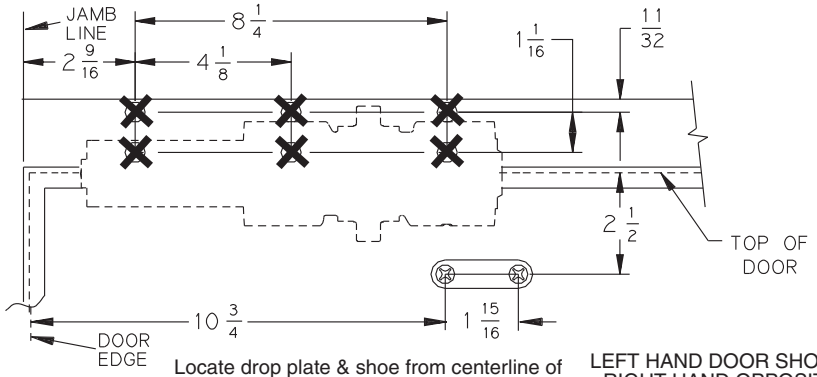

Locate drop plate & shoe from centerline of pivot or swing clear hinge pin when used.


LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

FLUSH CEILING PUSH SIDE MOUNT ON: 4040XP-18G DROP PLATE

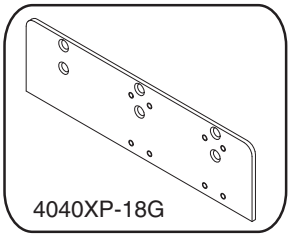

MAXIMUM REVEAL OF 2 9/16.
FOR REVEALS 2 5/8 - 4 13/16 SPECIFY LONG ROD.
FOR REVEALS 8" SPECIFY EXTRA LONG ROD.

4040XP & 4041DA PULL SIDE (DOOR JAMB) DROP PLATE PERMITS 120° MAXIMUM OPENING

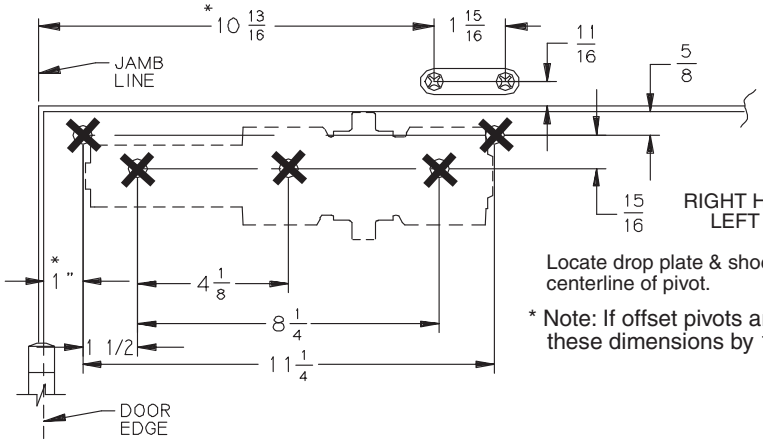


RIGHT HAND DOOR SHOWN, LEFT HAND OPPOSITE.

Locate drop plate & shoe from centerline of pivot.

* Note: If offset pivots are used. Increase these dimensions by 1/8".

PULL SIDE MOUNT ON: 4040XP-18 DROP PLATE

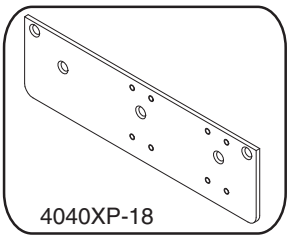


INCH	11/32	5/8	11/16	15/16	1	1 1/16	1 1/2	1 3/4
M.M.	9	16	17	24	25	27	38	44

INCH	1 15/16	2 1/2	2 9/16	4 1/8	8 1/4	10 3/4	10 13/16	11 1/4
M.M.	49	64	65	105	210	273	275	286

4040XP PA PUSH SIDE (DOOR MOUNT) DROP PLATE PERMITS 180° MAX. OPENING, BUTT SIZE 5x5 MAX.

PUSH SIDE MOUNT ON: 4040XP-18PA DROP PLATE

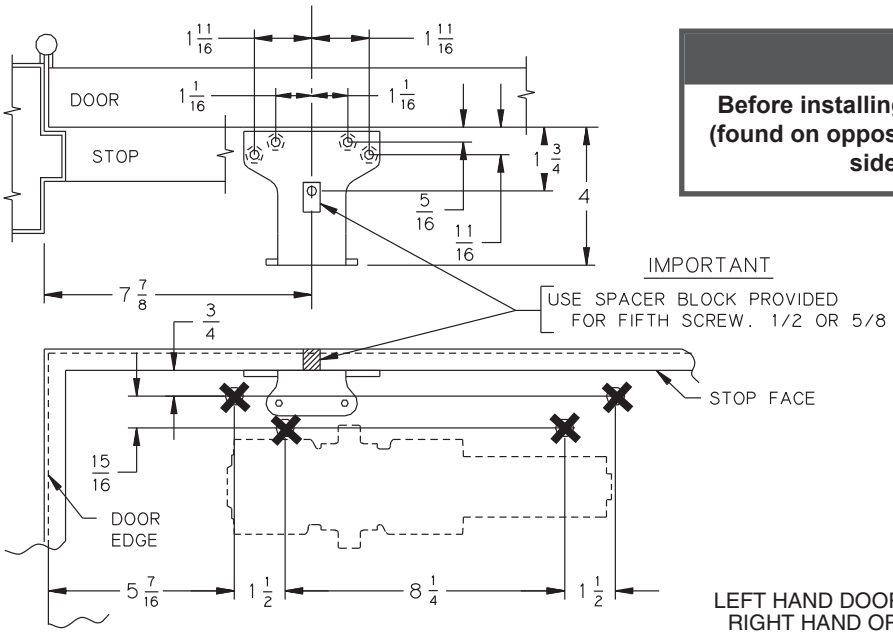

IMPORTANT


Before installing closer, turn backcheck selector valve (found on opposite side of closer from regulating screw side) all the way in (clockwise).

Locate drop plate & shoe from centerline of pivot or swing clear hinge pin when used.

LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

4041PA DELAY PUSH SIDE (DOOR MOUNT) DROP PLATE

PUSH SIDE MOUNT ON: 4040XP-18PA DROP PLATE

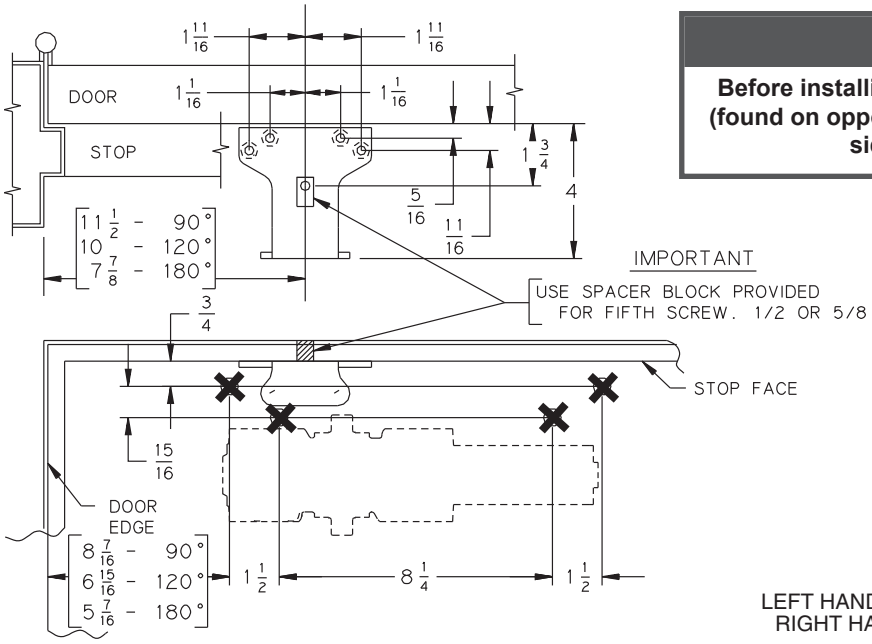


IMPORTANT

Before installing closer, turn backcheck selector valve (found on opposite side of closer from regulating screw side) all the way in (clockwise).

Locate drop plate & shoe from centerline of pivot or swing clear hinge pin when used.

LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

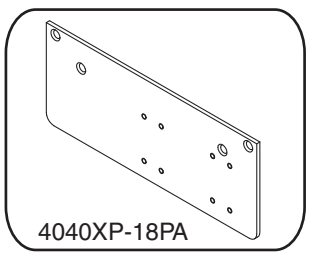


4040XP-18PA

INCH	5/16	11/16	3/4	15/16	1 1/16	1 1/2	1 11/16	1 3/4
M.M.	8	17	19	24	27	38	43	44

INCH	4	5 7/16	6 15/16	7 7/8	8 1/4	8 7/16	10	11 1/2
M.M.	102	138	176	200	210	214	254	292

4040XP CUSH PUSH SIDE (DOOR MOUNT) DROP PLATE PERMITS 110° MAX. OPENING, MIN. TOP RAIL 2 1/2".

PUSH SIDE MOUNT ON: 4040XP-18PA DROP PLATE

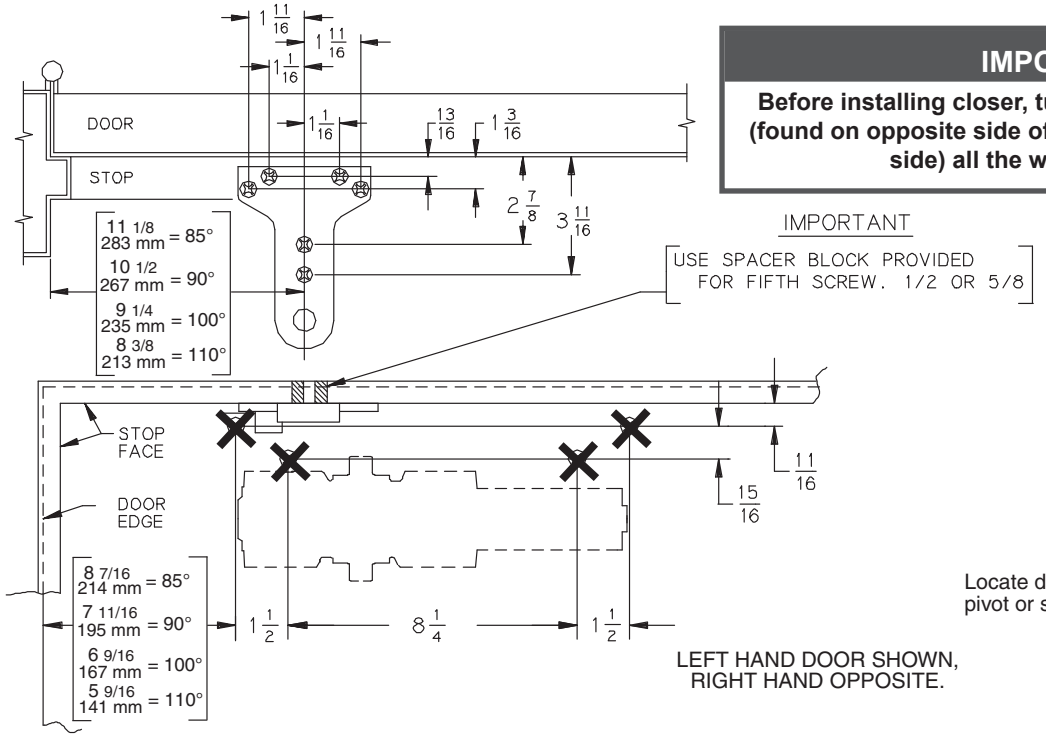

IMPORTANT


Before installing closer, turn backcheck selector valve (found on opposite side of closer from regulating screw side) all the way in (clockwise).

Locate drop plate & shoe from centerline of pivot or swing clear hinge pin when used.

LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

4040XP EDA PUSH SIDE (DOOR MOUNT) DROP PLATE PERMITS 180° MAX. OPENING, MIN. TOP RAIL 2 1/2".

PUSH SIDE MOUNT ON: 4040XP-18PA DROP PLATE

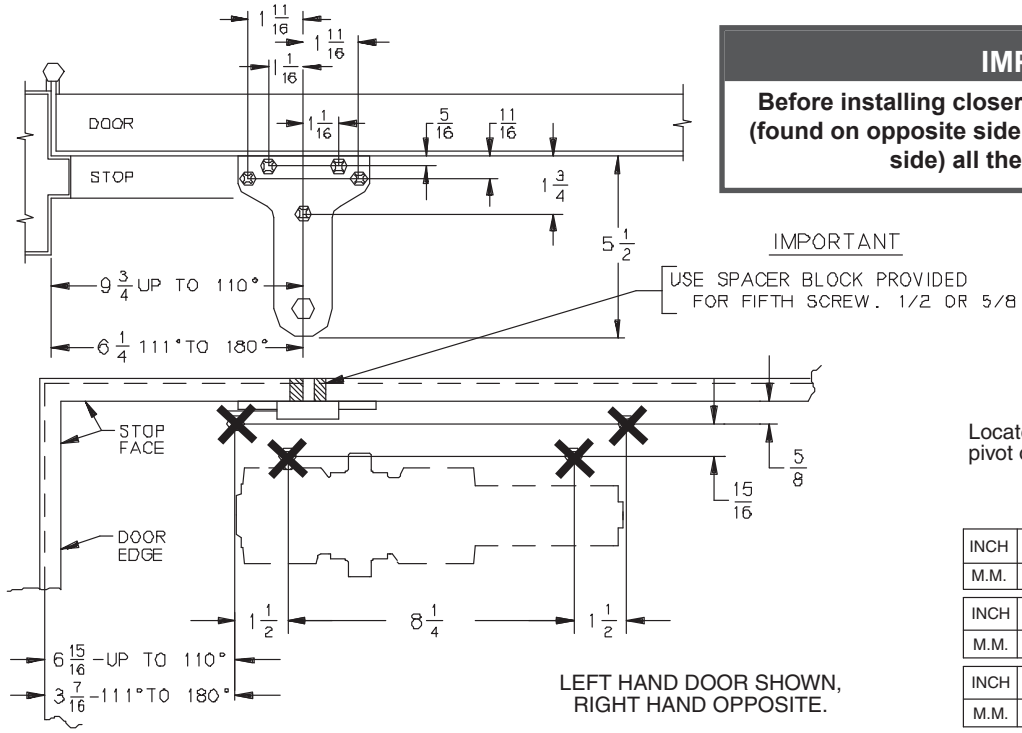

IMPORTANT

Before installing closer, turn backcheck selector valve (found on opposite side of closer from regulating screw side) all the way in (clockwise).


Locate drop plate & shoe from centerline of pivot or swing clear hinge pin when used.

LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

INCH	5/16	1/2	5/8	11/16	13/16	15/16	1 1/16	1 3/16	1 1/2
M.M.	8	13	16	17	21	24	27	30	38


INCH	1 11/16	1 3/4	2 7/8	3 7/16	3 11/16	5 1/2	5 7/8	6 1/4	6 11/16
M.M.	43	44	73	87	94	140	149	159	170

INCH	6 15/16	8 1/16	8 1/4	8 9/16	8 5/8	9 1/2	9 3/4	10 13/16	11 1/4
M.M.	176	205	210	217	219	241	248	275	286

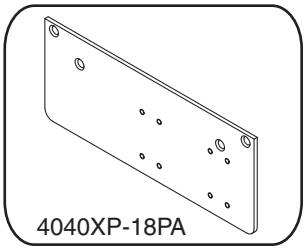

4040XP-18PA

4040XPT PULL SIDE (DOOR MOUNT) DROP PLATE
PERMITS 120° MAXIMUM OPENING, MIN. TOP RAIL 1 13/16"

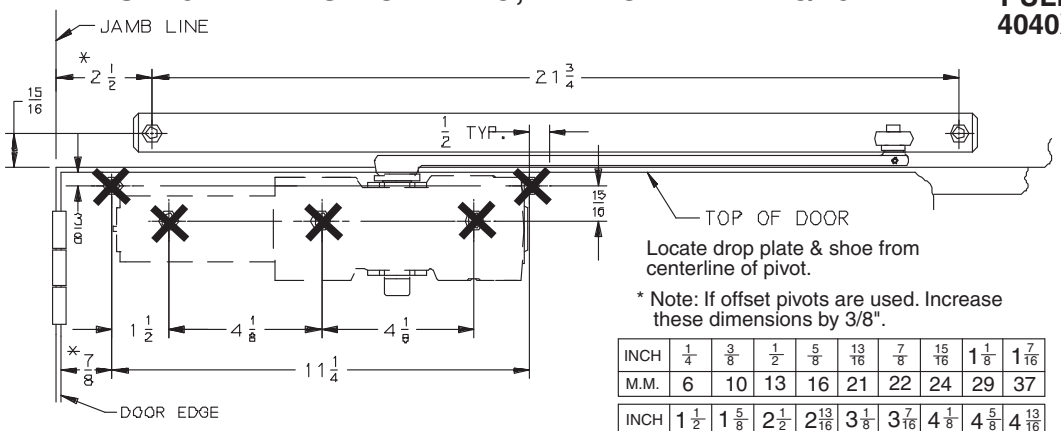

Locate drop plate & shoe from centerline of pivot.

* Note: If offset pivots are used. Increase these dimensions by 3/8".


INCH	1/4	3/8	1/2	5/8	13/16	7/8	15/16	1 1/8	1 7/16
M.M.	6	10	13	16	21	22	24	29	37

INCH	1 1/2	1 5/8	2 1/2	2 13/16	3 1/8	3 7/16	4 1/8	4 5/8	4 13/16
M.M.	38	41	64	71	79	87	105	117	122


INCH	5 3/8	5 5/8	9 3/4	11 1/4	21 3/4
M.M.	137	143	248	286	553

RIGHT HAND DOOR SHOWN, LEFT HAND OPPOSITE.

PULL SIDE MOUNT ON: 4040XPT-18 DROP PLATE

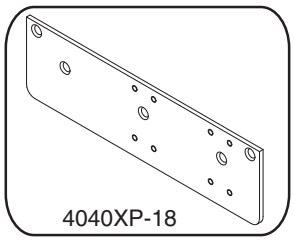


4040XPT PULL SIDE (TOP JAMB) DROP PLATE
PERMITS 180° MAXIMUM OPENING, MIN. FACE OF FRAME 1 3/4"

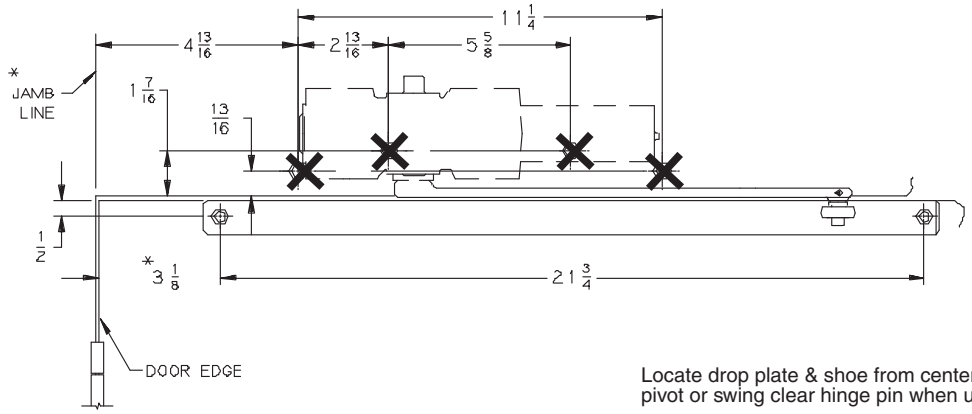


Locate drop plate & shoe from centerline of pivot or swing clear hinge pin when used.

RIGHT HAND DOOR SHOWN, LEFT HAND OPPOSITE.

PUSH SIDE MOUNT ON: 4040XPT-18TJ DROP PLATE

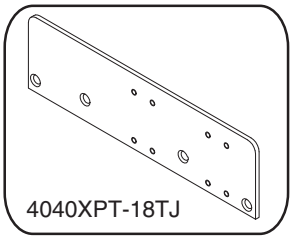


4040XPT PUSH SIDE (DOOR MOUNT) DROP PLATE
PERMITS 120° MAXIMUM OPENING, MIN. TOP RAIL 2 1/4"

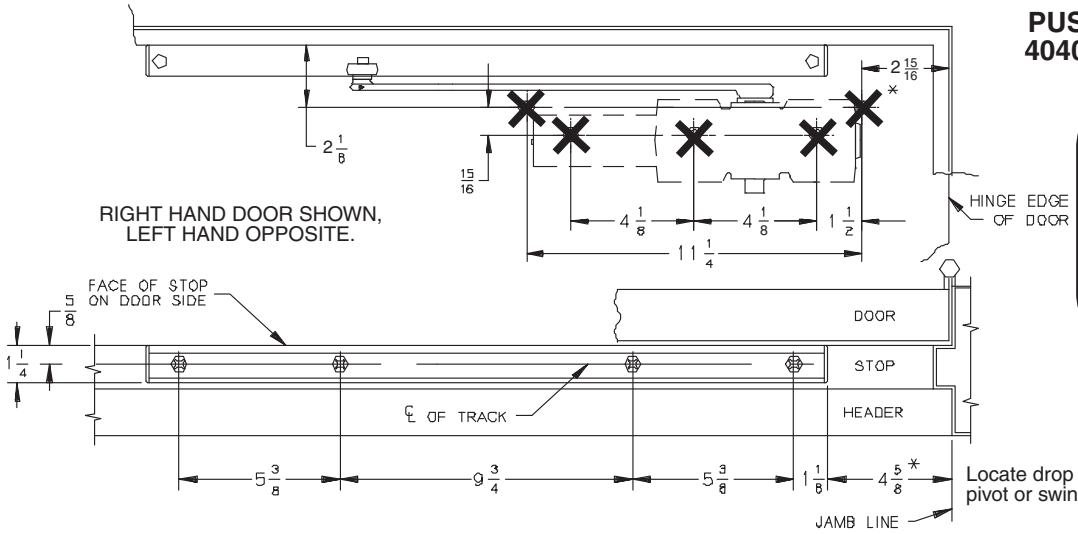

RIGHT HAND DOOR SHOWN, LEFT HAND OPPOSITE.


Locate drop plate & shoe from centerline of pivot or swing clear hinge pin when used.

PUSH SIDE MOUNT ON: 4040XPT-18 DROP PLATE

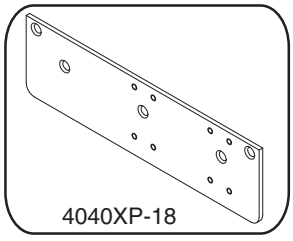


ALLEGION

© Allegion 2017
Printed in U.S.A.
28466 Rev. 09/17-k

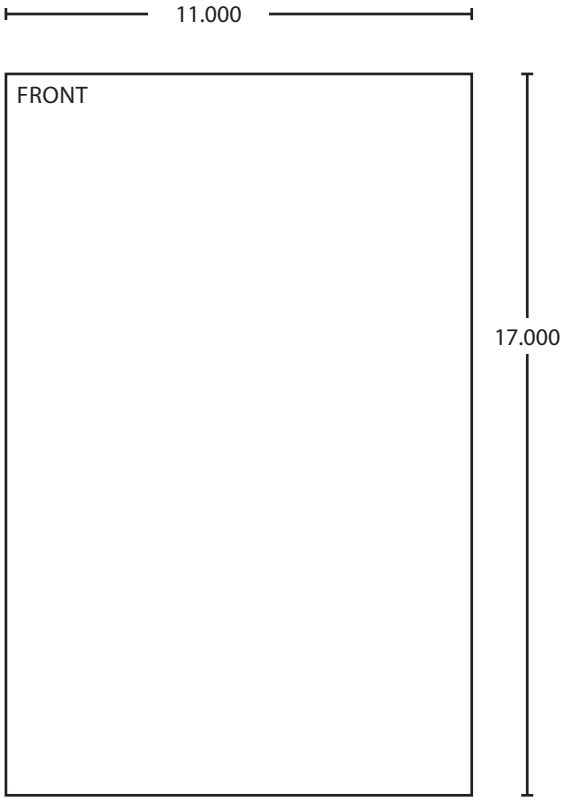

BEGINNING SHEET

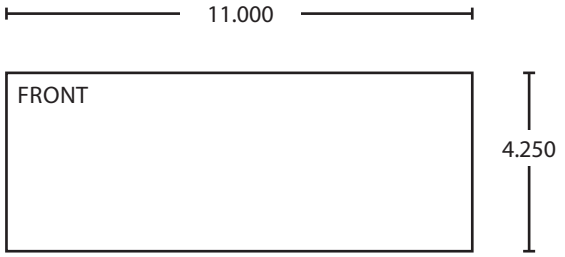

FOLDED SHEET

Additional Notes:
1. None

Revision History					
J	K	L	M	N	P
042801	073413				

Revision Description:
J > Revised artwork.

Material
White Paper

Edited By	Approved By	EC Number	Release Date
D. Toppins	B. Grover	073413	09-01-17

Notes
1. printed two sides
2. printed black
3. tolerance ± .13
4. printed in country may vary
5. drawings not to scale

Title
4040XP/4041DA Drop Plates Instruction Sheet

Creation Date	Number	Revision
04-27-10	28466	K

Created By
N/A

Software: InDesign CS6

Activity
3899 Hancock Expwy
Security, CO 80911

© Allegion 2017