Elemental Wooden Base Organizer

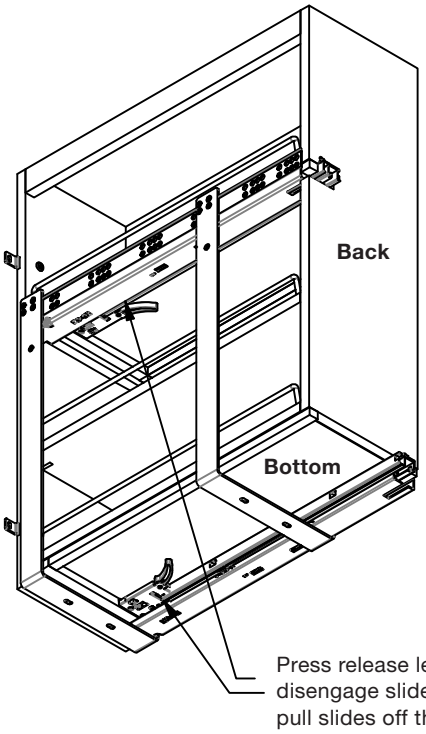

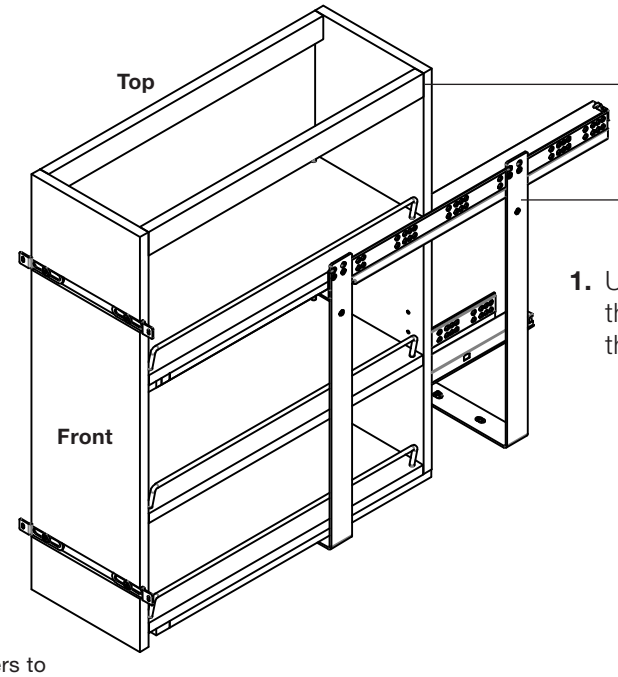

1. Unbox the unit and detach the wooden carcass from the slide carriage.

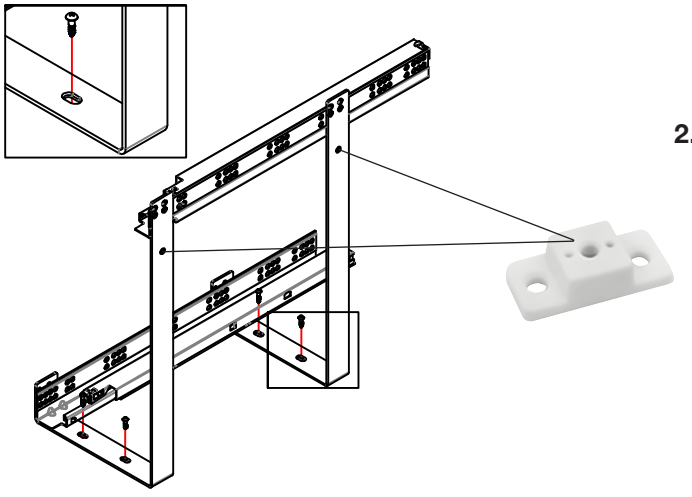

2. Mount slide carriage in cabinet opening using included #8 pan head screws.

a) Provided spacers or, as required, blocking should be used to attach the upper portion of the carriage to the side of the cabinet for stability.

Front of slide carraige sits 7/8” behind front of carcass.

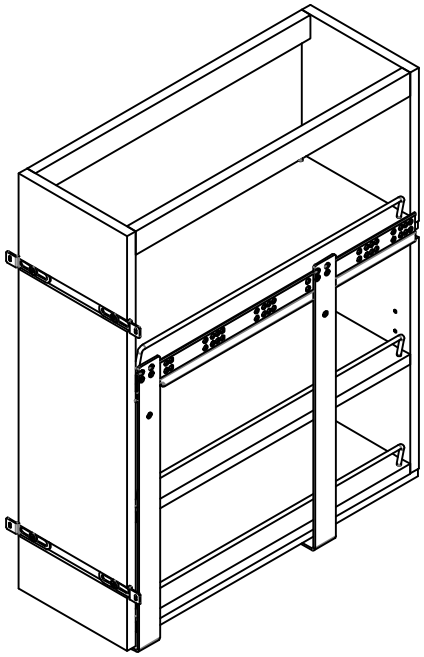

3. Re-install carcass to the slide carriage.

4. Position door brackets in your preferred location and then mount securely to the door using provided #6 screws or other appropriate fasteners. Adjust door using drawer slide release levers (up-down) and bracket slots (left-right).

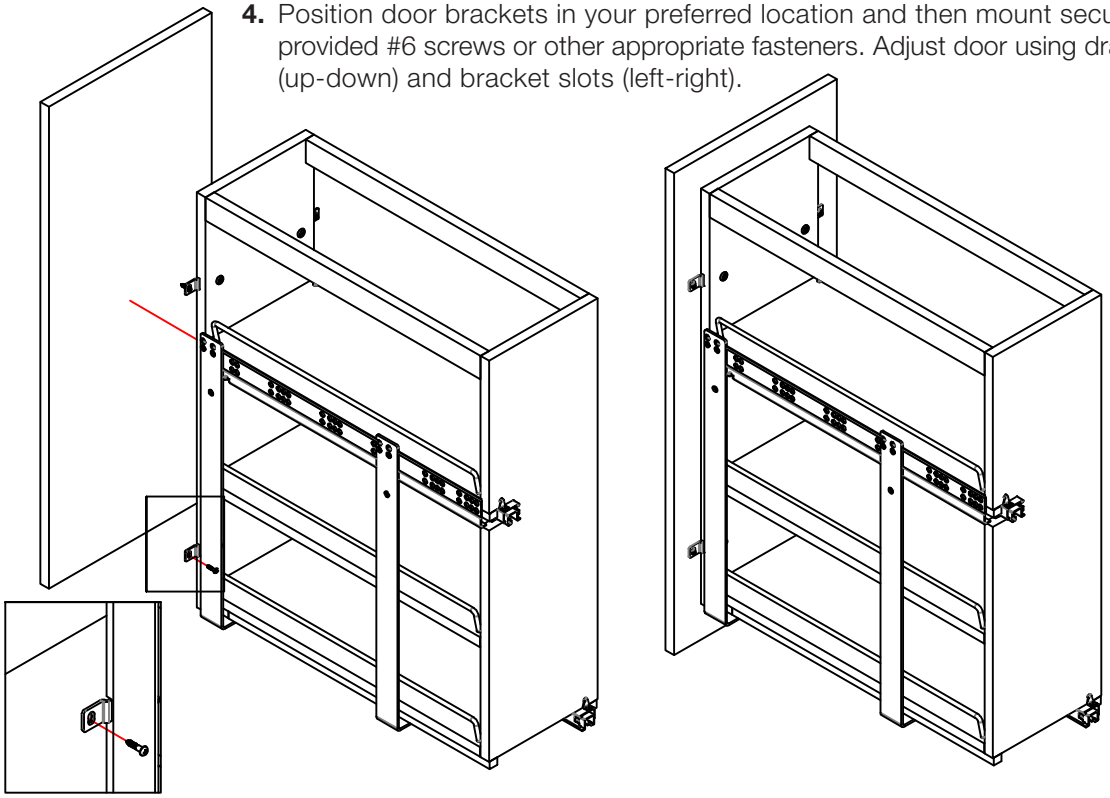

HÄFELE
3901 Cheyenne Drive | P.O. Box 4000 | Archdale, NC 27263
1-800-423-3531 | **www.hafele.com**