GLASS STANDOFF WITH 2 POINT MOUNTING

Code No.: 706SP0212205XXX

* Available in several finishes

FRONT VIEW:

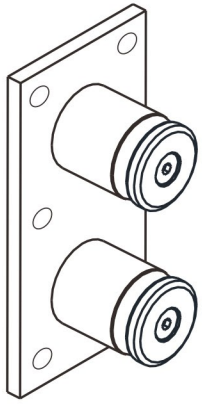

SIDE VIEW:

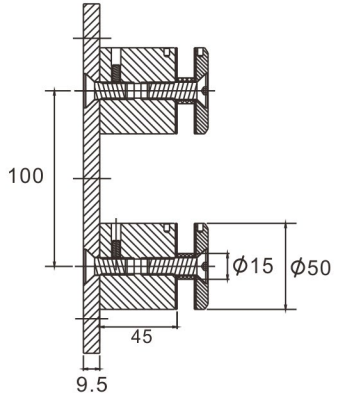

Wall installation:

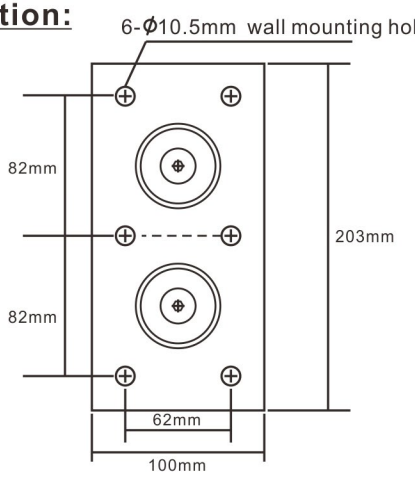

Glass template:

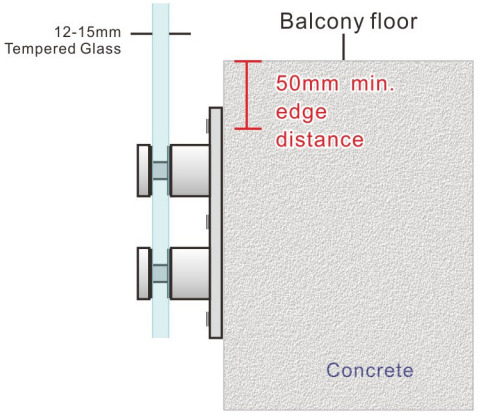

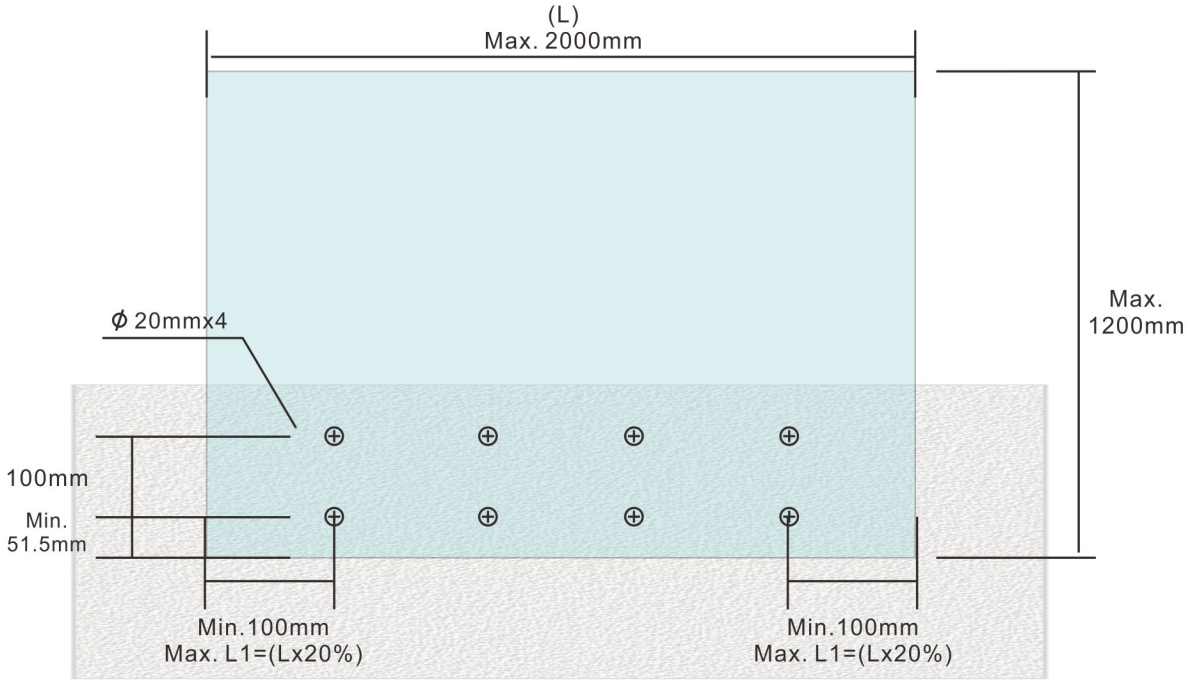

* For 2-4 standoffs depending on weight, see instructions for details

Richelieu
PRODUITS VERRIERS
GLAZING SUPPLIES

GLASS STANDOFF WITH 2 POINT MOUNTING

Code No.: 706SP0212205XXX

* Available in several finishes

Installation steps:

Tools

Tools required for the installation.

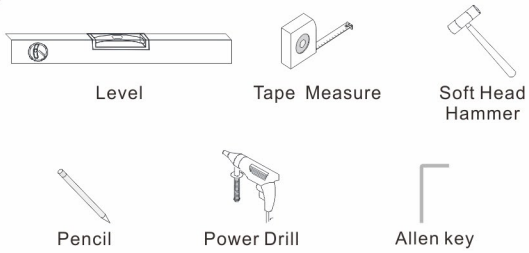

①

Determine the number of standoff brackets necessary using the table below.

Weight	Quantity
0-45kgs	2
45-68kgs	3
68-90kgs	4

* Actual weight capacity depends on mounting hardware and substrate material

②

Using a level, mark a guide line across your wall where you intend to install your spigots.

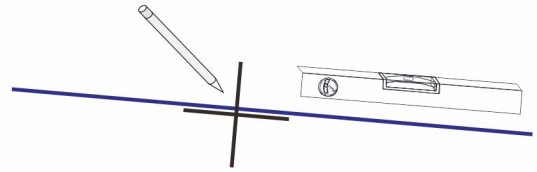

③

1.Mark the top holes for each standoff along the guideline and mark the remaining holes according to the template.

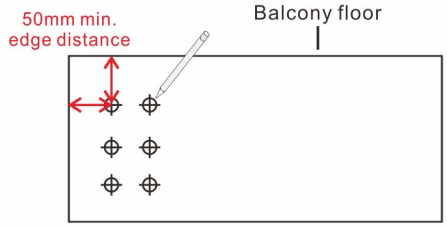

④

Drill six holes, 12mm in diameter and 95-100mm in depth. Insert an anchor bolt into each hole.

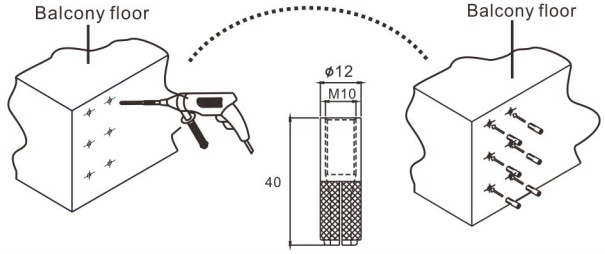

⑤

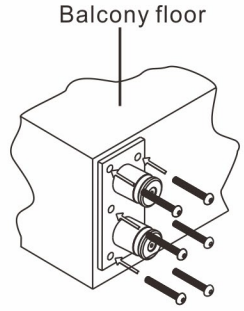

Place the standoff on the wall and install the mounting screws.

⑥

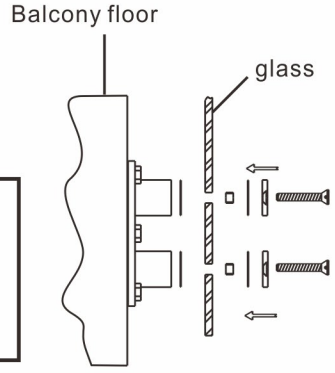

Remove the standoff caps and install the glass as shown with a gasket on either side of the glass. Do not fully tighten the assembly screws.

⑦

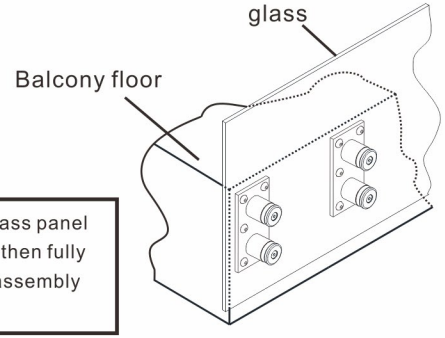

Adjust the glass panel if necessary then fully tighten the assembly screws.

These instructions are for installation on concrete.