

BE365 Door Preparation Instructions For Door With No Holes


Tools Needed




Tape Measure




Pencil

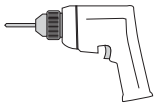

Drill Bits Needed:
⅛", 7⁄8", 1"

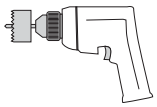


2⅛" Hole Saw




Chisel

1 Measure Door Width


If the door is thinner than 1⅜" or thicker than 1¾", then the lock will not fit properly on the door.

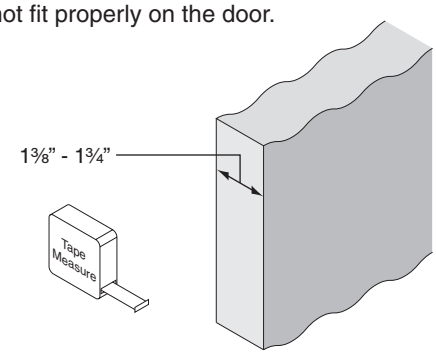


2 Mark Lock Centerline on Door Face and Door Edge

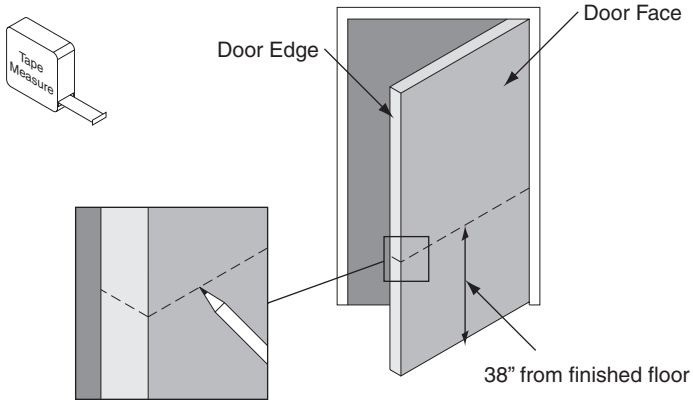

3 Mark and Drill Hole in Door Face with 2⅛" Hole Saw

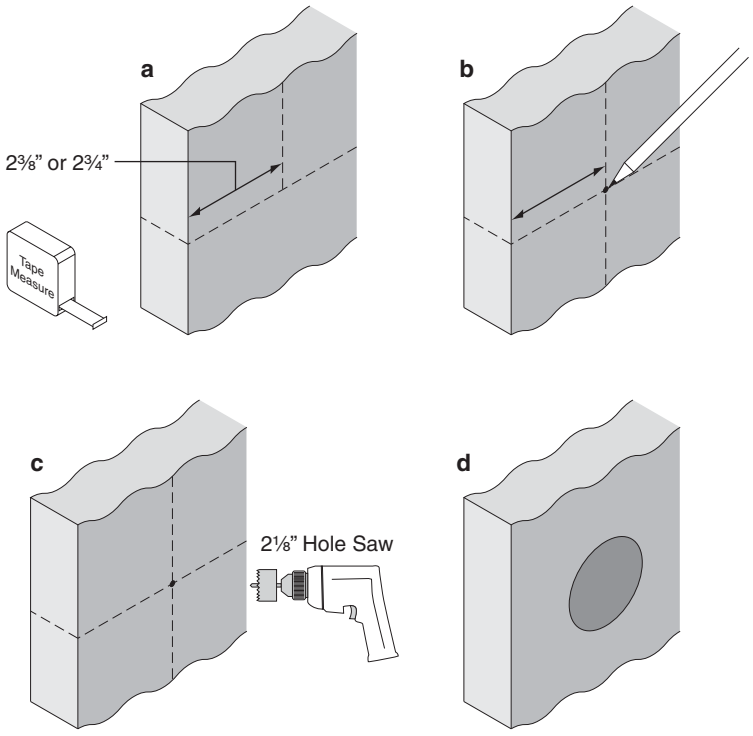


4 Mark and Drill Hole in Door Edge

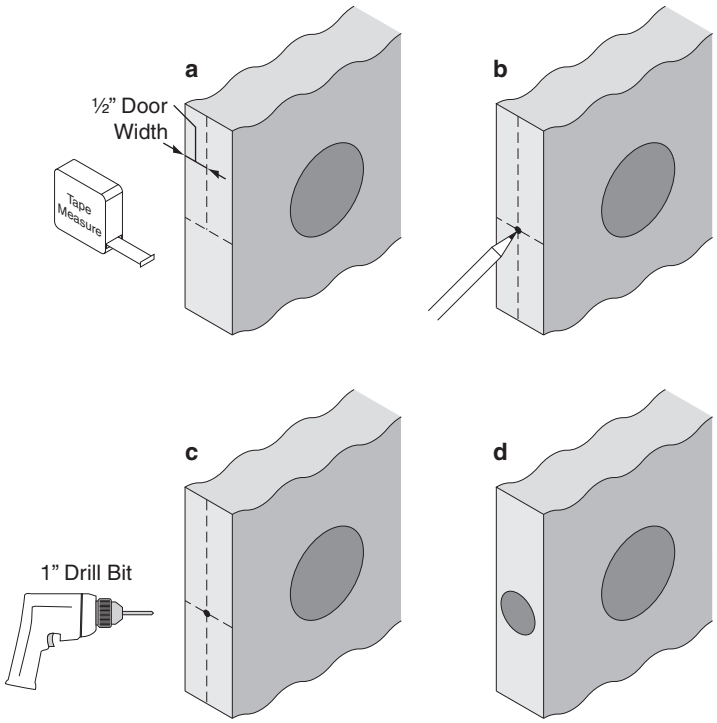


5 If Necessary, Mortise for Latch

a. Insert latch into door edge hole.
b. Use pencil to trace latch and mark holes.
c. Remove latch and drill two ⅛" pilot holes.
d. Use chisel to create latch mortise.

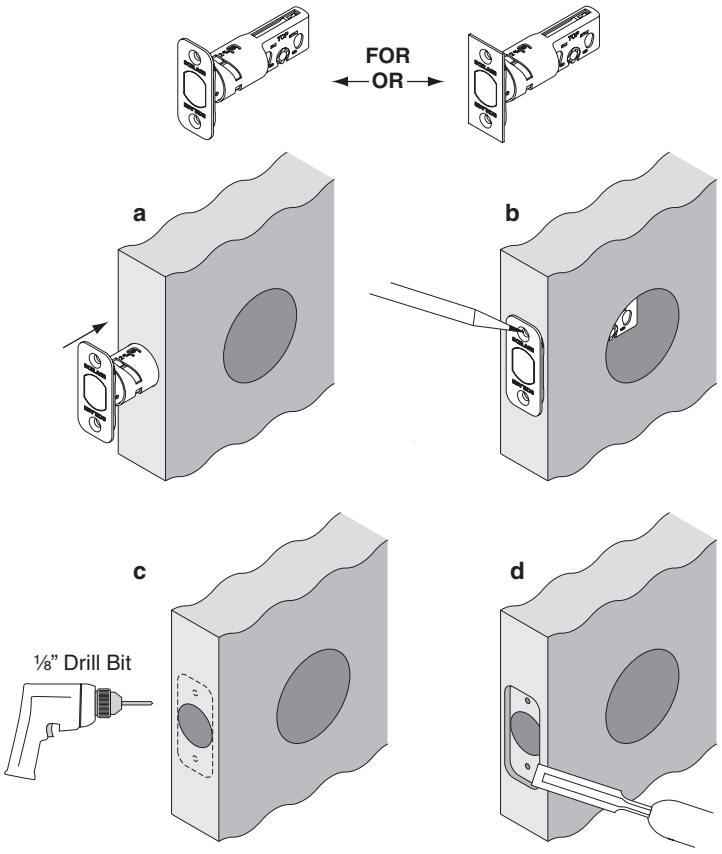


6 Measure and Mark Door Jamb for Strike

a. Measure 38" from finished floor and mark on door jamb.
b. Mark center for strike hole exactly opposite latch hole.

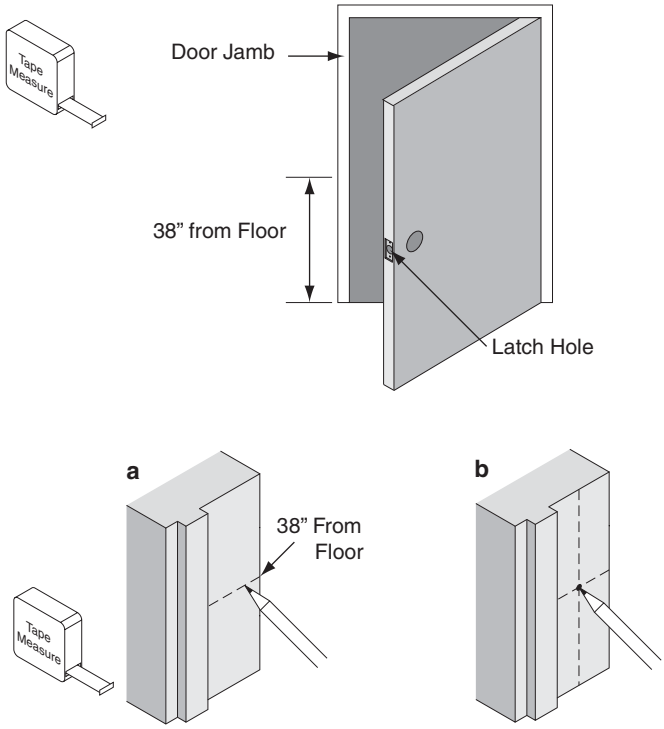

7 Mark and Drill Holes for Strike

a. Drill two (2) 1" holes, 1¼" deep, as shown. Chisel out excess material.
b. Line up strike box and strike with hole in door jamb.
c. Use pencil to trace strike and mark holes.
d. Drill five (5) ⅛" pilot holes and use chisel to create strike mortise.

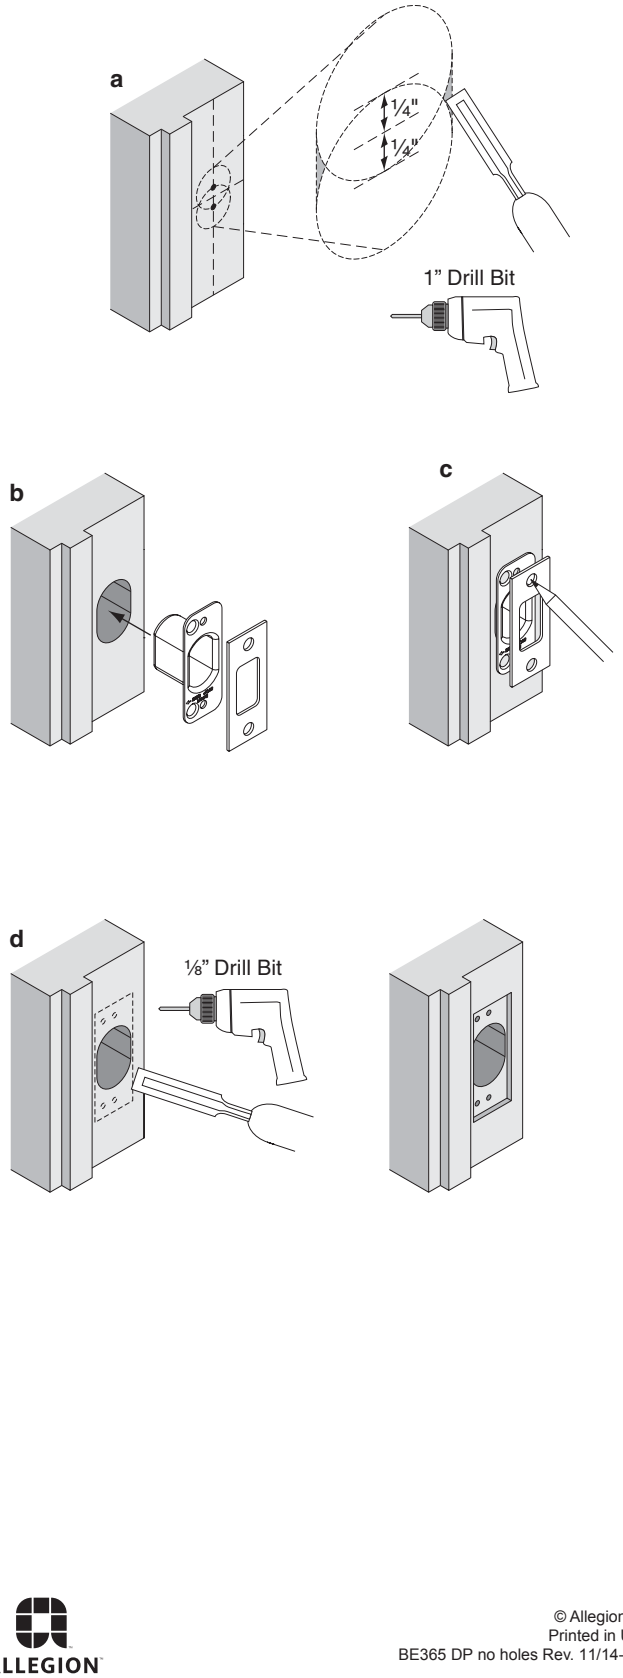

ALLEGION

© Allegion 2014
Printed in U.S.A.
BE365 DP no holes Rev. 11/14-online