DEVICE APPLICATION SCHEDULE		
INSTALLATION	MIN. STILE	BACKSET
TWO VERT. ROD DEVICES	3 11/16"	2 3/16" *
VERT. ROD & MORTISE DEVICE	SEE TEMP. W10305	2 3/4"
SINGLE DOOR	3 11/16"	2 3/16"

NOTES:

1. *BACKSET MAY VARY WHEN USED WITH COORDINATOR DEPENDING ON TYPE USED. USE 2 3/4" BACKSET FOR WOOD FIRE DOORS.
2. REMOVE GLASS STOP OR BEAD IN AREA OF DEVICE IF REQUIRED UNLESS GBK IS USED.
3. MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.
4. FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED, SEE ADDITIONAL TRIM TEMPLATE.

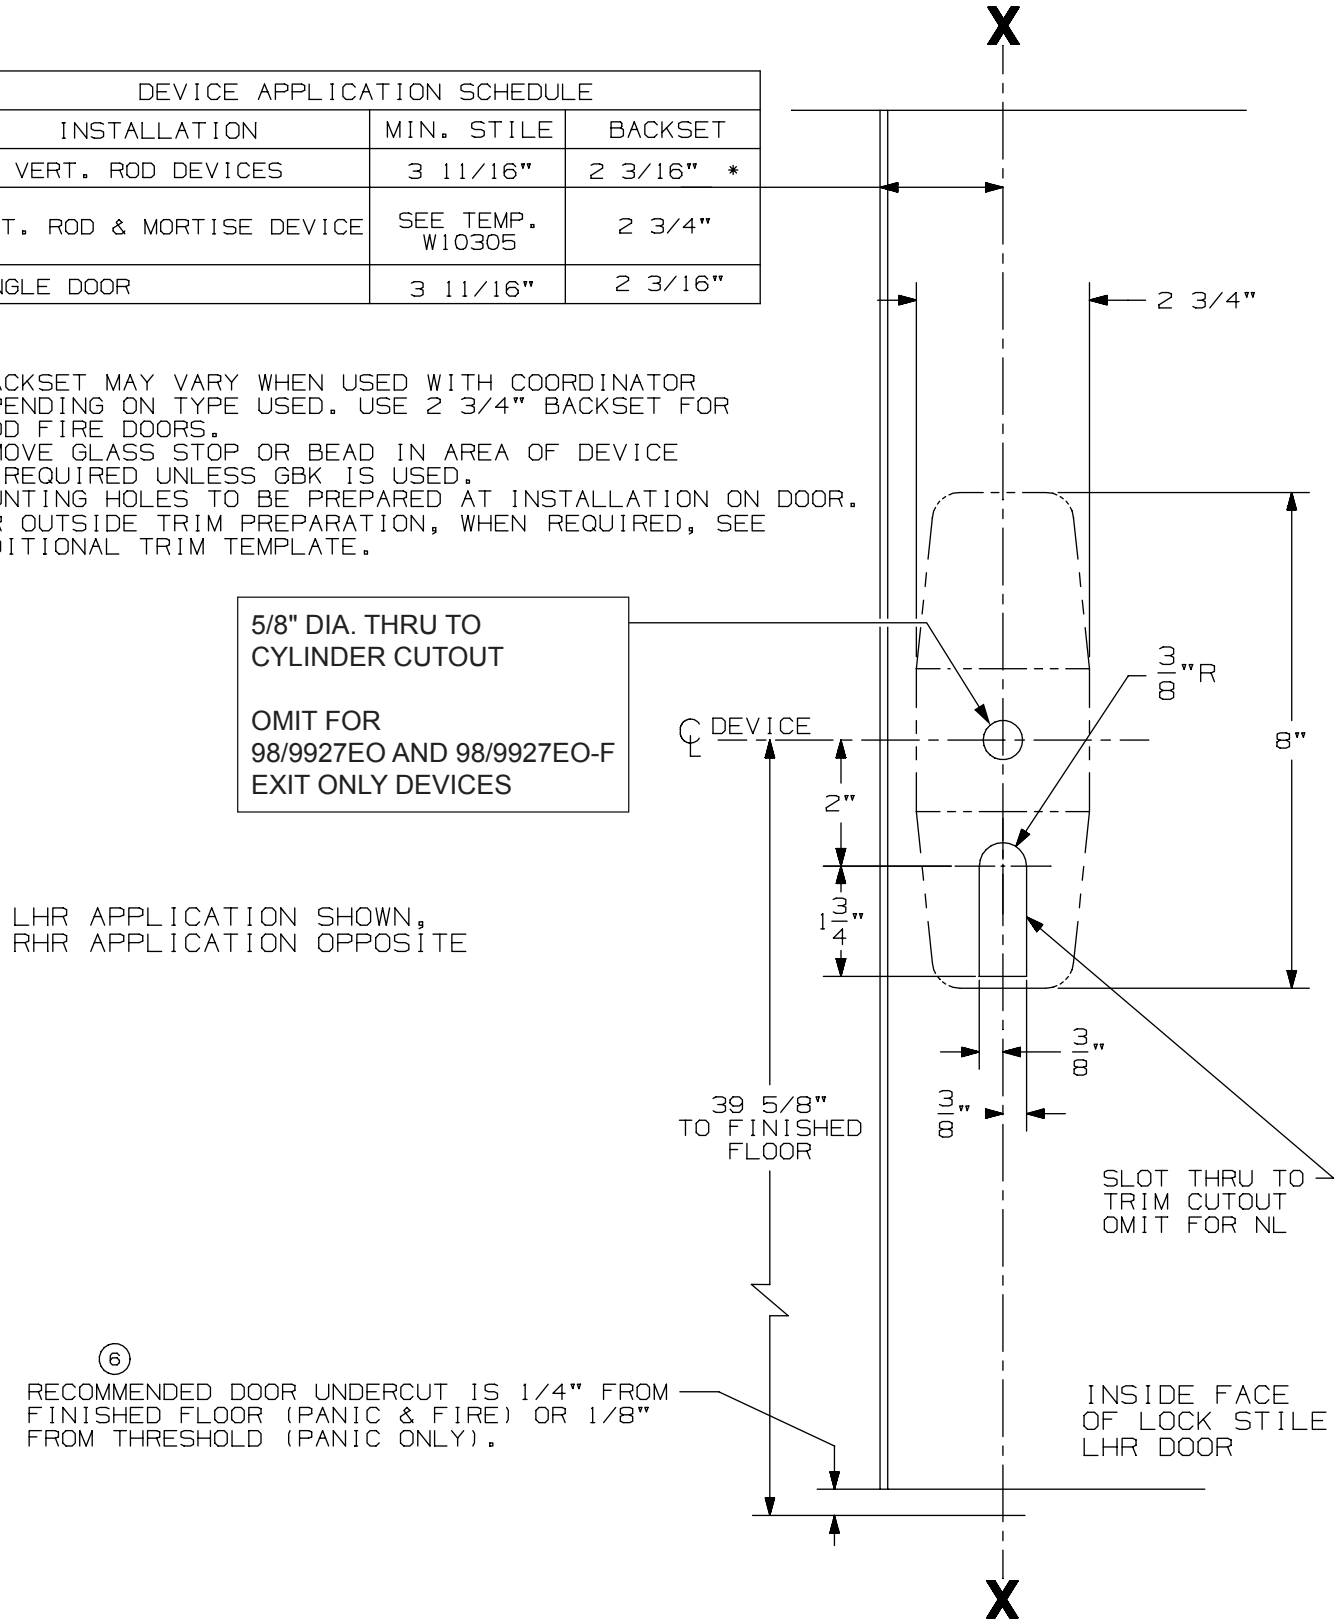

9827/9927 & 9827-F/9927-F NL, TP, K, & L Series Vertical Rod Device (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER: W10304_b

DATE: 10-2-14