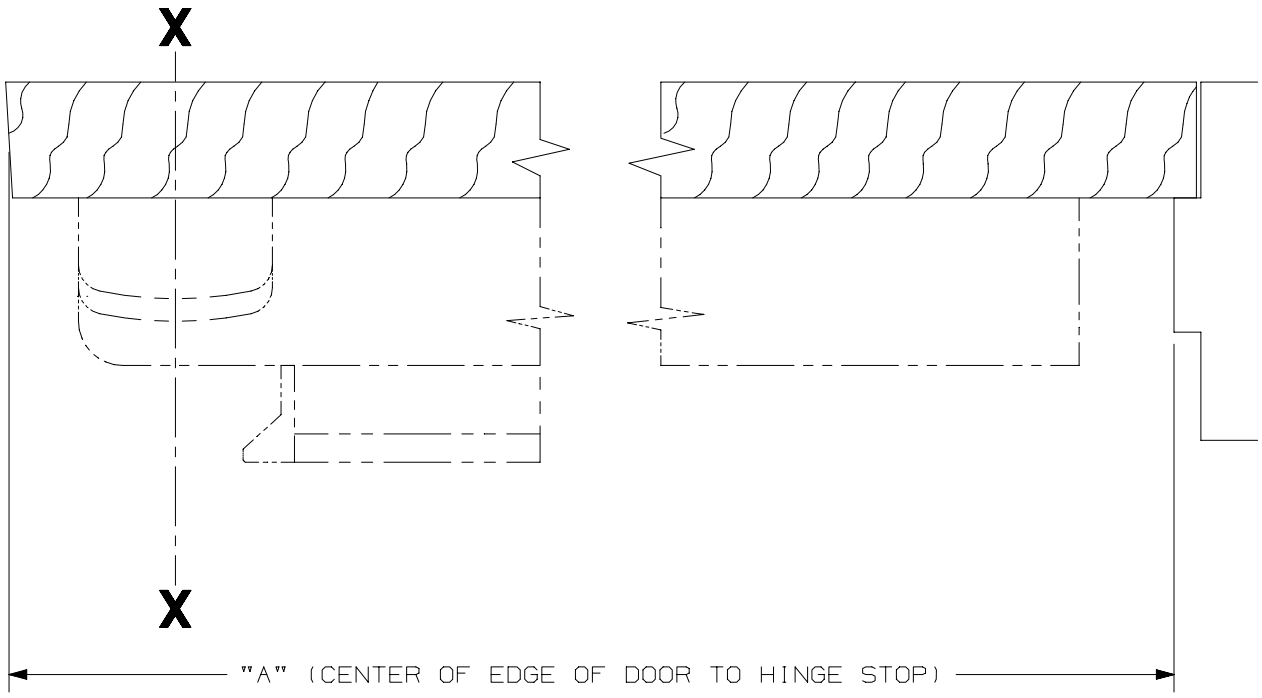

"C" DIMENSION FORMULA	
	"A" (CENTER OF EDGE OF DOOR TO HINGE STOP)
-	SUBTRACT 33 1/4" FOR DOOR FROM 2'6" THRU 3'0" SUBTRACT 45 1/4" FOR DOOR FROM 3'0" THRU 4'0"
=	"C" DIM. (ENTER CALCULATED DIMENSION BUT NOT LESS THAN 1 13/32")

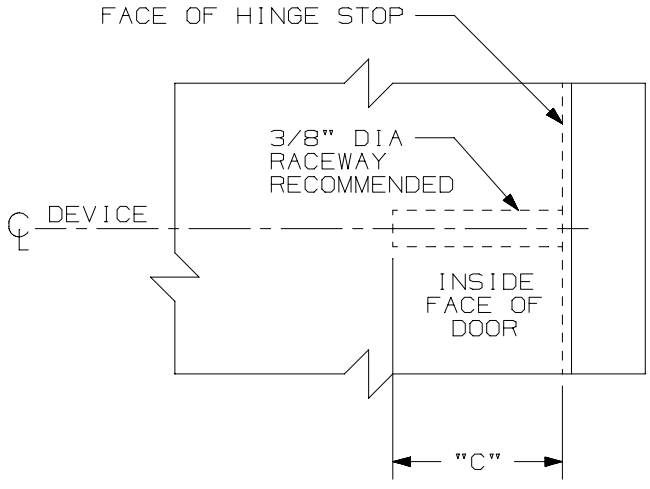

LHR SHOWN
RHR OPPOSITE

NOTE: MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.

EL, SS, CX9875/9975 Series Device Hinge Stile Preparation (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE NUMBER: W40087_a

DATE: 05-29-13